



## FLOATING COLOUR CHANGE SWITCH 19424



### CONTENTS

This product is supplied bagged and contains:

- 1 x Floating Colour Change Switch
- 1 x Battery charger

**Please note:** this product requires, but does not include, a Wi Fi or everysense® product with provision for its colours to change – see Specification below for a list of compatible products

### BEFORE USE

1. Charge the battery – see Care & Maintenance below.
2. Make sure the rubber cap covering the charging connector is properly closed.



### USE

1. Turn ON the main switch.
2. This switch is wireless – it works from a distance and does not require direct connection to the switch-activated product. Make sure that the product to be activated is plugged in, and

where appropriate switch on. If there are multiple Wi Fi products in the room they will all be activated.

3. Press the coloured button clusters on the top of the switch to control the colour of your switch-activated product e.g. to change the colour of the bubble tube. The button cluster is large and could be activated by a foot, cheek, elbow etc – not just a hand. For example, press the blue cluster to turn your bubble tube blue; the red button to turn it red etc.
4. If no buttons are pressed, all compatible Wi Fi products will revert back to their automatic sequence after one minute.
5. Remember to turn the switch off after use.
6. Remember to take the switch out of the water after use. This avoids any potential damage caused by pool chemicals.

## CARE & MAINTENANCE

Wipe clean with a very slightly damp clean cloth

Avoid abrasive cleaning products which could scratch this product.

Do not attempt to open up the switch - there is no need to access the interior of the switch.

ALWAYS take the switch out of the water after use

Once this product is completely exhausted, please dispose of it appropriately.

## Battery Charging

1. Use only the charger supplied to charge the battery.
2. Make sure the switch is turned OFF before charging.
3. Make sure the switch is dry and in a dry location before charging.
4. Connect the charger – please see images below.



5. Plug the battery charger into the wall socket and switch ON.
6. The battery will take 5½ hours to charger from flat.

## SAFETY

Always supervise the use of this product.

## TROUBLESHOOTING

In the unlikely event that your switch-activated product does not work with this switch, check:

- That this switch is ON
- That the battery is charged
- That your switch-activated device is plugged in and set to ON if it has an ON/OFF button

## **SPECIFICATION**

Built to IP67 rating ('protected from temporary immersion from 15cm to 1m for up to 30 minutes)

Size: 18cm long x 13cm wide x 6cmH

Weight: 650g

Battery: Ni-Mh 4.8v 500mA

Recharge from flat: 5½ hours

Estimated constant usage before charge required: 16 hours

Estimated intermittent usage before charge required: 5 days

Compatible with:

Colour Changing Panel by ROMPA® 19214

Colour Match Panel by ROMPA® 19209

Light Source by ROMPA® 19210 (and therefore Milky Way Carpet, Star Cloth, Fibre Optics etc)

Fireworks Panel by ROMPA® 18544 (purchased 2009 onwards)

Catherine Wheel Panel by ROMPA® 19603 (purchased 2009 onwards)

Ball-Bubble Tubes by ROMPA® 19767-70

Midi Bubble Tube by ROMPA® 19771

Giant Maxi Bubble Tube by ROMPA® 19776

Maxi Bubble Tubes by ROMPA® 19772-5

Aquatic Bubble Tube by ROMPA® 19777-80

Multitube Bubble Tube by ROMPA® 19781

Tranquility by ROMPA® 16049

Snoezelen® Oasis 19096

Snoezette Unit by ROMPA® 16046, 18120, 18709

The Vibro Tub by ROMPA® 18549-50

Interactive 'Talking' Vibro Tub by ROMPA® 18546, 19789

Mirrored Fibre Optic Light Panel by ROMPA® 18539

Sparkling Carpet Panel by ROMPA® 18542

Interactive Fibre Optic 'Fountain' Panel by ROMPA® 18537

Colour Wall Controller 19005

Snow Panel 20132

For further information about any of the above products please see [www.rompa.com](http://www.rompa.com)

This product meets the requirements of EN60950