



## **1. Product Name**

Happy Hopperz

## **2. Product Code**

21133 – Orange Deer Small

21134 – Pink Dog Medium

21135 – Blue Dog Medium

21136 – Green Dino Large

## **3. Colour**

Varies according to model chosen

## **4. Brief Description**

Bouncing, balancing fun! Wonderful inflatable creatures to encourage hand-eye co-ordination, spatial and bodily awareness, confidence, exercise and balancing skills.

## **5. Contents**

- 1 x Happy Hopper
- 1 x Hand Pump

## **6. Snoezelen® Stimulations**

- Balance

## **7. Best Use**

Use under supervision on a flat, stable floor.

## **8. Compatible ROMPA® Products**

18682 - Electric Pump

18141 - Ball Pump

18479–81 - Soft Crown Helmets

## **9. Starting Up**

Inflate using the hand held pump and adapter supplied.

## **10. Detailed Description**

Bouncing, balancing fun! Wonderful inflatable creatures to encourage hand-eye co-ordination, spatial and body awareness, confidence, exercise and balancing skills. Child friendly and appealing. Includes pump.

## **11. Safety**

- Always supervise the use of this product.
- Do not use in the unlikely event of product failure/malfunction.
- Please check the item carefully for any damage that may have occurred during shipping. If the carton appears damaged, carefully check the shipping carton for damage and be sure all accessories necessary to operate the unit have arrived intact. In case of any difficulties, please contact ROMPA.
- Remove all packaging including pump and adapter before giving this toy to a child.
- For use in dry indoor environments only - do not expose to rain, moisture or liquid.
- Once this product is eventually exhausted, please dispose of it appropriately.
- Use in a safe location, e.g. away from stairs, on a flat and stable surface.
- Keep and use away from heat sources e.g. radiators.
- Consider use of safety and wall matting and cushioning.

## **12. Technical Specification**

Approximate sizes: Small (60L x 25W x 30cmH), Medium (60L x 25W x 30cm), Large (60L x 25W x 30cmH)

Supports up to 150kg

### **13. Installation**

- Inflate: Fix the metal adapter into the bottom of the pump. Insert pump with adapter into valve on the underside of the hopper and inflate. Take care not to over inflate. Once fully inflated remove the pump and adapter.
- Keep the pump in a safe place for future use.

### **14. Care and Maintenance**

- Children should remove any sharp objects such as buckles etc, as these could cause injury to the user or damage to the hopper.
- Keep away from sharp objects and surfaces to avoid punctures.
- Clean with warm soapy water using a mild detergent.
- For use indoors and outdoors (on grass for example).
- Not to be used as a buoyancy aid.
- Do not expose to extreme temperatures.

### **15. Troubleshooting**

*Not applicable*

Further copies of these instructions can be downloaded at [www.rompa.com](http://www.rompa.com)

We hope you find our instructions invaluable. If you have any suggestions for improving them further your comments will be greatly received – please contact us at

[producthelp@rompa.com](mailto:producthelp@rompa.com)