



1. Product Name

LED Light Panel

2. Product Code

18663

3. Colour

White

4. Brief Description

The Light Panel is portable and may be used horizontally or vertically on a table top as a free-standing object and requires one wall electrical socket. It is especially effective when used with translucent and transparent objects.

5. Contents

- 1 x light panel
- 1 x power supply

6. Snoezelen® Stimulations

- Sight

7. Best Use

Use on a tabletop to explore objects. Use with translucent paper and objects.

8. Compatible ROMPA® Products

20580 – Sensory Blocks

20711 – Squash-Its

13007 – Colour Frame Red

13008 – Colour Frame Yellow

13009 – Colour Frame – Blue

9. Starting Up

- Assemble and connect the power adapter
- Plug into wall socket

10. Detailed Description

This LED Light Panel lights objects up from beneath, encouraging exploration and investigation. It is especially effective with translucent and transparent objects. It is slim, lightweight and portable, uses low energy and long-lasting LED strip technology with rounded edges. It can be used in small groups or individually.

11. Safety

- Always supervise the use of this product.
- Do not use in the unlikely event of product failure/malfunction.
- Please check the item carefully for any damage that may have occurred during shipping. If the carton appears damaged, carefully check the shipping carton for damage and be sure all accessories necessary to operate the unit have arrived intact. In case of any difficulties, please contact ROMPA.
- Do not attempt to operate this unit if the power cord is frayed or broken.
- For use in dry indoor environments only - do not expose to rain, moisture or liquid.
- Unplug after use.
- Once this product is eventually exhausted, please dispose of it appropriately.
- Make sure the power cable does not cause potential danger e.g. trip hazard.

12. Technical Specification

Size: 48 x 35 x 1cm (lit area 41 x 28.5cm)

Weight: 2.25kg

13. Installation

1. Assemble the power adapter by locating the tabs on the three pin plug with the main power supply.



2. Press down and twist 90 degrees.



3. Turn until plug clicks into place.



4. Connect power adapter jack to the Light Panel's female connector.



5. Power supply cords should be routed so that they do not present a trip hazard or pinched by items placed upon or against them, paying particular attention to the point that they exit from the unit.

14. Care and Maintenance

- Clean using a soft, damp cloth. Do not use solvents. Avoid harsh or abrasive cleaning products which could scratch the panel. Sticky marks can be removed with a mild detergent.
- Turn off when not in use.

15. Troubleshooting

Not applicable

Further copies of these instructions can be downloaded at www.rompa.com

We hope you find our instructions invaluable. If you have any suggestions for improving them further your comments will be greatly received – please contact us at producthelp@rompa.com