



1. Product Name

Switch Activated Massage Tube

2. Product Code

19221

3. Colour

Colours may vary – likely to be blue or pink

4. Brief Description

The fantastic switch activated massage tube is a revolutionary design which brings you entire wonderful "surround vibes". Its flexible sponge tube curves freely according to your body shape. Before enjoying the massage tube, please read enclosed product instructions.

5. Contents

- Massage tube
- Fastener tape
- Instructions and disposal information
- You will require 2 type C batteries (not included)

6. Snoezelen® Stimulations

- Touch
- Vibration

7. Best Use

Use with an appropriate switch.

8. Compatible ROMPA® Products

This product is compatible with various adaptive switches that enable independent control for people with a variety of needs in the ROMPA catalogue.

9. Starting Up

- Insert batteries
- Attach switch

10. <u>Detailed Description</u>

An excellent flexible massager which makes vibration fun to explore. Lightweight and fully portable, the 115cm long massager may also give soothing and penetrating relief to aching muscles. A special velcro fastener is included for hands-free massaging. Switch adapted. Requires 2 X C size batteries and an adaptive switch (both to be purchased separately).

11. Safety

• Supervise the use of this product.

12. <u>Technical Specification</u>

- Diameter 4cm
- Length 115cm
- Requires 2 type C batteries (to be purchased separately)
- Requires adaptive switch (to be purchased separately)

13. <u>Installation</u>

- 1. Remove the caps on both ends of the massager by turning anticlockwise and slide out. Insert batteries as indicated by the markings inside. Lock the caps by pressing firmly downwards and wind clockwise (see figs provided in product instructions enclosed in the packaging).
- 2. Connect your adaptive switch to the Super Vibe Massage Mate by pushing the male connector firmly (listen for clicking sound) into the female connection (attached to the belt massager). If this connection is not a snug fit, your switch may require a jack adapter (available from ROMPA).
- 3. When in "off" position the sliding switch at the end of the massager will display red.
- 4. Switch on the product by moving the sliding switch at the end of the massager to "low", positioned in the middle (an equal amount of red and grey will be shown).
- 5. Activate the product by operating the external switch.
- 6. Move the sliding button at the end of the massager to "high" (grey will be shown) to accelerate the vibration rate.
- 7. Always try low vibes first before attempting high vibes.
- 8. The detachable strap enables the massager to be used hands free.
- 9. Use the detachable strap according to the product instructions and illustrations enclosed in the product packaging.

14. Care and Maintenance

- Do not immerse in water.
- Change batteries as required.
- Please dispose of this product responsibly when it is no longer required.
- Surface clean with care using a damp cloth or sponge, keeping any moisture away from electrical connections and parts.

15. <u>Troubleshooting</u>

Problem: the tube will not vibrate when the switch is activated

- Make sure your switch is properly connected (pushed as far as possible into the jack socket). If this connection is not a snug fit, your switch may require a jack adapter (available from ROMPA).
- Check the batteries and replace these as required.
- Ensure that when batteries are inserted, the end is carefully screwed fully down (with an internal spring, firm pressure is required)
- Insert the batteries the correct way up (a label is located in the battery chamber)
- Make sure your switch is not faulty check it with another switch-adapted product.
- Please note that the "switch activated massage tube" cannot be used with just batteries alone. The sliding switch at the end of the massager must be turned to "low" or "high" as well as the adaptive switch activated before the product will operate.

Further copies of these instructions can be downloaded at www.rompa.com

We hope you find our instructions invaluable. If you have any suggestions for improving them further your comments will be greatly received – please contact us at producthelp@rompa.com