 




Life Changing Sensory Solutions For All

snoezelen®

# INSTRUCTION MANUAL



**COLOUR WALL CONTROLLER**

**20259**

01.

**CONTENTS**

# CONTENTS

|  |           |
|--|-----------|
| <b>ABOUT THE PRODUCT .....</b>             | <b>4</b>  |
| Product Description.....                   | 5         |
| User Benefits .....                        | 5         |
| Product Compatibility .....                | 5         |
| <b>TECHNICAL SPECIFICATION .....</b>       | <b>6</b>  |
| Included Parts and Materials.....          | 7         |
| Technical Specification .....              | 7         |
| <b>SAFETY AND CARE.....</b>                | <b>8</b>  |
| Product Safety and Care Instructions ..... | 9         |
| <b>ASSEMBLY &amp; INSTALLATION GUIDE</b>   | <b>10</b> |
| Product Assembly Guide/Installation.....   | 11        |
| <b>USER GUIDE .....</b>                    | <b>12</b> |
| <b>NOTES.....</b>                          | <b>14</b> |

02.

**ABOUT THE PRODUCT**

## Product Description

Walls awash with colour! Dramatic and striking lighting from one compact unit! Provides a flood of colour using ultra bright, low-maintenance LED bulbs. Suitable for indoor use. The light colour can be controlled wirelessly using one of Rompa's wirefree controllers. Colours can be mixed and their intensity can be adjusted. Easy to install. 240V. Black or white - please state colour choice when ordering.

## User Benefits

- Stimulates sight with the coloured lights.
- Wireless controll.

## Product Compatibility

19847 Rompa® Deluxe 8 Colour Wire free Controller

21006 8 Colour Wirefree Switch

21917 Rompa® Wi-Fi Microphone

18870, 20402 Talking Cubes by Rompa®

19939 Wireless Interactive Mat Switch Set

24515 Snoezelen® Colour Command Centre™ Sensory Room Wall Panel by Rompa®

22867 Wireless Colour Controller Cushion Wall Mat


# TECHNICAL SPECIFICATION

03.

## Included Parts & Materials

- Power: 1mL (1070 x 65 x 88mm) 240V – 50Hz (mains lead supplied)
- Consumption: 50W
- Fuse in plug: 13A (UK plug)
- Lamp life: 100,000 hours
- Weight: 2.5KG
- CE: Meets requirements of CE and RoHS

## Technical Specification

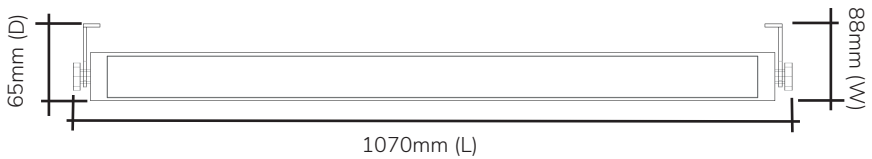

04.

**SAFETY AND CARE**



# Product Safety and Care Instructions

- Always supervise the use of this product.
- Take all appropriate safety measures to ensure that this product is installed correctly and safely – indoors.
- Do not use if any part becomes damaged.
- Do not attempt to modify this product yourself, or open it up.
- Do not pull on the power cable or exert pressure on it.
- Do not allow the power cable to come into contact with other power cables.
- Do not connect to a dimmer.
- Do not expose to anything flammable, to liquids or to gases
- Make sure the Wi-Fi Colour Wall Controller is disconnected from the mains (unplugged at the wall) before attempting any installation or cleaning. Pull the plug out by the plug – not by pulling the cable.
- In the unlikely event of product failure, discontinue use immediately.
- This product contains no user-serviceable parts.
- Once this product is eventually exhausted, please dispose of it appropriately.
- Replace plug fuse as required (one in the UK plug).

# ASSEMBLY & INSTALLATION GUIDE

05.

# Product Assembly Guide/Installation

- Install indoors in dry environments only.
- This product requires one electrical socket.
- If this product has been exposed to extreme temperatures during transportation, do not switch on immediately. Allow the product to reach room temperature first.
- Use the integral bracket to wall or ceiling mount this product. There are two holes in each of the two brackets for fixings. Fixings are not included as these depend on the construction of your wall/ceiling.
- This unit weights approximately 2.5kg. Please take this into consideration when fixing. Please make sure that you are aware of the construction of the wall the unit is to be fixed to. Taking this into account please ensure you have the correct fixings. For example walls may be partition walls and plaster board as opposed to solid brick or stone walls. Take advice from a suitably qualified professional builder or from an estates department if in any doubt about appropriate fixings. Make sure your wall and fixings are capable of holding the weight of this product.
- Adjust the angle of the wall washer as required by gently pivoting the head containing the LEDs at the brackets. We recommended that the wall washer is pointed towards a wall. The lights are bright and it is not advisable to position the wall washer in such a way that would encourage/allow users to look directly into it.
- Multiple wall washers can be used together.
- Only one wall washer is supplied. Plug the wall washer in at the wall.

# USER GUIDE

06.

# User Guide

## Starting Up

- Install indoors using integral bracket or ceiling mount and appropriate fixings.
- Adjust the angle of the wall washer.
- Plug in.
- The unit enters automatic mode where it will slowly cycle through all the colours.
- Repeatedly press the "MODE" button on the wall washer until the display on the back of the wall washer displays "Addr." Now repeatedly press the "SET UP" button until the display shows "d.001" (or similar number). Press "UP" and "DOWN" until the display shows "d.001". Now press the "SET UP" button once. Use the "UP" and "DOWN" buttons to select "03C.H".
- Use a Wi-Fi controller to select a colour.

**OPERATION** Plug in. There is no ON/OFF button. This product is not intended to be switched ON and OFF at short intervals. The unit enters automatic mode where it will slowly cycle through all the colours. If it receives a Wi-Fi signal (transmitted from another Wi-Fi enabled Rompa® device such as a Colour Changing Panel) the unit will change to the corresponding colour sent, for one minute at which it will resume automatic cycling unless another Wi-Fi signal is received in this time.

**Setting for Wi-Fi use** Repeatedly press the "MENU" button on the wall washer until the display on the back of the wall washer displays "dnnn" (nnn is a three digit number). Now repeatedly press the "UP" and "DOWN" until the display shows "d001". Now press the "ENTER" button until the display shows "d-Pn" (n is a digit number). Now press the "UP" / "DOWN" button until the display shows "d-P2".

# NOTES

07.



**snoezelen<sup>®</sup>**



Life Changing Sensory Solutions For All

**Rompa<sup>®</sup> Limited, Goyt Side Road,  
Chesterfield, S40 2PH**

**[customer.service@rompa.com](mailto:customer.service@rompa.com)**

**[www.rompa.com](http://www.rompa.com)**

**20259\_170425**