



1. Product Name

Musical Hopscotch Pad

2. Product Code

20319

3. Colour

Various, as shown

4. Brief Description

When a colour is pressed on the Musical Hopscotch Pad a light, note, tune or light pattern is produced on a visual display board.

5. Contents

- 1 x Floor Cushion with cable
- 1 x Wall Display
- 1 x Mains cable with plug

6. Snoezelen® Stimulations

- Visual
- Audible

7. Best Use

- Wall mount Display Panel
- Put Hopscotch pad in front of panel
- Make sure hopscotch panel is located with space around it as it is a physical activity, with surrounding safety matting if deemed appropriate.

8. Compatible ROMPA® Products


Please see our website www.rompa.com for more information

9. Starting Up

Switch ON.

Adjust the volume.

The Game Select button (shown below, to the left) allows access to the 8 options. Press the red button in the centre to select a game. Each press moves to the next game. A LED next to the number will indicate which game has been selected.

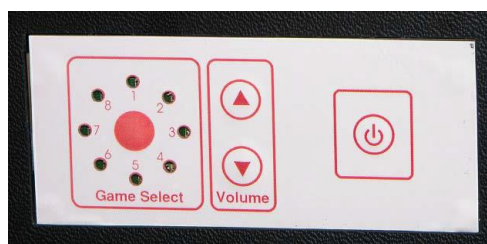


10. Detailed Description

Press a coloured square on the musical Hopscotch Pad to light up a corresponding panel on a wall mounted display or produce a note, tune or sequenced illuminated display. Play up and down the musical display as you hop, walk or jump around on the mat.

Do not encourage users to touch the coloured parts of the Display Panel – whilst this panel is safe to touch it is not interactive – the cushion is interactive.

Switch ON using the button shown below, to the right.

Adjust the volume as required using the UP and DOWN arrows shown below (labelled Volume). The Game Select button (shown below, to the left) allows access to the 8 options. Press the red button in the centre to select a game. Each press moves to the next game. A LED next to the number will indicate which game has been selected.

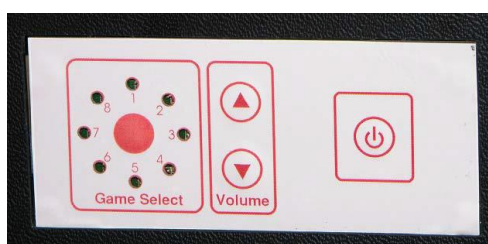

GAME 1. *One light / One note*

Press one colour to light up the corresponding colour panel in the display and play one note of a major scale. The panel remains lit and the note sounds for four seconds or until the next colour is pressed. The volume can be adjusted using the rotary volume control which is next to the mains inlet.

GAME 2. *Two lights / Two notes*

Press one of the colours to light the corresponding colour panel and play one note as above.

When a second colour is pressed both panels will illuminate and both notes will be played together. When a third colour is pressed, the first panel will go out and the first note will stop.

GAME 3. *Light pattern*

Press any colour to display a light pattern on the display panel which will run for about 8 seconds. Press a different colour to select a different pattern - one light pattern corresponds to each colour.

GAME 4. *Tune and lights*

Press any colour to play a tune and light up a matching panel corresponding to the note being played. Press a different colour to select a different tune - one tune corresponds to each colour.

Tunes are:

1. Happy Birthday
2. Baa Baa Black Sheep
3. Frère Jacques
4. Oranges and Lemons
5. Pop Goes The Weasel
6. This Old Man
7. Polly Put The Kettle On
8. London Bridge

GAME 5. *Play light patterns*

Press any colour to start from pattern 1 and play through all 8 light patterns.

GAME 6. *Play tunes and lights*

Press any colour to start from Tune 1 and play through to Tune 8. Each panel on the display illuminates corresponding to the note being played.

GAME 7. *Learn light pattern*

Press any colour to start. This selects 1 of 8 light patterns.

A number of panels will be illuminated. Press the correct colours on the floor cushion to turn off the illuminated panels. When the correct colour is pressed the panel will go out and a tone will sound. When all panels have been extinguished the next pattern in the sequence will be displayed. Each sequence is either 4, 8 or 16 steps long. When the pattern is completed a fanfare will be played and a number of panels illuminated corresponding to the number of mistakes made. If the sequence is completed with one or no mistakes the fanfare will be played again.

GAME 8. Learn tune

Press any colour to start. This selects one of the eight tunes.

A panel on the display will be lit corresponding to each note of the tune. Press the correct colour on the floor cushion to play the note. If incorrect a buzzer will sound. When the tune is completed a fanfare will be played and a number of panels will be displayed corresponding with the number of mistakes made. If the tune is completed with one or no mistakes the fanfare will be played again.
Switch off after use.

11. Safety

- **Always supervise the use of this product.**
- Wall mount the Display Panel in an appropriate place - out of reach if required

12. Technical Specification

Sizes:

- Wall Display Panel: approx 115 x 72.5 x 11 cm
- Floor Cushion: approx 145 x 72.5 x 15 cm

Weights:

- Wall Display Panel: approx 20kg
- Weight of Floor Cushion: approx 27kg

Other Information:

- Bulbs: LEDs
- Mains Supply: Input: 110-240vAC 50/60Hz 1.5A
- Output: 12vDC 5A (60W)
- Fuse: 5A, in the Mains UK plug
- There is an internal 'automatic' fuse on the control board that trips if there is a major fault. This resets itself when the fault is removed and the unit is re-powered.
- This product is UL/CUL listed, and carries the CE mark. It meets the requirements of EN60950- 1 and RoHS.

13. Installation

- Connect the Musical Hopscotch Pad to the mains supply using the lead supplied.
- Connect the floor pad to the Display Panel using the lead supplied.
- Wall mount the Wall Display Panel. You may wish to install this out of reach of clients. It is safe to touch, but we recommend that it be placed out of reach as it is not intended to be frequently handled.
- Take into account the weight of this (approximately 20kg) and purchase fixings that are appropriate to this weight and to the construction of your wall.

- The Wall Display may be installed either way round (Portrait/Landscape), although we recommend that it be installed vertically (Portrait) for aesthetic reasons. Please note that the wording on the label on the controls will only be the correct way up if the panel is installed with a short side to the top (Portrait).
- Please consider the orientation of the floor cushion – for ease of use you may wish to make sure that the orientation of the wall display panel is the same as that of the floor cushion i.e. the colour on the top left of the wall display panel is the same as that on the top left of the floor cushion.

When deciding upon the location of the wall panel, please consider:

- Access to the controls shown below – consider an appropriate height so you can change the Games and Volume as often as you wish without clients being able to change these
- Access to a wall socket
- The lights on the wall display panel are most effective in a darkened environment. Whilst the lights are visible in daylight, they are much more visible in a darkened area.

14. Care and Maintenance

Wall Display

The bulbs in the Wall Display Panel are light emitting diodes (LEDs). These last many hours and it is highly unlikely that these will need to be replaced. There is no need to access the interior of the panel.

Floor Cushion

Fabric Care:

- Always supervise the use of this product.
- Organise a regular cleaning schedule.
- Vinyl will crack, tear and rub off if subjected to sharp objects or continual rubbing by hard objects. Remove shoes, and avoid buckles, zips or sharp/hard/pointed objects coming into contact with the surface.
- Check seams regularly to ensure that these are not worn or split and the interior filling cannot be accessed.
- Wipe off accidental marks/liquids at the time they occur or are noticed.
- From time to time, if possible, lift floor cushion or move furniture to clean all surfaces and the floor underneath.
- Furniture and cushioning is intended to provide comfort and relaxation. Avoid eating and drinking whilst using these products.
- Do not place near sources of heat or fire that may damage the surface (radiators, fires, underfloor heating, hot central heating pipes etc.)
- Direct contact with bright sunlight may affect material over time.
- Do not saturate the material with lots of water.

- Some of our products contain zips for manufacturing purposes only. Do not attempt to open these or to access the interior part of these products. Never allow children or vulnerable people to access the interior part of this product.
- **PVC (Vinyl)**
- Use a soft brush remove all loose dust/dirt
- Clean with a mild detergent (such as Lux soap flakes in luke-warm solution) applied to a sponge or damp cloth.
- This may be sanitised using a weak solution of Milton fluid.
- Do not use excessive amounts of water and always ensure the PVC is dry after cleaning.
- Do not use an abrasive cleaning pad.
- Do not use boiling/very hot water, washing up liquid / aggressive detergent or solvent based cleaner as this will cause the coating to discolour and go hard.
- Steam cleaning is not advised.

15. Troubleshooting

In the unlikely event of product failure, please check:

- That the product is plugged in
- That the product is switched on
- That the floor cushion is correctly linked to the wall display panel

Should only some but not all of the game modes be accessible, please reset the panel:

- Turn the unit OFF.
- Press and hold the MODE button.
- Turn the unit back on. After a few seconds release the MODE button.

Further copies of these instructions can be downloaded at www.rompa.com

We hope you find our instructions invaluable. If you have any suggestions for improving them further your comments will be greatly received – please contact us at producthelp@rompa.com



1. Nome do Produto

Suelo Musical

2. Código do Produto

20319

3. Cor

Várias cores

4. Descrição Breve

Quando un color es presionado, una luz, nota, tono o secuencia de color se produce en una de las combinaciones que a continuación se describen.

5. Conteúdo

- 1 x Acolchado de suelo con cable
- 1 x Panel de pared
- 1 x Cable principal

6. Estimulação Snoezelen®

- Visão
- Audição

7. Melhor Utilização

- Não estão incluídos acessórios de fixação. Quando montar o painel na parede consulte um profissional qualificado para saber quais os acessórios de fixação indicados para a parede em causa.
- Coloque o Acolchado de suelo Hopscotch na frente do pain


8. Compatibilidade com Produtos ROMPA®

Por favor, consulte o nosso site para mais informações www.rompa.com

9. Começar

Encienda el panel.


Ajuste el volumen. El botón de selección de actividad le permite cambiar de un programa a otro. Presione el botón central rojo para seleccionar un programa, cada presión hace que haya un cambio a la siguiente actividad. El LED correspondiente se iluminará para saber en qué actividad se encuentra.

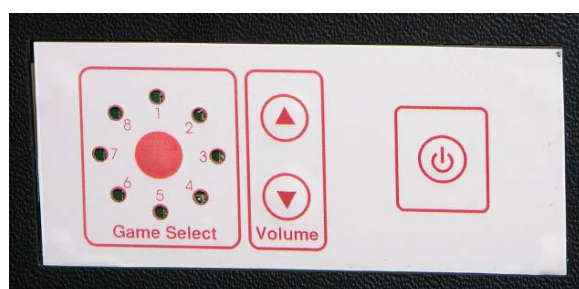

10. Descrição Detalhada

Fracción de suelo con ocho secciones de colores diferentes. Cuando un color es presionado, una luz, nota, tono o secuencia de color se produce en una de las combinaciones que a continuación se describen. No permita a los usuarios tocar partes coloreadas de la caja, ya que ésta no es interactiva, sólo lo es la colchoneta. Producto no adecuado para personas con problemas de conducta.

Encienda el panel utilizando el botón de encendido que se muestra debajo, a la derecha. Ajuste el volumen utilizando las flechas. El botón de selección de actividad le permite cambiar de un programa a otro. Presione el botón central rojo para seleccionar un programa, cada presión hace que haya un cambio a la siguiente actividad. El LED correspondiente se iluminará para saber en qué actividad se encuentra.

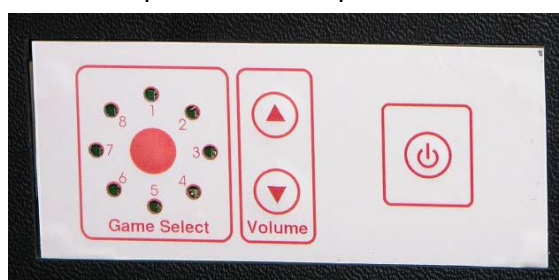

Posición 1: *Una luz una nota*

Presionar un color para iluminar la luz correspondiente en el panel y que suene luego una nota en la escala mayor. La luz y el sonido permanecen durante 4 segundos o hasta que otro color se presione de nuevo. El volumen se puede graduar con la rueda próxima al conector principal.

Posición 2: *Dos luces dos notas*

Presionar un color para activar una luz y un sonido igual que antes. Cuando se presiona un segundo color los dos colores se iluminan y las dos notas suenan a la vez. Cuando una tercera nota se presiona la primera nota y el primer color desaparecen.

Posición 3: *Secuencia de colores*

Presionar cualquier color para activar una secuencia que se repetirá durante 8 segundos. Presionar otro color para que otra secuencia se active.

Posición 4: *Melodías y luces*

Presionar un color para que suene una melodía y se encienda una luz en el panel correspondiente a la nota que ha sido pulsada. Seleccionar otra nota distinta para cambiar de melodía. Las melodías son:

- 1 Cumpleaños feliz
2. Baa baa black sheep
3. Frère Jacques
4. Naranjas y limones
5. Pop goes the weasel
6. This Old man
7. Polly put the kettle on
8. London bridge

Posición 5: *Activar todas las secuencias de luces*

Presionar cualquier botón para que comience la secuencia de la 1 a la 8

Posición 6: *Activar melodías y luces*

Presionar cualquier color para comenzar desde la melodía 1 hasta la 8. En el panel se iluminará la nota que se está tocando.

Posición 7: *Aprender una secuencia de luces*

Presionar cualquier color para comenzar. Se selecciona la secuencia de la 1 a la 8.

Un número de paneles se iluminarán. Presionar los colores correctos en el suelo para que se vayan apagando las luces del panel de control. Cuando se presiona el color correcto éste se apaga y suena la melodía. Cuando esa secuencia se ha completado, aparece la siguiente secuencia. Cada secuencia se compone de 4, 8 o 16 pasos. Cuando se completa el total, sonará una fanfarria y se encenderá el número de paneles correspondientes al número de errores cometidos. Si la secuencia se completa sin fallos o sólo con uno, la fanfarria sonará de nuevo.

Posición 8: *Aprender una melodía*

Presionar un color para empezar. Selecciona uno de los 8 tonos. Uno de los paneles se encenderá correspondiendo con la nota que está sonando. Presionar el color correcto en el

cojín de suelo para que suene dicha nota. Si no se presiona la tecla correcta, sonará un zumbido. Cuando se complete la melodía, sonará una fanfarria y se iluminarán paneles correspondientes al número de errores cometidos. Si se comete un error o ninguno, sonará de nuevo la fanfarria.

Apague la unidad después de su utilización.

11. Segurança

Supervise siempre la utilización de este producto

Coloque el panel de pared en el sitio adecuado, fuera del alcance de los usuarios si fuese necesario.

12. Especificações Técnicas

Tamaño:

- Panel de pared 115x72,5x11 cm
- Suelo 145x72.5x15 cm

Peso:

- panel de pared: 20Kg aprox
- suelo: 27Kg aprox

- Lámparas: LEDs
- Corriente principal: Entrada: 110-240vAC 50/60Hz 1,5 A
- Salida: 12v DC 5 A(60W)
- Fusible: 5 A en el enchufe UK principal
- Existe un fusible interno automático en la placa de control que salta si existe algún problema, y se resetea el solo cuando el problema desaparece.
- Este producto tiene marcado CE y cumple con la normativa dispuesta EN609550

13. Instalação

- Conectar el aparato a la corriente con el cable principal que se suministra.
- Conectar el suelo al panel de pared, utilizando el cable suministrado.
- Coloque el panel de pared fuera del alcance de los usuarios. Tenga en cuenta que su peso es de 20Kgs., por lo que deberá utilizar fijaciones adecuadas que soporten este peso y adecuadas al material de la pared.
- El panel de pared se puede colocar en horizontal o vertical. Le recomendamos que lo instale en vertical por razones estéticas. Tenga en cuenta que la etiqueta sólo se leerá correctamente si coloca el panel de esta manera. También ha de tener en cuenta que su uso será más sencillo si la orientación del acolchado y del panel de pared son la misma.

Antes de decidir la ubicación del panel, tenga en cuenta lo siguiente:

- El mejor acceso a los controles que se muestran más abajo – coloque el panel a una altura tal, que le permita manejarlos.
- La cercanía a un enchufe
- Las luces son más efectivas en un entorno oscuro, pese a que también se ven en una habitación iluminada.

14. Cuidado e Manutenção

Panel de pared

Existe un fusible interno automático en la placa de control que salta si existe algún problema, y se resetea el solo cuando el problema desaparece.

Acolchado de suelo

- Utilize no interior, em ambientes secos.
- Supervisione sempre a utilização deste produto.
- Organize uma agenda de limpeza regular.
- O vinil vai rachar, rasgar e “desgastar” se for sujeito a objetos afiados ou se for continuamente roçado por objetos duros. Evite utilizar sapatos, fivelas ou objetos afiados/duros.
- Verifique regularmente as costuras para garantir que o enchimento não é acessível.
- Limpe líquidos ou marcas acidentais imediatamente com um detergente macio e um pano húmido, evitando quantidades excessivas de água.
- Não comer ou beber ao usar este produto.
- Não lave com vapor.
- Não utilize produtos de limpeza com abrasivos ou à base de solventes.
- Não utilize detergente líquido da loiça. Não utilize produtos que contenham lixívia.
- Use e guarde longe de fontes de calor, fogo e luz solar direta.
- Alguns dos nossos produtos contêm zíperes apenas para fins de fabricação. Não tente abrir estes ou para acessar a parte interior destes produtos.

Vinil

- Use uma escova macia para remover toda a poeira / sujeira soltas.
- Limpe líquidos ou marcas acidentais imediatamente com um detergente macio e um pano húmido. Não utilize uma esponja abrasiva.
 - Podem ser utilizados líquidos esterilizantes para mamadeiras.
- Limpe com um pano húmido, evitando quantidades excessivas de água.
- Não use água fervente / muito quente.
- Não lave com vapor.

De tempos a tempos levante o chão almofadado para limpar toda a superfície e o chão por baixo dele.

15. Resolução de Problemas

En caso de que la unidad no responda, por favor, compruebe lo siguiente:

- Que el aparato está enchufado
- Que el aparato está encendido
- Que el acolchado de suelo está bien conectado al panel de pared