



1. Product Name

Musical Sorter

2. Product Code

20380

3. Colour

Multi-coloured

4. Brief Description

Correctly insert the shapes and be rewarded with sounds.

5. Contents

The Musical Sorter is supplied in one box containing a Sorter, 10 stackable shapes (5 colour and shape pairs) and a soft stackable character.

Please note: This product requires, but does not include, 2 AA batteries

6. Snoezelen® Stimulations

- Sight
- Touch
- Sound
- Cognitive

7. Best Use

- Use on a flat, stable surface
- Use under supervision

8. Compatible ROMPA® Products

- Not applicable

9. Starting Up

- Install 2 AA batteries (under the lid)
- Replace the lid top
- Push the shapes through the appropriate holes in the top.

10. Detailed Description

This product offers a range of developmental activities. The stacking and sorting functions helps with visual perception/figure ground, encourages reach, stretch and varied movements. Can be useful to helping development of hand/eye co-ordination, dexterity, fine motor functioning amongst other benefits. The matching pairs offer opportunities for colour matching and shape recognition. The musical function offers a positive sound reward on successful completion of the sorting activity.

Before Use

- Remove plastic lid top (shown as light blue above) and locate battery compartment which is located to the underside of the lid.
- Using a positive (cross-head) screwdriver, open the centre single screw only located within the battery compartment door. Keep this screw in a safe place.
- Remove battery compartment door.
- Insert or replace 2 AA batteries into the battery compartment as necessary, observing the polarity indicated.
- Once done, replace the battery compartment door and tighten the screw
- Make sure battery plastic cover is closed correctly and firmly with the screw
- Replace the plastic lid top by pushing it down firmly onto the base until a “clicking” sound is heard.

- Remove shapes from plastic packaging, keep this away from the child and dispose of appropriately.
- Push the shapes through the appropriate holes in the top.
- Remove the shapes by taking them out from the bottom, soft part, without removing the cover.
- Please note: this product is not designed to withstand continued removal of the plastic lid top; the toy must be cared for by removing the shapes from the bottom of the Sorter. The lid should only be removed when batteries need replacing.

11. Safety

- Always supervise the use of this product.
- For 9 months and over.
- Remove old batteries and dispose of them correctly.
- Do not mix old and new batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Adults should replace / recharge batteries.
- Make sure batteries are inserted with the correct polarity (i.e. the right way round).
- Remove exhausted batteries as necessary and dispose of these appropriately.
- Use only new batteries of the same specification.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Only batteries of the same or equivalent type as recommended to be used.
- Rechargeable batteries must be removed from the toy before being charged.
- The supply terminals should not be short-circuited.
- If the product is not going to be used for long periods, please remove the batteries.
- Once this product is eventually exhausted, please dispose of it appropriately.
- Keep away from fire

12. Technical Specification


- Sorter: Approx 16cm tall, 23 cm from handle to handle, circumference 19cm.
- Shapes: Varied sizes.

13. Installation

- *Not applicable*

14. Care and Maintenance

- Please note: this product is not designed to withstand continued removal of the plastic lid top; the toy must be cared for by removing the shapes from the bottom of the Sorter. The lid should only be removed when batteries need replacing.
- Wipe plastic parts with a soft, slightly damp, clean cloth

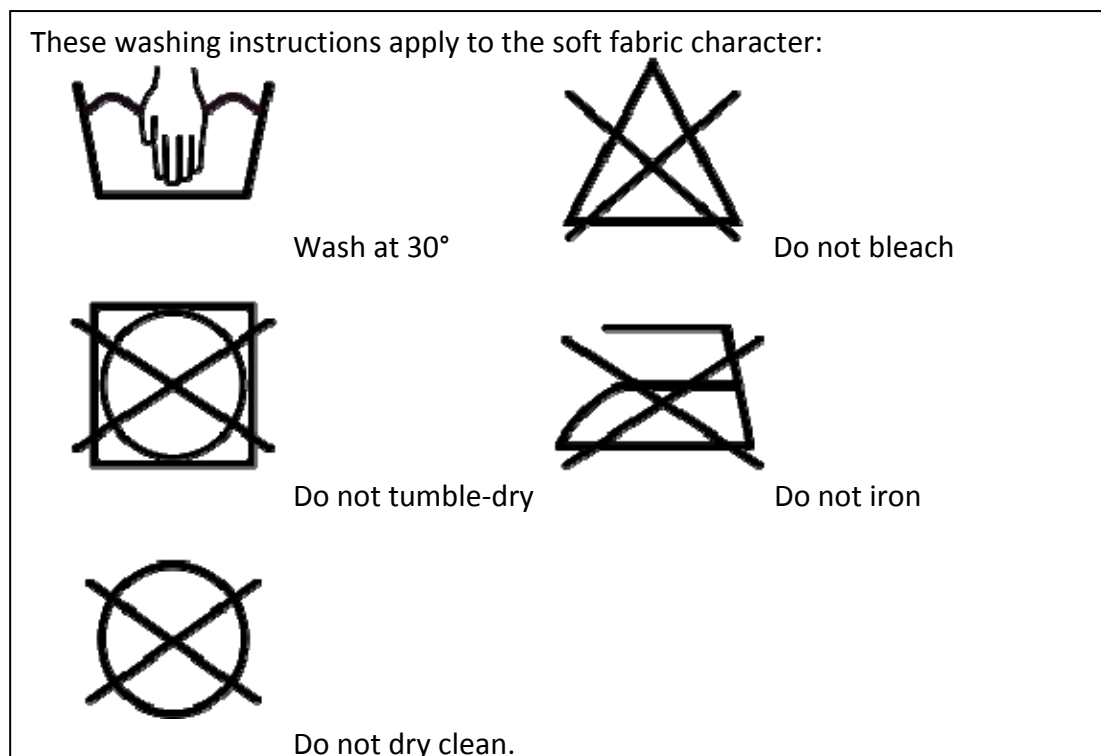

15. Troubleshooting

- There is an ON button next to the battery compartment. Try this to see if the batteries included need replacing.
- If there is no “clicking” sound when replacing the lid after changing batteries, and the lid is loose and unsecured, please look at the green handles either side of the toy and locate the central flaps. Hold the plastic lid top in place, and push the two central green flaps (either side) up until a clicking sound is heard and these are resting firmly on the plastic lid lip.

Further copies of these instructions can be downloaded at www.rompa.com

We hope you find our instructions invaluable. If you have any suggestions for improving them further your comments will be greatly received – please contact us at

producthelp@rompa.com