



1. Product Name

Noisy Wedge

2. Product Code

20454

3. Colour

Available in a range of colours, please contact us for the full range.

4. Brief Description

Slide down and activate an audible surprise!

5. Contents

- 1 x Noisy Wedge
- 1 x Speaker Unit

6. Snoezelen® Stimulations

- Vestibular
- Visual
- Audible

7. Best Use

In an indoor soft play environment. Slide down and trigger fun noises as you go!

8. Compatible ROMPA® Products

ROMPA® offer a range of interactive exciting soft play resources that trigger sounds, light, with ball pools, cabins to hide and play in and also ballpools and games! Visit www.rompa.com for our latest range.

9. Starting Up

- Place the Noisy Wedge on a flat, stable surface that is capable of supporting its weight in use – the Wedge weighs approximately 26kg.
- Think carefully about the location and carry out a risk assessment thinking about safety – away from hard surfaces, walkways etc. You may want to consider using cushioning or mats around the resource to keep the clients safe.
- When deciding upon the location of the Noisy Wedge, please bear in mind that the cable leading to the speaker unit comes out of the back of the Noisy Wedge, at the bottom left-hand corner. The eyelet where this cable comes out would be covered by a 15cm floor cushion, Cabin or a Platform etc. The Wedge could be against the wall, but this would not allow clients much room to manoeuvre at the top.



- The cable to the speaker unit is hard-wired in. Make sure that the cables from the speaker unit (one for power, one to the Wedge) are safely tucked away out of reach. Do not exert pressure on these cables.
- Plug in and test the Speaker unit so you can adjust the volume as required before placing the Speaker unit out of reach. Plug in the Speaker unit at the wall (standard plug). Switch on at the wall. Switch the Speaker unit on at the front (ON/OFF button). The green LED power indicator will light up. Press the centre of the Wedge to activate a sound, then adjust the volume using the controls on the speaker unit. Place the Speaker unit on a suitable shelf, out of reach. The Speaker unit cannot be wall-mounted. The Speaker unit weighs approximately 1kg. Make sure the cables are safely out of reach (e.g. under trunking) and cannot be pulled.

- There is a head-phone socket on the Speaker unit but this has no use with this product.



10. Detailed Description

Slide down and activate an audible surprise! Movement is rewarded by a fun sound! Safe and sensory way of encouraging motor skills. This product has a zip for manufacturing purposes only.

11. Safety

- Use indoors, in dry environments.
- Supervise the use of this product.
- Use on a flat, stable surface, capable of holding the product's weight and that of the person sat on it.



Please read all the following safety information before each use

ALWAYS SUPERVISE THE USE OF THIS PRODUCT

- Remove all packaging and either store this in a safe place out of reach of clients or dispose of this responsibly. Plastic bags and wrapping can be hazardous to children and vulnerable people.

- The Wall Cushion contains a foam filling. Do not attempt to access the interior part of this product. Never allow children or vulnerable people to access the interior part of this product.
- Avoid sharp or pointed objects which could puncture the product. Take care with zips on clothing etc. Remove shoes.
- Do not place near sources of heat or fire that may damage the surface (radiators, fires, underfloor heating, hot central heating pipes etc.)
- Should any seams or zips become damaged, contact ROMPA® immediately to arrange repair or replacement. Should the product require re-filling, contact ROMPA® immediately to discuss this.
- Some of our products contain zips for manufacturing purposes only. Do not attempt to open these or to access the interior part of these products. Never allow children or vulnerable people to access the interior part of this product.

PVC (Vinyl)

- Use a soft brush remove all loose dust/dirt
- Clean with a mild detergent (such as Lux soap flakes in luke-warm solution) applied to a sponge or damp cloth.
- This may be sanitised using a weak solution of Milton fluid.
- Do not use excessive amounts of water and always ensure the PVC is dry after cleaning.
- Do not use an abrasive cleaning pad.
- Do not use boiling/very hot water, washing up liquid / aggressive detergent or solvent based cleaner as this will cause the coating to discolour and go hard.
- Steam cleaning is not advised.

12. Technical Specification

Size: 145 x 72.5 x 109cmH

13. Installation

- Unpack.
- Place on a flat stable surface that is capable of holding the product's weight and that of the person sat on it.
- Move up or down the Noisy Wedge to activate one of five fun sounds. These are activated in a sequence, one with each activation. The pressure-sensitive area that triggers the sound is in the centre of the slope, approximately half way down the slope.
- The person on the Wedge needs to slide down the middle, rather than at the edges to trigger the sound.

14. Care and Maintenance

- For indoor use only.
- Always supervise the use of resources.

- Organise a regular cleaning schedule.
- Vinyl will crack, tear and rub off if subjected to sharp objects or continual rubbing by hard objects. Remove shoes, and avoid buckles, zips or sharp/hard/pointed objects coming into contact with the surface.
- Check seams regularly to ensure that these are not worn or split and the interior filling cannot be accessed.
- Wipe off accidental marks/liquids at the time they occur or are noticed.
- From time to time, if possible, lift floor cushion or move furniture to clean all surfaces and the floor underneath.
- Furniture and cushioning is intended to provide comfort and relaxation. Avoid eating and drinking whilst using these products.
- If the material for your furniture can be steam cleaned, please exercise great caution for the simple reason that when creating furniture, seams and stitching are necessary which create tiny holes where it is possible for liquid to get through into the inner foam. Should a lot of steam/water be accidentally used, there is potential for the inner foam to get saturated and be detrimental to your furniture.
- Do not place near sources of heat or fire that may damage the surface (radiators, fires, underfloor heating, hot central heating pipes etc.)
- Direct contact with bright sunlight may affect material over time.
- Do not saturate the material with lots of water.
- Some of our products contain zips for manufacturing purposes only. Do not attempt to open these or to access the interior part of these products. Never allow children or vulnerable people to access the interior part of this product.

15. **Troubleshooting**

Not applicable

Further copies of these instructions can be downloaded at www.rompa.com

We hope you find our instructions invaluable. If you have any suggestions for improving them further your comments will be greatly received – please contact us at producthelp@rompa.com