

1 | Introduction

Thank you for deciding for this massager. This is a quality product that should last a long time when used properly. This product is a non professional appliance designed to provide soothing massage muscles.

2 | Important safety hints

Retain the manual for further use and forward it to other users!



- Keep yourself informed of the contraindications.
 - Read, understand and practice the precautionary and operating instructions.
 - The instruction of use was listed; any improper use may be dangerous.
 - Do not use the massager:
 - during pregnancy
 - if you have thrombosis
 - if you have pains of unknown origin
 - If you feel uncomfortable
 - with acute complaints
 - epilepsy
 - with high fever
 - with a bloodpressure that is other than normal
 - varicose veins
 - inflammation of the veins
 - Caution should be used for patients with suspected or diagnosed heart problems
- Caution: Consult your doctor if you are in any doubt whatsoever.**

- This device is for home use only.
- Do not use if bended or folded
- not suitable for heat insensitive persons, children or pets
- This device is not intended to be used unsupervised by children, individuals with sensory deprivation of any kind or mentally challenged individuals. Any users falling into these categories should be assisted by a responsible adult.
- Children do not understand the dangers that can arise when using electrical appliances! Please supervise children during use. Children shall not play with the appliance.
- The appliance is not to be used by young children unless the controls have been pre-set by a parent or guardian, or unless the child has been adequately instructed on how to operate the controls safely.
- Do not place heavy or edged objects on the device, which may damage or bend the electrical wires inside the blanket (eg. suit cases)
- Examine the appliance frequently. If there is any damage visible. If the supply cord is damaged, it must be replaced by the manufacturer or a qualified person, to avoid a hazard. In this case please contact the service hotline.

2.1 | Explanation of symbols on unit



Only suitable for use indoor



Complies with EEC requirements



Waste electrical products should not be disposed of with household waste



Symbol for manufacturer

3 | Intended use

This item was conceived for the massage of muscles. It is however not intended to treat medical conditions. Do not use this product as a substitute for medical attention. The massager is intended for household use only. Do not use this appliance for anything other than its intended use. If it is used for another purpose or operated incorrectly, no liability for possible damages can be accepted. The technical safety of this product is assured by its compliance to European standards.

4 | Main features of this device

- 5 Programs
- Heater in the upper back
- 3 Massage speed
- 12 V operation via transformer

5 | Description of the device

- 1 Massagemat
- 2 Pocket for controller
- 3 Controller
- 4 Buttons for massage zones
- 5 Programm LEDs
- 6 Intensity LEDs
- 7 Heat LED
- 8 Start/Stop button
- 9 Heat button
- 10 Intensity selection buttons
- 11 Mode button



6 | Assembly instructions

Important instructions:

- Do not operate the unit near liquids (Kitchen sink, water basins, taps etc)
 - Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person
-
- Never leave the appliance unattended while in use
 - Do not use your massager if it or its cord or its controller has been damaged or it is not working properly
 - Should this occur, discontinue use and allow the unit to cool down before recommencing operation
 - Do not use this product before bed / Do not use this product in sleep. The massage has a stimulation effect and can delay sleep
 - Do not operate the appliance outdoors
 - The adaptor must be removed from power socket before cleaning, servicing, maintenance or moving the appliance
 - When the appliance is not in use, switch it off and unplug it
 - To reduce the risk of electrocution, never operate this product with wet hands, submerge under water or spill liquids into the product
 - Do not kink or damage the power cord
 - The manufacturer is not responsible for any eventual damages caused by improper or faulty use
 - Do not setup the massager in a bathroom or similarly humid areas as such an environment may reduce the lifespan of the massager mechanism
 - Ensure the massager is not exposed to direct sunlight, placed near heaters or other heat sources
 - Do not use this product on any wooden surface as the zipper may cause damage
 - If this device is stored near freezing, allow it to acclimate to room temperature before use
- a Simply unfold the massage mat and place it on the sofa, bed or floor
 - b Plug the transformer cable into the receptacle on the massage device
 - c Then plug the transformer into the wall receptacle (power source). The device is now ready to be used.

6.1 | Operating instructions

Turn on the device:

Press the „ON/OFF“ button **8** to turn on the device.

Select the program:

- Press „Mode“ button **11** to select the treatment program. One of the LEDs **5** shows which program was chosen
- Press „Intensity“ button **10** to adjust the output intensity of the massage. Depending on the chosen intensity, one of the three LEDs **6** are on
- Press Buttons for massage zones **4** to select massage motors for specific body regions. The selected program is terminated and the motor runs stabil.
- Heat can be activated in the upper back area with button „Heat“. **9** LED **7** is indicating that heat is on.

Turn off the device:

Press the „ON/OFF“ button **8** again to turn off the device

6.2 | Automatic shut-off

- The appliance automatically switches itself off after 15 minutes.
- Should the unit used again, simply press the „ON/OFF“ button **8** again and the unit will be started anew.

6.3 | Uses

- The duration of massage should be approximately 30 minutes.
- After use, one should wait at least 1 hour before repeating.
- It is recommended not to exceed 3 uses per day

7 | Care and Cleaning instructions

- Unplug the unit and allow it to cool before cleaning
- Clean only with a soft, slightly damp sponge
- Never allow water or other liquids to come into contact with the unit
- Only use mild cleaning agents. Do not use gasoline, window cleaner, glass cleaner, furniture polish or paint thinner.
- Store in a clean, dry place
- Avoid high temperature and direct sunlight.

8 | Technical data

Model:	CF 3707
Mains adaptor:	100 - 240 V 50 Hz / 12 V
Power:	12 W
Weight:	appr. 1375 gr
Product dimensions:	169 x 57 x 4 cm
Manufacturing:	April 2016

9 | Delivery contents

- Massage mat
- Mains adaptor
- Instruction manual

10 | Disposal



Electrical and electronic devices may not be disposed of with domestic waste. Consumers are obliged by law to return electrical and electronic devices at the end of their service lives to the public collecting points set up for this purpose or point of sale. Details to this are defined by the national law of the respective country.

This symbol on the product, the instruction manual or the package indicates that a product is subject to these regulations. By recycling, reusing the materials or other forms of utilising old devices, you are making an important contribution to protecting our environment

11 | Warranty

The guarantee lasts for 24 months from the date of purchase for manufacturers' error in material and quality. If it is used for another purpose or operated incorrectly, no liability for possible damages can be accepted. This guarantee is only valid if the instructions in the "instructions for use" have been followed. Warranty is void if product is misused, or repairs attempted by unqualified persons.