



## 1. Product Name

Buzzers – Set of 4

## 2. Product Code

20955

## 3. Colour

As shown

## 4. Brief Description

Fun cause and effect tools. Press to obtain a sound – honking horn, doorbell, boxing bell and boing. Similar to switches, without the need for a separate switch-adapted device.

## 5. Contents

- 4 x buzzers  
*This product requires, but does not include 2 AAA 1.5V batteries for each buzzer*

## 6. Snoezelen® Stimulations

- Sound

## **7. Best Use**

On a flat, stable surface.

## **8. Compatible ROMPA® Products**

*Not applicable*

## **9. Starting Up**

- Insert batteries and press to activate.

## **10. Detailed Description**

Fun cause and effect tools. Press to obtain a sound – honking horn, doorbell, boxing bell and boing. Similar to switches, without the need for a separate switch-adapted device. Engaging and interactive. Each requires 2 AAA batteries (to be purchased separately). For 4 years and over.

## **11. Safety**

- Supervise the use of this product.

## **12. Technical Specification**

Size: 9cm diameter.

CE: tested and compliant with Class B digital device limits of FCC rules (interference)

## **13. Installation**

1. Install the batteries, as explained in 'Care and Maintenance' below.

## 14. Care and Maintenance

### To install/replace the batteries

- Install batteries with care so as to avoid battery acid leakage.
- Locate the battery compartment on the underside of the buzzer.
- Using a Phillips screwdriver, remove the screw securing the battery compartment door. Remove the door and install batteries observing the polarity indicated inside the battery compartment. Replace the compartment door and the screw.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Do not mix new and used batteries. Do not charge non-rechargeable batteries. Remove rechargeable batteries from the buzzers before charging. Do not short-circuit the supply terminals.
- Remove weak or exhausted batteries from the buzzers. Remove the batteries if the buzzers will not be used for long periods of time.
- Store at room temperature.
- To clean, wipe the surface with a soft, dry cloth. Do not immerse in water.

## 15. Troubleshooting

In the unlikely event of product failure, please check the following:

### *Problem: The Buzzers do not work*

- Check that the battery has been charged.
- Check the batteries are inserted the correct way round (+ to +, - to -).
- Make sure the batteries are the correct type – AAA.
- Replace the batteries with new batteries.
- In the HIGHLY unlikely event of this product causing electrical interference, distance this product from your TV, radio etc

Further copies of these instructions can be downloaded at [www.rompa.com](http://www.rompa.com)

We hope you find our instructions invaluable. If you have any suggestions for improving them further your comments will be greatly received – please contact us at [producthelp@rompa.com](mailto:producthelp@rompa.com)