



1. Product Name

Switch-Adapted Aroma Fan

2. Product Code

21414

3. Colour

As shown

4. Brief Description

Activate your switch to activate the fan and diffuse an aroma.

5. Contents

- 1 x aroma diffuser with hard-wired cable and jack plug
- 1 x hinged aroma pad holder
- 1 x pack of aroma pads

6. Snoezelen® Stimulations

- Smell

7. Best Use

Use with a switch and essential oils – both to be purchased separately.

8. Compatible ROMPA® Products

21415 – Felt Roll

14032 – Aromatherapy Kit

52084 – Smell Box

20988 – Jack adapter 6.35 to 3.5mm

See www.rompa.com for an extensive range of switches e.g. 16750 – Lollipop Switch

9. Starting Up

- Install 2 AA batteries into the battery compartment at the back of the unit, at the bottom
- Place a couple of drops of aroma onto an aroma pad
- Insert the aroma pad into the hinged holder and slide this into the aroma diffuser door
- Connect a switch

10. Detailed Description

Activate your switch to activate the fan and diffuse an aroma. Includes one felt pad. Requires a switch, essential oil and 2 AA batteries (to be purchased separately).

11. Safety

- Always supervise the use of this product
- Choose your aroma with care so as not to provoke an unpleasant reaction.
- For indoor use only.

12. Technical Specification


Size:	12W x 13.5H x 3cmD
Weight:	200g
Jack socket:	3.5mm

13. Installation

1. Install 2 AA batteries into the battery compartment at the back of the unit, at the bottom. Please observe the polarity indicated. The battery compartment door simply slides off in the direction of the arrow on it – a screwdriver is not required.




2. Place a couple of drops of aroma onto an aroma pad.
3. Insert the aroma pad into the hinged holder.

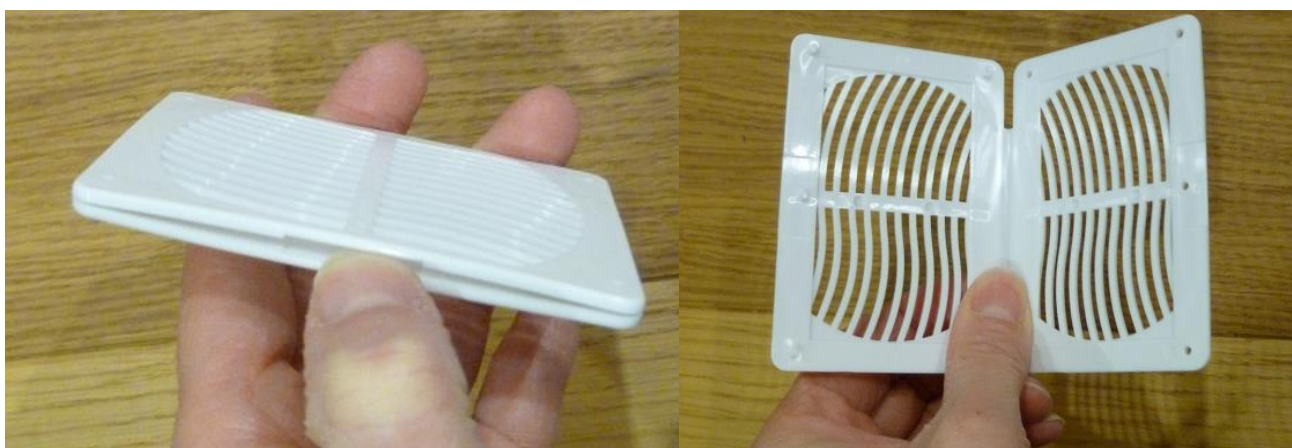

4. Open the door on the front of the fan, using the indent at the top of the door.



5. Slide the hinged holder into the aroma fan door. Close the door.

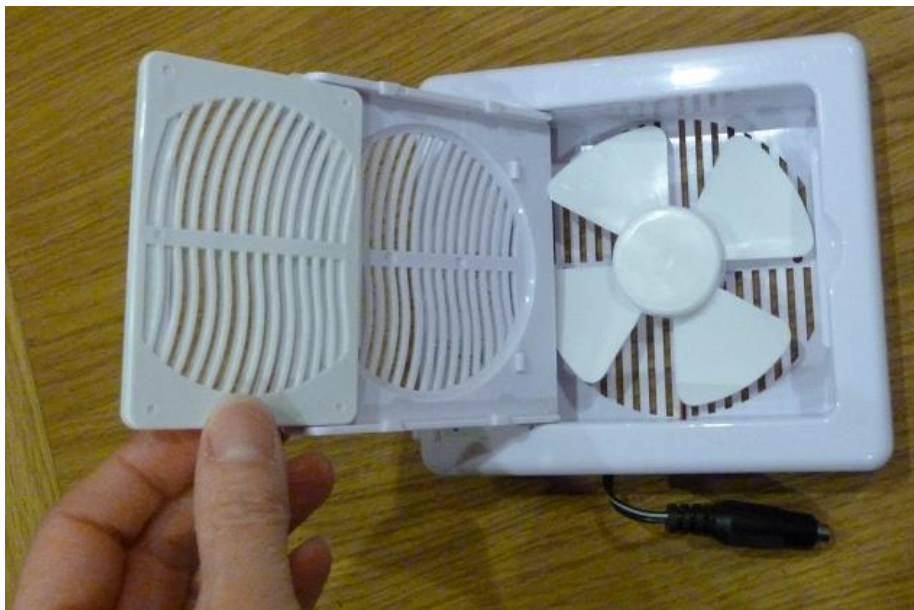

6. Connect a switch (to be purchased separately), using an adapter as required.

7. Set the fan intensity to LOW or HIGH using the sliding switch on the front.



8. Activate your switch to activate the aroma.

14. Care and Maintenance

1. Replenish the aroma as required. For additional aroma pads, you may wish to purchase 21415 Felt Roll.
2. Replace the batteries as required (as operation becomes erratic. Do not mix old and new batteries, or batteries of different types.
3. Wipe clean with a slightly damp cloth and a very mild cleaning solution.
4. Before this fan was switch-adapted, it was possible to attach a 3V DC adapter. However, once adapted, this adapter socket has been intentionally made redundant – do not attempt to connect anything to this deliberately blocked socket.

15. Troubleshooting

In the unlikely event of product failure, please check the following:

Problem: Fan does not work

- Check the batteries are installed and try a new set of batteries
- Make sure the sliding switch on the front is not set to OFF
- Make sure that the jack plug of your switch is firmly pushed into the jack socket of the adapted fan

Further copies of these instructions can be downloaded at www.rompa.com

We hope you find our instructions invaluable. If you have any suggestions for improving them further your comments will be greatly received – please contact us at

producthelp@rompa.com