



1. Product Name

Aura Projector

2. Product Code

21507

3. Colour

As shown

4. Brief Description

The perfect projector for the home. High quality, and an appropriate brightness for bedrooms.

5. Contents

- 1 x Aura Projector
- 1 x Power Supply
- 1 x Effect Wheel (design may vary)
- 1 x Table Stand (foam ring)
- 1 x Wall Mount (with fittings)

6. Snoezelen® Stimulations

- Sight

7. Best Use

Use indoors, in a darkened environment. Project onto a flat, white or pale-coloured and smooth surface. This projector is best suited to smaller rooms. Use the effect wheel supplied.

8. Compatible ROMPA® Products

This projector can be used with the many effect wheels from ROMPA®, including abstract liquid wheels and effect wheels with themes and images. See www.rompa.com to view the full effect wheel selection.

9. Starting Up

- Mount the Projector.
- Attach the effect wheel (removing the magnetic adapter as necessary for your own wheels).
- Connect the power supply.

10. Detailed Description

The perfect projector for the home. High quality, and an appropriate brightness for bedrooms (LED100 and LED Projectors are brighter for multi-sensory Snoezelen® environments). Features include:

- Timer
- Dimming control
- LED so no bulb changes and no heat
- Compatible with our extensive range of effect wheels
- Includes a Liquid Wheel (cannot be specified)
- Built in Wheel Rotator

Not compatible with the Panoramic Rotator, Distortion Wheel, Clip-on Prism, MultiFacet Mirror or the ROMPA® Wi Fi range of products.

11. Safety

- Always supervise the use of this product.
- Install indoors in a dry environment.
- Do not use if the power cord is damaged or if the projector has been dropped.

12. Technical Specification

 
Power supply:	9V AC 6W
Size:	20 x 20 x 20cm
Weight:	889g

13. Installation


1. Choose a suitable location for the projector, making sure that the power cable will not be tripped over, pulled or come into contact with hot surfaces. If an extension cord is necessary, a cord with a current rating at least equal to that of the appliance should be used. Cords rated for less amperage than the appliance may overheat.
2. Mount the projector using the table stand (foam ring) provided or wall-mount.




The wall mount should be screwed to a wall in a vertical position so that it supports the bottom and top of the projector. Fittings are provided. **Please note:** when wall mounting, the safety cord should be fitted to the projector. To do this, attach the spring clip on the safety cord onto the side of the projector.

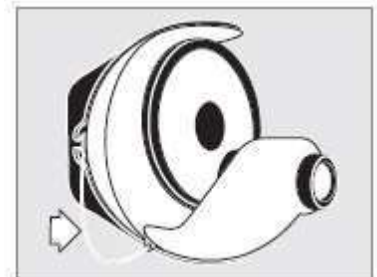

 3. Install the supplied effect wheel. This has a magnetic attachment – the slide on the left of the magnetic adapter should be at the top as shown. Position the magnetic wheel onto the magnetic adapter on the projector. To remove the wheel simply lift it off.

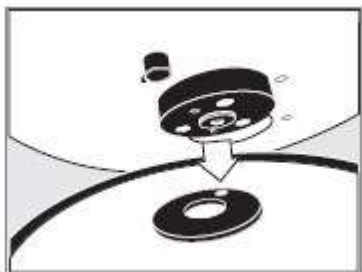

 
4. To use standard ROMPA® effect wheels with this projector, first remove the magnetic adapter from this projector. To do this, use the small allen key provided and place this in the hole on the top of the magnetic adapter. Twist the allen key anti-clockwise and the adapter will loosen and detach from the projector.

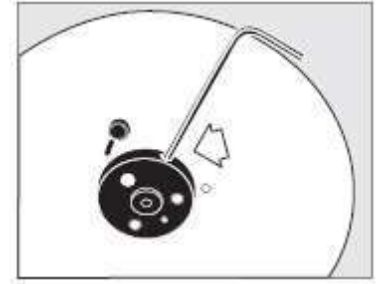

Please note: You may have to turn on the projector to move the rotator. The hole on the top of the magnetic adapter must face the top of the projector.


To reattach the magnetic adapter, make sure that the flat of the shaft is facing the top of the projector. Place the magnetic adapter onto the shaft and twist the allen key clockwise in the hole on the magnetic adapter. The adapter will subsequently tighten and attach to the projector.

 Once the magnetic adapter has been removed, push the wheel onto the shaft of the wheel rotator as shown. A slight twist when attaching the plastic-bossed push on effect wheel will help.

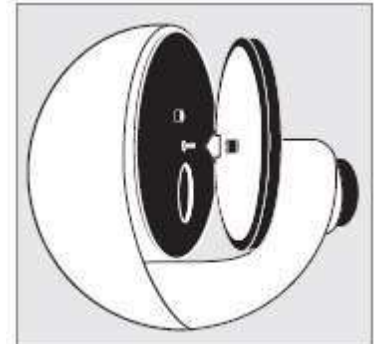

To attach glass-bossed effect wheels (e.g. liquid wheels), tighten the cross-head screw on the shaft of the wheel rotator as shown.

 The screw needs to be aligned to the flat of the shaft. To detach a bossed push on effect wheel, unscrew the wheel if it has a screw (e.g. a liquid wheel), and make sure the wheel is vertical and straight. Then use both hands to pull the wheel off the shaft.

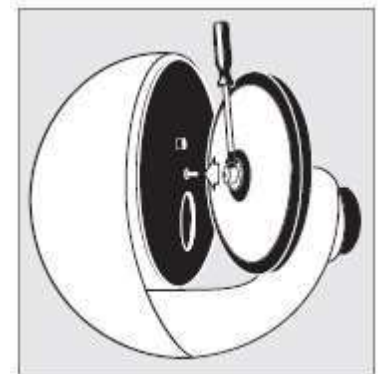


5. Connect the power supply to the inlet socket on the right hand side of the projector. The projector will turn on as you power up the projector.


6. To focus the projected effect, twist the slide on the lens forward and backwards until your desired focus is achieved.



 - The maximum projected image size should be no bigger than 4m in diameter.
Note: The size of the projection depends on how far the Aura is on the projected spot. The diagram below will help you position your projector optimally.

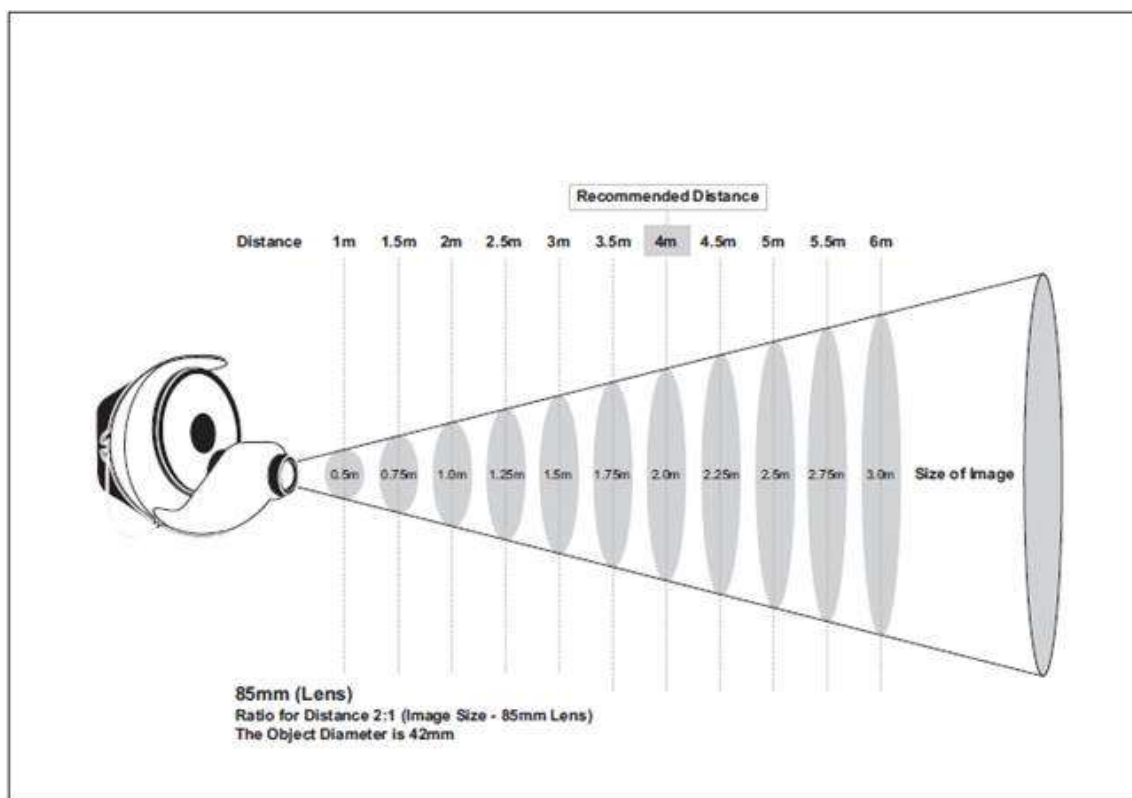

 - To turn the projector off without the app, press and hold the 'DIM – OFF – TIMER' button until the light turns off.

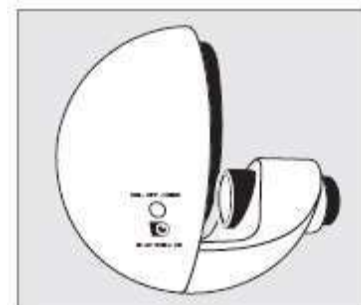

- To dim the image, press and hold down the 'DIM – OFF – TIMER' button until you reach your desired light output level. **Please note:** it may take up to 15 minutes for liquid wheels to start to work as these contain oil that will flow freely once warmed. This warmth will come from the projector.
- Use of the timer function is ideal for those who want to automatically turn the projector off after a certain time. Turn on the projector and wait 10 seconds. To start the timer double-click the 'DIM – OFF – TIMER' button. To indicate the timer starting, the projected light will flicker. The timer automatically sets to 30 minutes, and dimes down then turns off.
- Please note that a free APP will be available soon to make control even easier! This projector is not part of the ROMPA® Wi Fi range of products, and so it cannot be controlled using ROMPA®'s wireless controllers such as the 8 Colour Wirefree Controller.

14. Care and Maintenance

- Use and store in dry environments and moderate climates only. Avoid excessive heat, humidity, dust and vibration.
- Unplug before any cleaning and servicing.
- Do not attempt to take the projector apart.
- To clean the focusing lens, use a soft tissue or lens cloth with a little methylated spirit or pure alcohol.
- Do not attempt to service this projector unless you are qualified to do so and you are working under the direction of the manufacturer.
- Pull the plug to disconnect from the mains – do not pull the cord to unplug the projector.



15. Troubleshooting

Not applicable.

Further copies of these instructions can be downloaded at www.rompa.com

We hope you find our instructions invaluable. If you have any suggestions for improving them further your comments will be greatly received – please contact us at

producthelp@rompa.com