



1. Product Name

Large Colour Changing Egg / Pebble / Ball

2. Product Code

21740 (Egg)

22268 (Pebble)

22269 (Ball)

3. Colour

White exterior with colour changing light

4. Brief Description

Big and beautiful, these illuminated hollow plastic forms provide captivating mood lighting for passive or interactive use. Strong, the shapes encourages movement and exploration. Includes a small remote control to select one of sixteen colours, or to fade through different shades. The colour spreads through the whole object.

5. Contents

- Colour changing form
- Mains power supply
- Base station recharging unit
- Remote control

6. Snoezelen® Stimulations

- Sight

7. Best Use

Use in/outdoors in a darkened environment. Bring inside after outdoor use and store in a dry area.

8. Compatible ROMPA® Products

Visit www.rompa.com for the full range of sensory products

9. Starting Up

- Choose a suitable location where the item can be seen and interacted with safely.

10. Detailed Description

Big and beautiful, these illuminated hollow plastic forms provide captivating mood lighting for passive or interactive use. Strong, the light encourages movement and exploration. Includes a small remote control to select one of sixteen colours, or to fade through different shades. The colour spreads through the whole shape. Low voltage mains power supply included and a base station recharging unit. Once charged for 6 hours, the egg can be taken off the base station to provide 10 hours of light. For use indoors or out. Water-resistant with an IP65 rating. Tested up to 80kg of load.

11. Safety



Please read all the following safety information before each use

ALWAYS SUPERVISE THE USE OF THIS PRODUCT

- Remove all packaging and either store this in a safe place out of reach of clients or dispose of this responsibly. Plastic bags and wrapping can be hazardous to children and vulnerable people.
- Keep away from sources of heat and fire.
- Do not fully immerse in water - the items are water resistant, not waterproof.
- Do not leave outside, store in a dry area.

IMPORTANT: WARNING PHOTOSENSITIVE EPILEPSY

In fast flashing or strobe mode, the light source may potentially trigger seizures with children that have a history of photosensitive epilepsy. We therefore recommend that you do not use the fast flashing or strobe mode and suggest the remote control should only be used by a responsible adult or under adult supervision.


12. Technical Specification

Size:	Egg:	42cmH x 30cm diameter
	Pebble:	40 x 40 x 20cm
	Ball:	40cm diameter

- Tested up to 80kg of load
- Water-resistant and rainproof with an IP65 rating
- Rechargeable. Once charged for 6 hours, they can be taken off the base station to provide 10 hours of light
- Low voltage and energy efficient
- Long life LED bulbs
- Adapter input ACV 100V-240V 50/60Hz
- Charging Plate input: DC 7.5V
- Operating Current: 600MA
- Charging Time: 6 hours
- Usage Time: 5-15 hours
- Remote control range: 3 metres
- Input voltages AC100 – 240V

13. Installation

- Ensure that a risk assessment of the area has been made and the surrounding area is clear from obstruction and access routes are clear to enable safe use of the product.
- Select the adaptor for your territory, UK, US, EU or AUS and click securely into position. Push button to remove adaptor.
- Plug the power cable into the mains.
- Place the LED light on top of the charging base and ensure that it is correctly seated. The indicator will glow orange until fully charged when it will glow green.
- The remote control can change the modes and colours of the shapes:

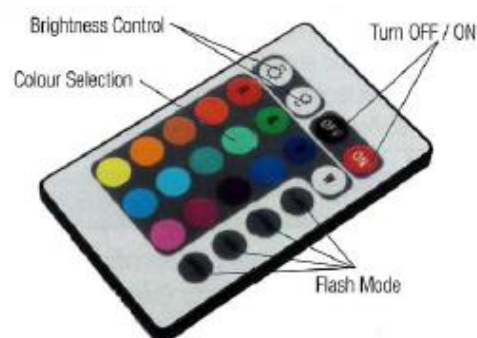

- **TURN OFF/ON:** Press to turn the LED light OFF/ON. There is also an OFF/ON switch on the base of each unit.
- **BRIGHTNESS CONTROL:** Adjust the brightness of the light up or down
- **COLOUR SELECTION:** 16 different colours can be select by pressing the appropriate button
- **FLASH MODE:** 4 different flash modes are available: Flash, Strobe, Fade and Smooth.

14. Care and Maintenance

- Extend battery life by charging when power is low, rather than allowing light to become completely exhausted.
- We advise cleaning this item with a non-abrasive mild soap solution and a clean cloth.
- Remote control and power adapter are NOT waterproof. Please keep away from water.

15. Troubleshooting

In the unlikely event of product failure, please check the following:

Problem: The form does not light up using the remote control

- Press the OFF/ON button on the panel on the underside of the form:
 - If the power supply is charging the form (if it is displaying the LED charging light), the problem is likely to lie with the remote control, rather than the power supply.
 - If the form lights up, keep pressing this OFF/ON button to click through the colours. Press and hold to switch off. If the form lights up using this manual button, check the battery in the remote control. If the remote control still does not work, even when a new battery is used, please contact us regarding a replacement remote control.
 - If the form does not light up when the OFF/ON button is pressed, please check that you are using the correct power supply (as shown in these instructions). Using a different power supply of a different/higher voltage is likely to cause a technical fault which will invalidate any possibility of repair/replacement. If the power supply is the same as that shown above, the form itself could be problematic and is likely to need returning to us for inspection.



Further copies of these instructions can be downloaded at www.rompa.com
We hope you find our instructions invaluable. If you have any suggestions for improving them further your comments will be greatly received – please contact us at producthelp@rompa.com