



1. Product Name

Balanza® Seesaw

2. Product Code

21934

3. Colour

As shown

4. Brief Description

A wonderful portable seesaw to encourage movement, co-operative skills, social play and team work.

5. Contents

1 x Balanza® Seesaw with pump

6. Snoezelen® Stimulations

Movement

7. **Best Use**

Use this product on a flat, horizontal, stable and dry floor in an area free of obstacles. Use as a social tool because the seesaw can only be used effectively when two children work together.

8. **Compatible ROMPA® Products**

See www.rompa.com for similar products, as well as mats and helmets.

9. **Starting Up**

- Place on a flat stable surface.
- Adjust the inflation if required.

10. **Detailed Description**

A wonderful portable seesaw to encourage movement, co-operative skills, social play and team work. Helps build co-ordination and balance skills, and an awareness of rhythm. Use indoors or out. The unique design attracts attention and draws youngsters to it. Birchwood with resilient Ruton balls and leather handles. Each ball can be individually adjusted with a pump and needle (included).

11. **Safety**

Always supervise the use of this product

On receipt, remove and dispose of all packaging responsibly.
Use this product on a flat, horizontal, stable and dry floor in an area free of obstacles.
Use the integral handles to keep seated users in position.

This product is not a toy. Any activity involving motion, height, or rotation may cause serious injury. This product is intended for use under the supervision of trained professionals.

12. **Technical Specification**

Size: 120L x 50W x 40cmH
Maximum weight supported: 150kg
Materials: phthalate-free and free from heavy metals
High grade Ruton, leather (straps) and birch wood ply (8 glued layers)

13. Installation

1. Adjust the inflation using the supplied ball pump and the needle valve in the Balanza® Seesaw. Add a little more air or release some air as required. Make sure that the product is at room temperature before making any adjustments. Inflate the parts evenly so that the product is level. Always moisten the needle before inserting the needle into the valve. Do not inflate the balls beyond a diameter of 14cm (40cm perimeter approximately). The recommended diameter is 11 to 12cm. The smaller balls should not be inflated beyond 7cm.

14. Care and Maintenance

- Regularly check the product for signs of wear and tear e.g. before each use. Replace the product if it is damaged.
- Store and use away from direct sunlight and away from sources of heat.
- If using this product outside, bring the product back inside after use. Make sure that the ground this is on is free of debris and any small objects that could puncture or damage the product.
- Avoid contact with sharp or pointed objects. Remove shoes with buckles or metal fastenings before use. Wear sport shoes or soft shoes when using this product, or use whilst barefoot.
- This product is not intended to be thrown – handle this product with care.
- To clean this product use a soft clean cloth dampened with water or with a mild household cleaning detergent. Do not use solvents, dissolvers, acidic cleaning products or corrosive cleaning products. Keep this product dry.

15. Troubleshooting

Not applicable

Further copies of these instructions can be downloaded at www.rompa.com

We hope you find our instructions invaluable. If you have any suggestions for improving them further your comments will be greatly received – please contact us at producthelp@rompa.com