



1. Product Name

Faux Flame 'Fireplace'

2. Product Code

22792

3. Colour

The plywood frame has a dark wood finish whilst the lights automatically cycle through various colours.

4. Brief Description

A focal point for any room. Far safer and more practical than a real fire, this visually appealing centrepiece implies warmth but does not heat up, avoiding the risk of injury and discomfort.

5. Contents

- 1 x Faux Flame 'Fireplace'

6. Snoezelen® Stimulations

- Sight

7. Best Use

Install indoors and either enjoy passively or with one of ROMPA®'s Wi Fi controllers for wireless interactivity. The Faux Flame 'Fireplace' is especially effective when used with other items from the Multi-Purpose Reminiscence Furniture range (see below). This product is decorative and not intended to be handled.

8. Compatible ROMPA® Products

ROMPA® offers an extensive range of sensory and reminiscence products. Please visit our websites www.rompa.com and www.olderadults.co.uk for more information.

Multi-Purpose Reminiscence Furniture

22793 Grandfather Glow Clock

22794 Multi-Purpose Television

22795 Illuminated Book Case

22791 Infinity Table

22789 Rocking Chair

22790 Fibre Optic Table

20525 Nostalgia Music Centre



Wi Fi compatibility

This unit is ROMPA® Wi Fi compatible, and therefore will respond wirelessly to the following remote controllers:

- 18870, 20402 - Talking Cubes
- 19847 – Deluxe 8 Colour Wirefree Controller
- 21006 - 8 Colour Wirefree Controller
- 19939 – Wi Fi Interactive Mat Switch Set
- 21917 – Wi Fi Microphone by ROMPA®
- 21918 Wi Fi Override Transmitter
- 20848, 21098 Sensory Magic®

9. Starting Up

- Choose a suitable location near to a wall socket.
- Plug in.

10. Detailed Description

A focal point for any room. Far safer and more practical than a real fire, this visually appealing centrepiece implies warmth but does not heat up, avoiding the risk of injury and discomfort. Adds character and sensory comfort to rooms that have central or underfloor heating. The mood lit area changes colour slowly to attract and keep attention whilst the retro styling is reminiscent of household styles of yesteryear. Mains-powered.

Size: 104L x 45W x 129cmH

The LED light strip used in the Faux Flame 'Fireplace' turns on automatically once plugged into the mains, automatically cycling through a rainbow of colours. The light strip is compatible with ROMPA® Wi Fi controllers and will change colour when a Wi Fi controller is in operation. When controlled in this way, the Wi Fi LED strip will change to the selected colour for one minute, before returning to automatic mode.

11. Safety

- **Always supervise the use of this product**
- This product weighs approximately 50kg – two people should take delivery of this product and install it.
- This product is decorative and not intended to be handled.
- This product is visual and decorative – it does not emit heat for safety reasons. Do not place any heating appliances onto the hearth area of this product.
- For indoor use only, in a dry and clean environment.

12. Technical Specification

Size: 104L x 45W x 129cmH
Power: Consumption 24 watts
Input: 100-240v AC 50/60Hz 0.7A
Output: 12v DC 60W ma
Weight: approximately 50kg

13. Installation

1. Choose an appropriate location for the Faux Flame 'Fireplace', bearing in mind that:
 - It needs to be plugged in (one plug)
 - This product can be used to provide a focal point for the room
 - The glow effect will be strongest in darker environments than in bright day light
 - The product weighs approximately 50kg – please choose a suitably flat and stable floor
 - This product is free-standing and does not need to be wall-mounted. Should you wish to secure this product to the wall, fixings are not included. Please purchase fixings that are appropriate to the construction of your wall, such as mirror plates.
2. Plug the product in. There is no ON/OFF switch – the product will light up automatically once plugged in. The light will change colour in sequence unless a ROMPA® wireless controller is used to choose a particular colour of light. The automatic colour light sequence will resume one minute after the ROMPA® wireless controller has been activated.
3. Suitably small, safe and light objects can be placed on the mantle piece to dress the 'fireplace' if desired.

14. Care and Maintenance

1. Periodically dust the product with a soft and dry cloth.
2. To remove any dirt or more persistent marks, use a soft and very slightly dampened cloth. Avoid the use of any cleaning products, especially abrasive cleaning products, bleach or anti-bacterial sprays as these can damage varnished/lacquered surfaces.

15. Troubleshooting

Not applicable

Further copies of these instructions can be downloaded at www.rompa.com

We hope you find our instructions invaluable. If you have any suggestions for improving them further your comments will be greatly received – please contact us at producthelp@rompa.com