



1. Product Name

Wireless Colour Controller Wall Mat

2. Product Code

22867

3. Colour

Main colour as chosen by customer

4. Brief Description

Press a circle on the wall mat to change the lights of ROMPA® products in the room to the corresponding colour. Encourages an understanding of cause and effect, reaching, movement and interaction.

5. Contents

1 x wall cushion

6. Snoezelen® Stimulations

- Visual

7. Best Use

Wall-mount in an environment that has ROMPA® wirelessly controllable products.

8. Compatible ROMPA® Products

ROMPA® offers a large range of Wi Fi responsive products - the range is continually growing – please see our catalogue and website – www.rompa.com. Some compatible products include:

20848, 21098 Sensory Magic™

19771 Midi Bubble Tube

19772-5 Maxi Bubble Tube

19777-80 Aquatic Bubble Tube

19776 Giant Maxi Bubble Tube

19767-770 Ball-Bubble Tube

19210 Light Source (and therefore our fibre optic products)

21452 2 Port Light Source (and therefore our fibre optic products)

22019, 21475 ROMPA® Waterless Rainbow Tube

22871 Colour Command Centre™

22869 Multifinity Explorer™

22872 Fireworks Extravaganza™

22870 Sound to Sight Showtime™

22874 Double Bubble Bonanza™

22873 Colour Catch Combo™

22875 Hip Hop Activity Box™

20287 Wi Fi Starry Sky Panel

20878 Wi Fi LED Spotlight

21002 Wi Fi LED Strip Light System

20845 Wi Fi Mood Lighting

18407 Illuminated Ballpool

18549 Vibro Tub

21001 Wi Fi LED Cube

20943 Interactive Aroma Panel by ROMPA®

9. Starting Up

- Wall-mount the mat

10. Detailed Description

Press a circle on the wall mat to change the lights of ROMPA® products in the room to the corresponding colour. Encourages an understanding of cause and effect, reaching, movement and interaction. A great alternative to mobile controllers in environments where there is a risk of these being thrown, misplaced or stolen. Also meets requirements of infection-control.

11. Safety

- Use indoors, in dry environments.



Please read all the following safety information before each use

ALWAYS SUPERVISE THE USE OF THIS PRODUCT

- Remove all packaging and either store this in a safe place out of reach of clients or dispose of this responsibly. Plastic bags and wrapping can be hazardous to children and vulnerable people.
- The mat contains a foam filling. Do not attempt to access the interior part of this product. Never allow children or vulnerable people to access the interior part of this product.
- Keep away from sources of heat and fire.

12. Technical Specification

Size: 90W x 115H x 10cmD
Power supply: fixed into the back of the mat
110V-240V input, 50/60Hz, 0.5A
12V output, 1.5A
CE, UL, GS, FC marked
Double-insulated

13. Installation

1. Wall-mount indoors on a suitably solid wall using fixings that are appropriate to the construction of your wall (e.g. mirror plates). Choose an appropriate location for this product bearing in mind the following:
 - One wall socket is required (product needs to be plugged in and cable comes out at one corner)
 - The mat can be installed any way up (there is no set top or bottom)
 - Users need to be able to access the coloured 'buttons' – install at a suitable height
 - This product requires, but does not include, ROMPA® wirelessly- controllable products, such as bubble tubes, deluxe wall panels and/or lighting

OPERATING INSTRUCTIONS

When pressure is applied to a 'button' the corresponding colour will be activated on the receiving ROMPA® product(s). Pressure is required – the colour choice cannot be activated by a light touch nor by proximity alone. For best results, press the centre of the 'button'.

The selected colour will remain activated in the receiving ROMPA® product until a new colour is selected. Should another 'button' not be pressed, after one minute, the colour of the ROMPA® product will revert to its automatic cycle – the light will scroll through a sequence of colours. In other words, the 'buttons' have a latched operation – the colour stays on for one minute unless another 'button' is activated.

14. Care and Maintenance

Fabric Care

- Always supervise the use of the product.
- Organise a regular cleaning schedule.
- Vinyl will crack, tear and rub off if subjected to sharp objects or continual rubbing by hard objects. Remove shoes, and avoid buckles, zips or sharp/hard/pointed objects coming into contact with the surface.
- Check seams regularly to ensure that these are not worn or split and the interior filling cannot be accessed.
- Wipe off accidental marks/liquids at the time they occur or are noticed.
- Avoid eating and drinking whilst using these products.
- Do not place near sources of heat or fire that may damage the surface (radiators, fires, underfloor heating, hot central heating pipes etc.)
- Direct contact with bright sunlight may affect material over time.
- Do not saturate the material with lots of water.
- Some of our products contain zips for manufacturing purposes only. Do not attempt to open these or to access the interior part of these products. Never allow children or vulnerable people to access the interior part of this product.

PVC (Vinyl)

- Use a soft brush remove all loose dust/dirt. Clean with a mild detergent (such as Lux soap flakes in luke-warm solution) applied to a sponge or damp cloth.
- This may be sanitised using a weak solution of Milton fluid.
- Do not use excessive amounts of water and always ensure the PVC is dry after cleaning.
- Do not use an abrasive cleaning pad.
- Do not use boiling/very hot water, washing up liquid / aggressive detergent or solvent based cleaner as this will cause the coating to discolour and go hard. Steam cleaning is not advised.

15. Troubleshooting

In the unlikely event of product failure, check:

- Is the product plugged in?
- Are the receiving ROMPA® products plugged in and switched?
Please note: This mat will only be compatible with ROMPA® Wi Fi products – it will not operate products from suppliers other than ROMPA®
- Is the power lead still connected to the power supply? The power supply does not have a green light to indicate it is working.
- Are all the air pipes still attached to the back of the switch pads (at the back of the mat)? If not, reconnect any detached pipes
- Check the 3A fuse in the plug

Further copies of these instructions can be downloaded at www.rompa.com
We hope you find our instructions invaluable. If you have any suggestions for improving them further your comments will be greatly received – please contact us at producthelp@rompa.com