



**Haley's Joy®**  
Swing Therapy Anywhere!

## Sensory Wrap Instruction Manual

### **WARNING**

**READ ENTIRE MANUAL BEFORE USE. THIS SWING IS NOT A TOY.**

**THIS SWING IS ONLY TO BE USED UNDER ADULT SUPERVISION. CONSULT WITH A CHILD'S THERAPIST ON HOW TO USE.**

**THIS SWING IS DESIGNED AS A THERAPEUTIC TOOL FOR A CHILD WITH DEVELOPMENTAL NEEDS. USE OF THE SWING SHOULD ALWAYS BE IN A CONTROLLED FASHION WITH AN ADULT'S HAND ON THE SWING, GUIDING THE MOTION.**

**THE SWING SHOULD ALWAYS BE GUIDED BY PLACING THE HANDS ON THE SWING, ITSELF. PUSHING ON THE CHAINS COULD RESULT IN EARLY FAILURE OF THE CHAINS AND VINYL.**

**ONLY UTILIZE THE SWING WITH ONE INDIVIDUAL AT A TIME, AND ALL HANDS AND FEET SHOULD BE KEPT OUT FROM UNDER THE SEAT.**

**THIS SWING IS A LOW MOTION DEVICE; KEEP THE SWING'S OCCUPANT / SEAT WITHIN THE PERIMETER OF THE FOUR LEGS. FAILURE TO DO SO CAN RESULT IN TIPPING OF THE SWING.**

**NEVER ALLOW THE INDIVIDUAL TO STAND ON / IN THE SWING; EVEN DURING THERAPY.**

**THE SWING IS DESIGNED TO BE USED CLOSE TO THE GROUND, APPROXIMATELY 10".**

**THERE IS NO SEAT BELT. CARE MUST BE TAKEN NOT TO ALLOW THE CHILD TO FALL OFF THE SWING.**

**CHOKING HAZARD: DO NOT ALLOW EATING OR DRINKING ON THE SWING!**

**STRANGULATION HAZARD: DO NOT ATTACH STRINGS OR ROPES TO THE SWING OR PLACE THE SWING NEXT TO ANY STRINGS OR ROPES.**

**UNSUPERVISED USE OF THIS SWING CAN RESULT IN SEVERE INJURY. WHEN NOT IN USE, THE SWING MUST BE DISASSEMBLED AND STORED IN A SAFE PLACE.**

**WORKING LOAD:** 150 lbs for the On the Go - Size 1 Swing, 250 lbs for the On the Go - Size 2 Swing, and 300 lbs for the On the Go - Size Swing 3.



Take time to familiarize yourself with the use and maintenance of this equipment before using. Please keep this Instruction Sheet in an accessible location. The Instruction Sheet must be read and familiar to anyone who is using the Sensory Wrap. If this Instruction Sheet is misplaced, please visit the product page on the FlagHouse website or email ([haleysjoy@flaghouse.com](mailto:haleysjoy@flaghouse.com)) for a replacement.

## IMPORTANT

Please check equipment immediately for any damage that may have occurred in shipping. Contact FlagHouse immediately if there is a damaged piece 800.793.7900 (US & International) or 800.265.6900 (Canada).

## GENERAL INFORMATION

The Sensory Wrap Swing is designed to give the users another option to the platform seat. This swing is totally enclosed on both sides, giving the child a feeling of security and closeness. The open ends allow for easy entry / exiting of the child and access for therapy with the child.

## SWING CONSTRUCTION DETAILS

- The Sensory Wrap Swings are made of a durable soft micro suede material on the inside layer and a tough durable woven nylon material on the outside layer.
- All load carrying seams are double stitched for strength.
- There is a unique lightweight padded aluminum support structure that gives full swing support.
- The same type of spring clip connector that is used on the platform seat / board is used here for easy installation and removal. To prevent the swing from being used on the single point rotation hookup, this click is one size smaller. This swing is only to be used as a linear motion device.
- One chain can be removed from each clip and repositioned to the other clip; this will allow the Sensory Wrap to linearly swing in the other direction. Just remove the elastic band from the clips and reposition the chains. Put the bands back on to keep the chains together.
- The Sensory Wrap swing has 6" total range of adjustment, up and down, to accommodate the optimal height of usage.

## SWING ASSEMBLY / DISASSEMBLY DETAILS

The swing comes assembled out of the box; no assembly necessary. If it becomes necessary to disassemble the swings, the following steps should be followed:

- Remove the elastic bands / spring connectors from the chains.
- At one end of the aluminum support structure (tube) where there is an opening in the fabric, push the tube down until it can be accessed through the opening.
- Grasp the end of the tube with one hand and the upper part of the swing in the other. Carefully pull the tube out of the swing's pocket; feeding both chains through their individual openings as the tube is being pulled out. See *Figure One*. After removing the tube, set it aside. Repeat for the other side.
- To reassemble, just reverse the above steps. The tube is easier assembled if the chains are inserted first into the tube opening. Push the chains ahead of the tube and up towards the chain openings.



*Figure 1*

## CLEANING

Both layers / types of materials can be spot cleaned with water based products. The micro suede pillow cover (zippered) is removable. The pillow is moisture resistant. Do not soak the micro suede fabric, as it can cause water spots that are difficult to get rid of. After spot cleaning the micro suede, the material can be brushed to raise the nap.

There are several sites on the internet that give more detail on cleaning micro suede and woven nylon.



601 FlagHouse Drive | Hasbrouck Heights, NJ 07604 | 800.793.7900 | [flaghouse.com/haleysjoy](http://flaghouse.com/haleysjoy)



235 Yorkland Boulevard | North York, ON M2J 4Y8 | 800.265.6900 | [flaghouse.ca/haleysjoy](http://flaghouse.ca/haleysjoy)