



1. Product Name

One Button Radio

2. Product Code

55786

3. Colour

As shown

4. Brief Description

Retro style analogue radio that offers an easy way to listen to your favourite stations without the need to retune and change the volume.

5. Contents

- 1 x One Button Radio

6. Snoezelen® Stimulations

- Sound

7. Best Use

Place the One Button Radio on a stable surface and enjoy listening to the programmes.

8. Compatible ROMPA® Products

ROMPA® and WINSLOW® offers an extensive range of audible, retro and reminiscence activities. Visit www.rompa.com or www.winslowresources.com for more information.

9. Starting Up

Choose a suitable location indoors.

10. Detailed Description

Retro style analogue radio that offers an easy way to listen to your favourite stations without the need to retune and change the volume. Perfect for those who enjoy the same station all day, every day, or for those who find multiple controls difficult or confusing. Great for individuals with memory problems or dementia, dexterity problems or visual impairments.

11. Safety

- Use indoors, in dry environments.



Please read all the following safety information before each use

ALWAYS SUPERVISE THE USE OF THIS PRODUCT

- Remove all packaging and either store this in a safe place out of reach of clients or dispose of this responsibly. Plastic bags and wrapping can be hazardous to children and vulnerable people.
- Keep away from sources of heat and fire.

12. Technical Specification

Size: 33 x 15 x 19cmH
Batteries: 6 x LR14/Size C 1.5V

13. Installation

- Connect the power cable or insert the batteries (not included):



- Remove the front panel:



- Place the control knobs on the volume dial & tuning dial



How to turn your radio on/off

The One Button Radio has been designed to be controlled by one button.



The first time you use the One Button Radio you will need to select the volume to initiate power to the radio.

Once the initial volume has been set, simply push the button down and click the button into place to power on your radio. When you're finished, simply press the button once more to turn off your radio.

Choosing a radio station and volume

Step One: Turn ON the radio and select a radio frequency



Step Two: Tune the radio to your preferred station and set the volume



Step Three: Once you have selected your chosen AM/FM radio station, and you're happy with the volume, remove the control knobs



Step Four: After use the control knobs can be stored in the power compartment on the rear of the radio



Step Five: Replace the front panel



One button operation - on/off

The One Button Radio has been designed to be controlled by one button.



Simply push the button down and click the button into place to power on your radio. When you're finished, simply press the button once more to turn off your radio.

Your One Button Radio is set up and ready to use.

14. Care and Maintenance

If you look after your One Button Radio it should give you many years of service.

But please observe the following:-

1. Wipe off accidental marks using a cloth that has been lightly dampened with a mild detergent.
2. Do not use abrasive cleaners under any circumstances.
3. Dry after cleaning with soft cloth.

15. Troubleshooting

In the unlikely event of product failure, please check the following:

Problem: ***Reception is Poor***

- The One Button Radio is an analogue radio so the quality of reception can vary dramatically based on location.
- Try moving the radio to a different part of the room to get a better signal.

Further copies of these instructions can be downloaded at www.rompa.com
We hope you find our instructions invaluable. If you have any suggestions for improving them further your comments will be greatly received – please contact us at producthelp@rompa.com