



1. Product Name

Relaxer Bubble Tube by ROMPA®

2. Product Code

19120

3. Colour

Cream base

4. Brief Description

For passive, non-interactive use only.

5. Contents

Base Unit with Base Cover (cream plastic cover)

Bubble Tube Column with Bubble Tube Cap

Power Supply (black box)

6. Snoezelen® Stimulations

- Sight
- Sound

7. Best Use

For best effect, use in a darkened room.

8. Compatible ROMPA® Products



Cushioned Platform e.g. 14896 ... Please see www.rompa.com for our extensive range of cushioned platforms

Acrylic Mirror Panels e.g. 14892 ... Please see www.rompa.com for our extensive range of mirrors

20601 - Rapid water change pump

20698 - BCB Fluid

9. Starting Up

- Place on a flat, stable floor that is capable of holding the weight of this product.
- Fill with clean water carefully up to approximately 5cm (2") from the top of the tube.
- Put bubble tube cap on top of the bubble tube.
- Plug in the power lead and switch on.

10. Detailed Description

For passive, non-interactive use only. As this tube is not intended to be handled, a collar is not required. Ideal for those who wish to enjoy the bubble tube without switch interaction.

11. Safety

- Do not attempt to move the Bubble Tube while filled with water.
- Take extreme care when filling/emptying the Bubble Tube to ensure the electronics remain dry.
- Always disconnect the power cables when filling/emptying the Bubble Tube
- Always supervise the use of this product

12. Technical Specification


Pump:	Schego
Power Supply:	Input: 100-240V (47-63Hz) Output: 12V DC at 1.1A
Optimal Rating:	5W 12V AC
Dimensions:	130cmH x 10.5cm tube diameter; base 34 x 34 x 12cmD

Power supply and the adaptors for different countries:



13. Installation

1. Place on a flat, stable floor that is capable of holding the weight of this product.
2. Plug the power lead into **A**.

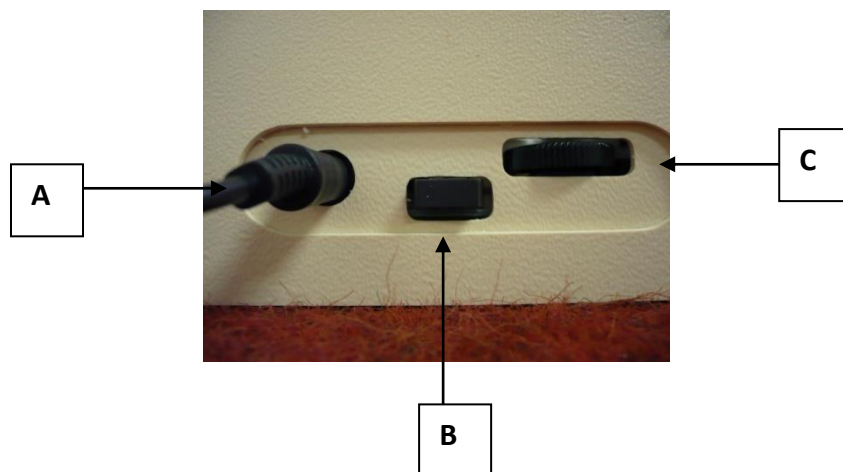

3. Fill with clean water carefully until the required level is achieved. This should be approximately 5cm (2 inches) from the top of the tube. The water level will rise when switched on. Make sure that the jug or bucket you are using to fill the tube is also clean. Put bubble tube cap (lid) on top of the bubble tube.
4. Switch ON using the ON/OFF button **B**.
5. Adjust the speed of the bubbles with dial **C**.

14. Care and Maintenance

- Regularly change the water and use a suitable water cleansing agent (e.g. BCB Fluid)
- The environment the Bubble Tube is in will affect how often the water needs to be changed. Bubble tubes in dark, damp environments with minimal ventilation will need changing at a different frequency to those in bright, well-ventilated rooms. Changing the water monthly is a good starting guideline. Plan for holidays. For example, if the bubble tube will be switched off for long periods, empty the water out. You do not want to return from a long holiday to find the water is green and unpleasant!
- If the tube is used in an area where lime-scale in water is a problem, it may be advisable to use an appropriate water softener
- Failure to cleanse your bubble tube water and/or use an appropriate water softener can block the valves of the bubble tube and so encourage product failure.
- Do not add bleach, coloured dyes or salt to the water
- Once this product is eventually exhausted, please dispose of it appropriately and responsibly.
- Do not turn the bubble tube upside down as this could dislodge the air stone. If the bubble tube is noisy, it is probable that the air stone has become dislodged.

TO EMPTY THE RELAXER BUBBLE TUBE

- Use an appropriate pump. Remove the cap (round lid at the top of the tube) and remove the water from the top of the tube using your pump. A pump is available separately from ROMPA®: code 20601. Alternatively, very carefully lift the tube up and pour the water away into an appropriate place, making sure that the tube is not turned upside down.

GENERAL CARE

- Wash the exterior of the Bubble Tube with a slightly soapy cloth. Wipe excess soap away with a damp cloth. **NOTE:** Never use solvent based cleaning products, methylated spirits, alcohol wipes or liquid detergents to clean the Bubble Tube.

15. Troubleshooting

In the unlikely event of product failure, please check the following:

*Problem: **No lights, no bubbles***

- Check that the bubble tube is plugged in at the wall
- Check that the Power ON/OFF button on the bubble tube is set to ON

Further copies of these instructions can be downloaded at www.rompa.com

We hope you find our instructions invaluable. If you have any suggestions for improving them further your comments will be greatly received – please contact us at

producthelp@rompa.com



1. Produit

Colonne à bulles Relaxer ROMPA®

2. Code

19120

3. Couleur

Crème

4. Brève Description

Une colonne à bulles attirante pour les utilisateurs passifs.

5. Contenu

Base avec un couvercle de base (couvercle couleur crème)

Colonne avec bouchon

Boîte de tension (boîte noire)

6. Stimulations Snoezelen®

- Vue
- Ouïe

7. Usage

Pour l'usage dans l'obscurité.

8. Produits Compatibles de ROMPA®



Plateforme rembourrée pour encastrer la base de la colonne à bulles ex. 14896 ... voir www.rompa.com

Panneaux miroirs en plexiglas ex. 14892 ... voir www.rompa.com

20601 - Pompe

20698 - Purificateur de l'eau BCB

9. Fonctionnement

- Mettez la colonne sur une surface plate et stable pouvant soutenir son poids.
- Connectez le câble de tension et branchez.
- Remplissez la colonne d'eau à moins de 5-10cm du haut.
- Mettez le couvercle en position et puis allumez.

10. Description

Une colonne à bulles attirante pour les utilisateurs passifs. Idéal pour les salles d'attente. Il n'est pas nécessaire d'utiliser le collier d'arrimage au mur puisque ce n'est pas le but de toucher cette colonne à bulles.

11. Sécurité

- Ne pas déplacer la colonne quand elle est remplie d'eau.
- Faire attention en remplissant/vidant la colonne – ne pas mouiller les parties électroniques.
- Débranchez avant de remplir/vider la colonne
- Il faut toujours surveiller l'usage de ce produit

12. Caractéristiques Techniques


Pompe:	Schego
Boîte de tension:	Alimentation: 100-240V (47-63Hz) Sortie: 12V DC à 1.1A
Puissance:	5W 12V AC
Dimensions:	130 cm de hauteur x 10.5 cm de diamètre; base 34 x 34 x 12 cm

Boîte de Tension et adaptateurs pour plusieurs pays :



13. Installation

1. Mettez la colonne sur une surface plate et stable qui pouvant soutenir son poids.
2. Connectez le câble de tension et branchez **A**.

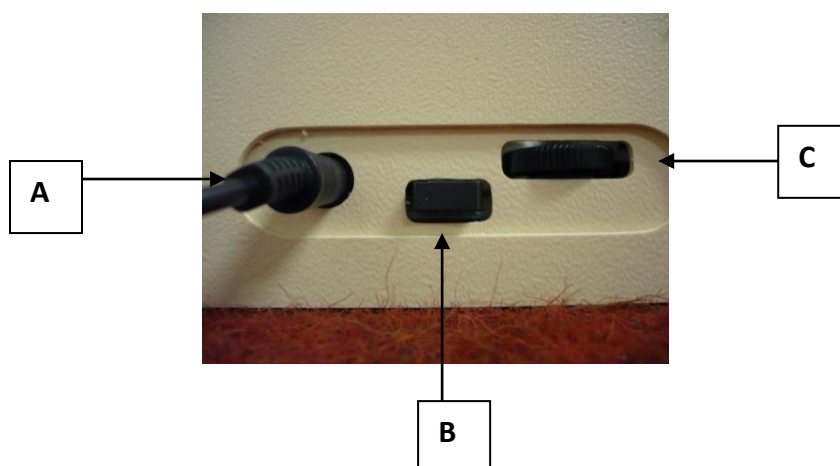

3. Procédez au remplissage. Remplissez la colonne de l'eau à moins de 5-10cm du haut. Le niveau de l'eau se lèvera dès qu'on allume. Vérifiez que votre récipient de remplissage soit propre. Mettez le bouchon en position.
4. Allumez (le bouton ON/OFF) **B**.
5. Réglez la vitesse des bulles en vous servant du cadran **C**.

14. Soin et Entretien

- Rajoutez de l'eau et ajoutez un stérilisateur d'eau convenable (ex. BCB)
- La position de la colonne influencera la fréquence de vidange. Il faut vider plus souvent les colonnes placées dans les salles obscures et humides avec peu de ventilation plutôt que celles placées dans les salles claires et bien ventilées. Une vidange chaque mois est recommandée. Pendant les vacances, si la colonne reste débranchée pendant longtemps, il est préférable de la vider.
- Remplir votre colonne avec de l'eau déminéralisée.
- Si vous ne respectez pas ces consignes (vidange, utilisation de BCB et d'adoucisseur etc.) risque l'obstruction des tuyaux et donc la panne de la colonne.
- Ne pas verser d'eau de Javel, de teintures ou de sel dans l'eau.
- Ne pas renverser la colonne (pour ne pas déboîter les éléments du mécanisme, pompe etc...). Si votre colonne est bruyante, il est probable que certains éléments soient détachés.

POUR VIDER LA COLONNE RELAXER

- Servez-vous d'une pompe (ex. 20601). Enlevez le bouchon et pompez l'eau du dessus de la colonne. Autrement, levez la colonne avec grand soin et videz l'eau dans un récipient. Ne pas renverser la colonne.

SOIN

- Nettoyez l'extérieur de la colonne avec un chiffon légèrement savonneux et puis essuyez avec un chiffon propre. **N.B.** Ne jamais utiliser de solvants, de détergents, ou d'alcool à brûler.

15. En cas de problèmes

Problème: Il n'y a pas de lumières ou de bulles

- Vérifiez que la colonne soit branchée
- Vérifiez que la colonne soit allumée (ON)