



1. Product Name

Illuminated Vibrating Ballpool by ROMPA®

2. Product Code

19273

3. Colour

This product is offered in a range of colours. Please specify choice when ordering.

4. Brief Description

Two of our products in one! The Illuminated Vibrating Ballpool includes everything the Illuminated Ballpool does, but now we are offering vibration and music whilst the colour of the balls change.

5. Contents

- 4 x straight walls
- 2 x raised floor sections with LED lighting and speakers
- Power supply and mains lead and splitter box
- 9 x Boxes of 7.5cm balls

6. Snoezelen® Stimulations

Sight
Proprioception

7. Best Use

Position indoors in a suitable space, free from obstacles and obstructions enabling safe use. We suggest that nearby cushioned wall and floor space are considered to keep users of the equipment as safe as possible.

8. Compatible ROMPA® Products

ROMPA offer a range of floor and wall cushioning and soft play equipment. Please see our website www.rompa.com for our full range. Products that are particularly pertinent to this product are:

21986 Hi-Fi Audio System with Bluetooth
15283 Net washing bag

9. Starting Up

- Unpack carefully and dispose of packaging carefully.
- Position on a suitable floor in chosen position. Choose a safe space, located away from any obstacles or hazards. Consider cushioning surrounding the area and on the floors.
- Assemble the ballpool following the instructions below.
- Connect to a music system.
- Fill with the ballpool balls provided.

10. Detailed Description

Two of our products in one! The Illuminated Vibrating Ballpool includes everything the Illuminated Ballpool does, but now we are offering vibration and music whilst the colour of the balls change. Requires a quality music system with at least 50w per channel, such as our 21986. The interior is white unless otherwise specified. Please specify the colour choice for the exterior for ordering. Includes 9 boxes of 7.5cm Clear Balls. This product contains wood.

11. Safety

Always supervise the use of this product

- For indoor use only.
- Do not place near sources of heat or fire that may damage the surface (radiators, fires, underfloor heating, hot central heating pipes etc.)
- Some of our products contain zips for manufacturing purposes only. Do not attempt to open these or to access the interior part of these products. Never allow children or vulnerable people to access the interior part of this product.

12. Technical Specification

Size: 72.5cmH x 217cm square

Input: 110v/240V T2 amp fuse

Output: 12V DC T5 amp fuse

Fuses are in the power supply and plug

Lights: LEDs

ROMPA® uses latex-free foam to make our ballpools.

Our ballpool balls (e.g. 13674 etc) are also latex-free

13. Installation

ASSEMBLY

1. Ensure that the Illuminated Ballpool is sited in a suitable position near an electric mains supply.
2. Position the two raised floor sections in the required position, ready to build the four walls around them
3. As there are two sources of light in this ballpool, the two raised floor sections are positioned side by side and connected by male/female plugs which are located on the under side of the raised floor sections.
4. There are two leads on the first half of the base (which need connecting to the second half), a thick white cable and four coloured cables linked together. Both cables plug into the circuit board on the second half in the same place as they are connected on the first half.

OPERATION


A 2-way speaker control is provided to allow a selection of sound and vibrations either through the integral ballpool speakers, through external speakers, or both at the same time.

1. Insert the two leads from the integral speakers into **SPEAKER #1 OUT** on the 2- way switch.
2. Insert leads from external speakers into **SPEAKER #2** on the 2-switch.
3. Insert leads from music system into **SPEAKER INPUT** on the 2-way switch.
4. Plug in music system.


5. Select the required operation (tape/CD/radio) and adjust volume to required level.
6. **SWITCH 1** on the 2-way switch operates the integral speakers in the Vibro Tub.
SWITCH 2 on the 2-way switch operates the external speakers. Any variation may be selected.
NOTE: A high bass setting produces more vibration.

PLEASE NOTE

Music Systems supplied approximately 2008 onwards may have different speaker connections compared with those of earlier models of music systems. Please refer to the diagrams below in case you have a newer model of music system. Older models of music systems tended to have small sockets with a round hole in that were covered by a small pushable cover (often red and black):

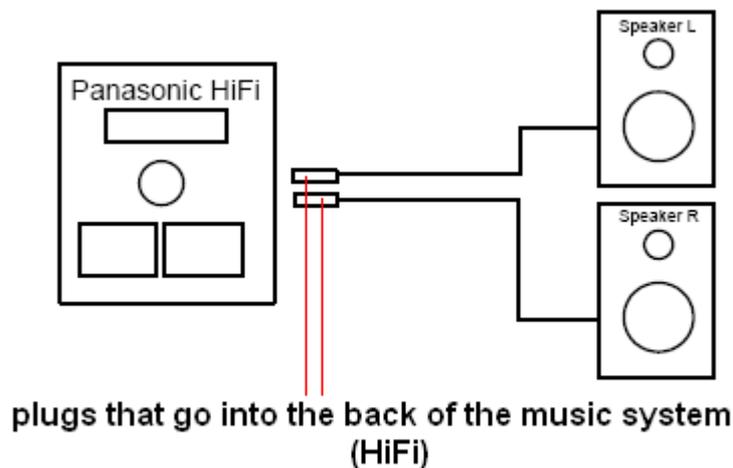

Please refer to the revised image below to show the connection of ROMPA® products to newer models of music systems.

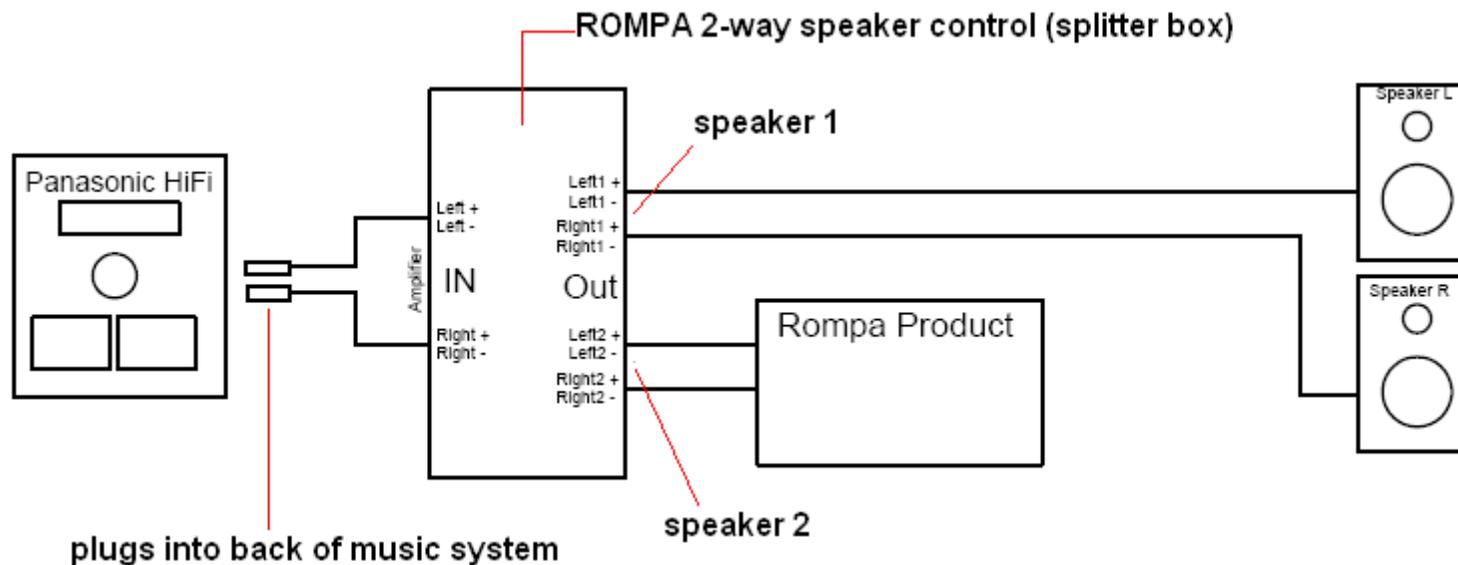

If required, i.e. depending on your music system, it may be necessary to follow the steps outlined below:

1. Cut the speaker cables approximately 30cm from the plugs
2. Strip the ends of the wires attached to the plugs and connect to 'IN' of the ROMPA[®] 2-way speaker control (splitter box).
3. Strip the ends of the wires attached to the speakers and connect to 'OUT' of the ROMPA[®] 2-way speaker control (splitter box), Channel 1.
4. Connect the ROMPA[®] product (i.e. Illuminated Vibrating Ballpool) to 'OUT' of the ROMPA[®] 2-way speaker control (splitter box), Channel 2.
5. Use the switch on the ROMPA[®] 2-way speaker control (splitter box) to direct the sound to either: Speakers, ROMPA[®] product (i.e. Illuminated Vibrating Ballpool), or both.

ASSEMBLY CONTINUED

1. Push the two halves of the floor together.
2. Ensure that the mains lead (and power supply) extend away from the raised floor towards the electric mains supply.
3. It is recommended that the power supply be fitted to the room wall close to the electric mains supply. **Use only the power supply provided.**
4. Build the walls around the raised floor sections, inserting the wooden tongue of one wall into the slot on the other, ensuring the wooden hooks fully engage.
CARE SHOULD BE TAKEN WHEN LIFTING AND POSITIONING WALL SECTIONS BECAUSE OF THEIR SIZE AND WEIGHT.
The tongued wall will rise as it is inserted and then drop level with the slotted wall when they fully engage.
TO AVOID SPRAINING THIS JOINT KEEP THE ANGLE OF THE WALL AT 90°.
5. Repeat this procedure for all the walls.
6. Ensure that all leads are connected. Plug in to electric mains supply. Switch on. The light will appear and change colour in sequence.
7. Pour in the balls.

14. Care and Maintenance

- This product uses LEDs for lighting. It is highly unlikely that the LEDs will need to be changed.
- Organise a regular cleaning schedule.
- Vinyl will crack, tear and rub off if subjected to sharp objects or continual rubbing by hard objects. Remove shoes, and avoid buckles, zips or sharp/hard/pointed objects coming into contact with the surface.
- Check seams regularly to ensure that these are not worn or split and the interior filling cannot be accessed.
- Wipe off accidental marks/liquids at the time they occur or are noticed.
- From time to time, if possible, lift floor cushion or move furniture to clean all surfaces and the floor underneath.
- Furniture and cushioning is intended to provide comfort and relaxation. Avoid eating and drinking whilst using these products.
- Do not steam clean.
- Direct contact with bright sunlight may affect material over time.
- Do not saturate the material with lots of water.

PVC (Vinyl) Care

- Use a soft brush remove all loose dust/dirt
- Clean with a mild detergent (such as Lux soap flakes in luke-warm solution) applied to a sponge or damp cloth.
- This may be sanitised using a weak solution of Milton fluid.
- Do not use excessive amounts of water and always ensure the PVC is dry after cleaning.

- Do not use an abrasive cleaning pad.
- Do not use boiling/very hot water, washing up liquid / aggressive detergent or solvent based cleaner as this will cause the coating to discolour and go hard.
- Steam cleaning is not advised.

15. Troubleshooting

Not applicable

Further copies of these instructions can be downloaded at www.rompa.com

We hope you find our instructions invaluable. If you have any suggestions for improving them further your comments will be greatly received – please contact us at

producthelp@rompa.com



1. Nome do Produto

Piscina de Bolas Vibratória Iluminada

2. Código do Produto

19273

3. Cor

Disponível em uma gama de cores.

4. Descrição Breve

São dois dos nossos produtos em um! A Piscina de Bolas Vibratória Iluminada inclui tudo o que a Piscina de Bolas Iluminada faz, mas agora nós oferecemos também a vibração e música enquanto as cores das bolas mudam.

5. Conteúdo

- 4 x Paredes direitas
- 2 x Secções de chão elevadas com iluminação LED e altifalantes
- Fonte de alimentação, cabo de corrente e comutador
- 9 x Caixas de bolas de 7.5cm

6. Estimulação Snoezelen®

Vista
Propriocepção

7. Melhor Utilização

Utilize no interior. Escolha um espaço seguro localizado longe de quaisquer obstáculos ou perigos. Escolha uma superfície plana e estável que possa suportar facilmente o peso do produto com uma pessoa. Use almofadas de parede e chão.

8. Compatibilidade com Produtos ROMPA®

Visite por favor nosso Web site www.rompa.com para ver todos nossos produtos.

21986 Sistema Audio Hi-Fi com Bluetooth
15283 Saco de Rede para Lavagem

9. Começar

- Retire a embalagem. Armazene a embalagem com segurança e fora de alcance ou jogue fora adequadamente. Os sacos plásticos e o embalagem podem ser danificadores.
- Utilize numa superfície plana e estável que possa suportar facilmente o peso do produto com uma pessoa. Escolha um espaço seguro, localizado longe de quaisquer obstáculos ou perigos.
- Use almofadas de parede e chão.
- Montar o ballpool seguindo as instruções abaixo.
- Ligar a um sistema de música.
- Coloque as bolas.

10. Descrição Detalhada

São dois dos nossos produtos em um! A Piscina de Bolas Vibratória Iluminada inclui tudo o que a Piscina de Bolas Iluminada faz, mas agora nós oferecemos também a vibração e música enquanto as cores das bolas mudam. Requer um sistema de música de qualidade, com pelo menos 50w por canal- veja 21986 na página 175. Se não houver indicação em contrário, o interior será branco. Por favor, especifique a cor do exterior ao encomendar. Inclui 9 caixas de bolas transparentes de 7.5cm. Este artigo contém madeira.

11. Segurança

Supervisione sempre a utilização deste produto

- Utilize no interior, em ambientes secos.
- Use e guarde longe de fontes de calor, fogo e luz solar direta.
- Alguns dos nossos produtos contêm zíperes apenas para fins de fabricação. Não tente abrir estes ou para acessar a parte interior destes produtos.

12. Especificações Técnicas

Tamanho: 72.5cmA x 217 x 217cm

Entrada: 110/240V fusível T2A

Saída: 12V DC fusível T5A

Os fusíveis estão na fonte de alimentação e na ficha

Luzes: LEDs

A Rompa® utiliza espuma sem latex para fazer as piscinas de bolas.

As nossas piscinas de bolas não têm látex

13. Instalação

INSTRUÇÕES DE MONTAGEM

1. A piscina de bolas deve estar posicionada junto de uma tomada.
2. Posicione as duas secções de chão na posição desejada, prontas para colocar as quatro paredes à sua volta.
3. Uma vez que existem duas fontes de luz nesta piscina de bolas, as duas secções de chão são posicionadas lado a lado e ligadas com fichas macho/fêmea que estão situadas na parte de baixo das secções do chão elevado.
4. Ligue o cabo D na entrada D. Ligue o cabo de 12V na entrada de 4 pinos no quadro PCB, garantindo que o pino de localização está virado no sentido correto para prender a ligação em posição. Quando estiver a baixar o chão, deve ter atenção para não deixar nenhum cabo preso debaixo do chão.

FUNCIONAMENTO


É fornecido um comutador de 2 vias para permitir uma seleção de sons e vibrações através dos altifalantes da piscina de bolas ou através dos altifalantes externos, ou ambos ao mesmo tempo.

1. Introduza os dois cabos dos altifalantes integrados na ligação **SPEAKER #1 OUT** no comutador.
2. Introduza os cabos dos altifalantes externos na ligação **SPEAKER #2** no comutador.
3. Introduza os cabos do sistema de música na ligação **SPEAKER INPUT** no comutador.
4. Ligue o sistema de música.
5. Selecione a função pretendida (CD/rádio) e ajuste o volume no nível desejado.


6. O **SWITCH 1** no comutador opera os altifalantes internos da piscina de bolas. O **SWITCH 2** no comutador opera os altifalantes externos. Pode ser selecionada qualquer variação.

NOTA: Uma configuração com mais baixos produz mais vibrações.

NOTA: Os sistemas de música fornecidos a partir de 2008 podem ter ligações diferentes das existentes nos modelos mais novos. Por favor consulte os diagramas abaixo caso tenha um modelo mais recente. Os modelos mais velhos costumam ter pequenas ligações redondas (normalmente vermelho e preto):

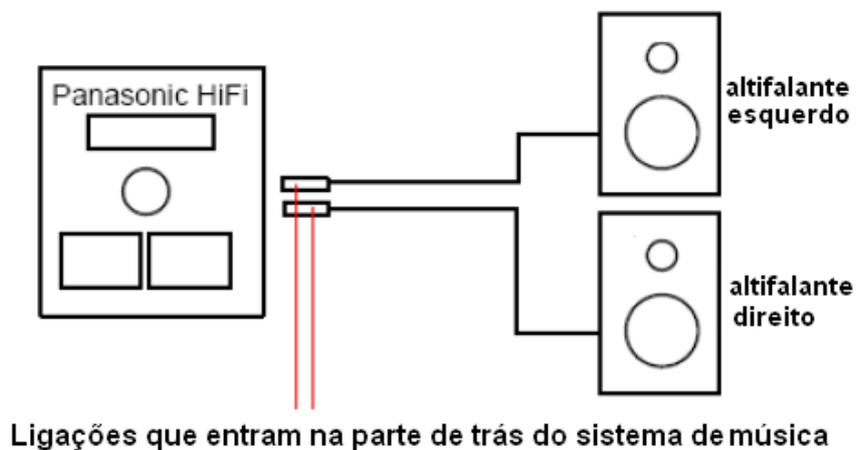

Por favor consulte a imagem abaixo que mostra as ligações dos produtos Rompa a modelos mais recentes de sistemas de música.

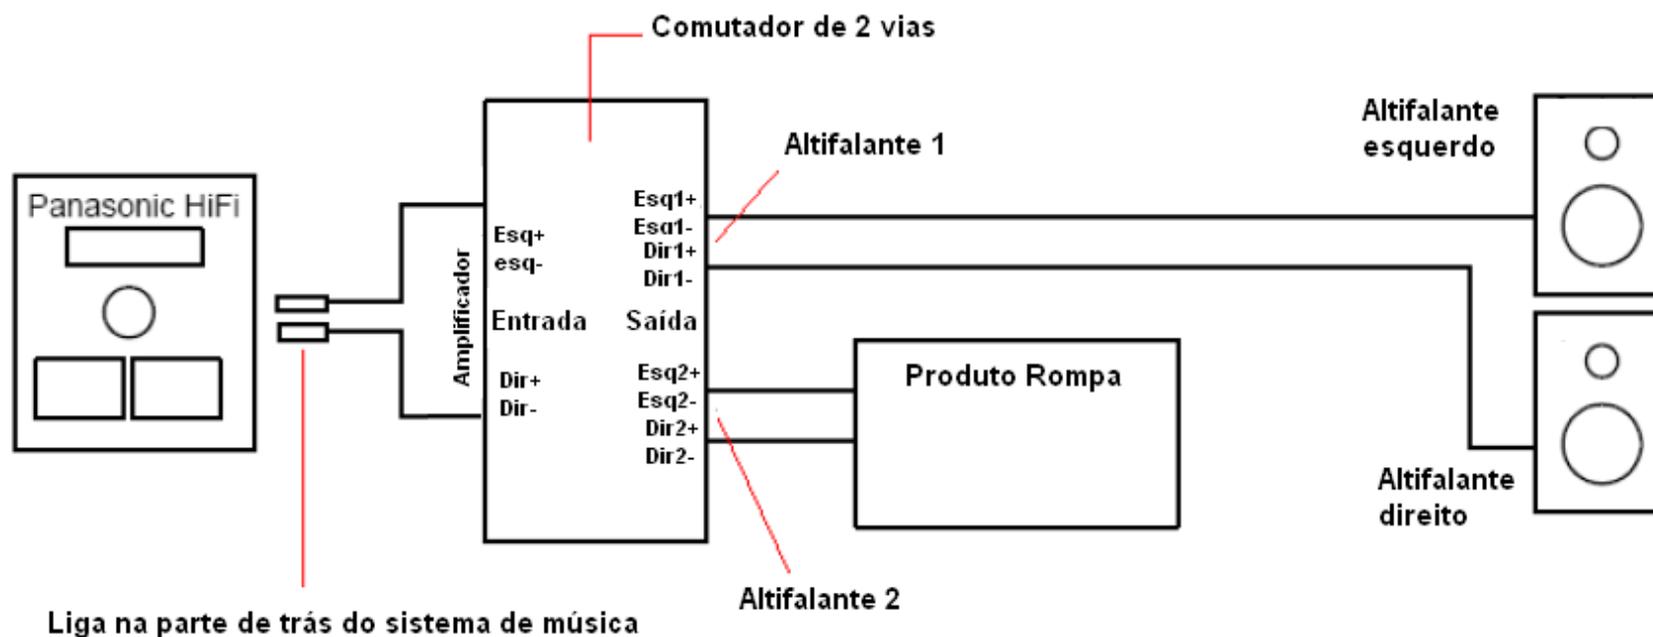

Caso seja necessário, dependendo do seu sistema de música, pode ser necessário seguir os passos descritos abaixo:

1. Corte os cabos dos altifalantes aproximadamente a 30cm da ponta.
2. Descarne as pontas dos cabos presos nas pontas e ligue na conexão "IN" do comutador.
3. Descarne as pontas dos cabos presos aos altifalantes e ligue-os na conexão "OUT" do comutador, canal 1.
4. Ligue o produto ROMPA® (piscina de bolas) na conexão "OUT" do comutador, canal 2.
5. Utilize o botão no comutador para direcionar o som para: Altifalantes, produto rompa (piscina de bolas) ou para ambos.

CONTINUAÇÃO DAS INSTRUÇÕES DE MONTAGEM

1. Junte as duas metades do chão.
2. O cabo de alimentação (e fonte de alimentação) deve estar estendido na direção da tomada
3. Recomendamos que a fonte de alimentação seja instalada na parede da sala perto da tomada. **Utilize apenas a fonte de alimentação fornecida.**

4. Construa as paredes à volta das secções do chão, introduza a língua de madeira de uma parede dentro da ranhura da outra, garantindo que o gancho de madeira fica bem engatado.
DEVE TER CUIDADO QUANDO ESTIVER A ENCAIXAR E A POSICIONAR AS PAREDES DEVIDO AO SEU TAMANHO E PESO.
A parede com a língua vai elevar-se à medida que é encaixada e depois baixa ficando engatada.
PARA EVITAR DANIFICAR ESTA UNIÃO, MANTENHA AS PAREDES NUM ÂNGULO DE 90º.
5. Repita o procedimento com todas as paredes.
6. Verifique se todos os cabos estão ligados. Ligue na tomada. Ligue. A luz acende e começa a mudar de cor sequencialmente.
7. Coloque as bolas.

14. Cuidado e Manutenção

- Este produto usa LEDs para iluminar. É altamente improvável que os LEDs necessitem de substituição.
- Utilize no interior, em ambientes secos.
- Supervisione sempre a utilização deste produto.
- Organize uma agenda de limpeza regular.
- O vinil vai rachar, rasgar e “desgastar” se for sujeito a objetos afiados ou se for continuamente roçado por objetos duros. Evite utilizar sapatos, fivelas ou objetos afiados/duros.
- Verifique regularmente as costuras para garantir que o enchimento não é acessível.
- Limpe líquidos ou marcas acidentais imediatamente com um detergente macio e um pano húmido, evitando quantidades excessivas de água. Não lave com vapor.
- Não comer ou beber ao usar este mobiliário.
- Não utilize produtos de limpeza com abrasivos ou à base de solventes.
- Não utilize detergente líquido da loiça. Não utilize produtos que contenham lixívia.
- Use e guarde longe de fontes de calor, fogo e luz solar direta.
- Alguns dos nossos produtos contêm zíperes apenas para fins de fabricação. Não tente abrir estes ou para acessar a parte interior destes produtos.

Vinil

- Use uma escova macia para remover toda a poeira / sujeira soltas.
- Limpe líquidos ou marcas acidentais imediatamente com um detergente macio e um pano húmido. Não utilize uma esponja abrasiva.
- Podem ser utilizados líquidos esterilizantes para mamadeiras.
- Limpe com um pano húmido, evitando quantidades excessivas de água.
- Não use água fervente / muito quente. Não lave com vapor.

15. Resolução de Problemas

Não aplicável