




## 19455 TWINKLE WANDS – SET OF 2

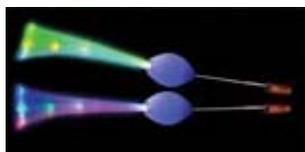

### CONTENTS

2 x Twinkle Wand

Each wand requires, and should include, 3 AAA batteries

### BEFORE USE

1. Remove all packaging.

### USE

1. Either hold/suspend by the cord to watch the LED display (as a mobile) or spin the cord for a display as shown below. Obviously if you choose to do the latter, do so carefully. Make sure there are no people or obstacles nearby – choose a clear, open and safe space.
2. Stopping or slowing down the movement can move the product to the next colour effect.



### CARE & MAINTENANCE

Do not immerse in water

Clean using a very slightly damp cloth

Change the batteries as soon as operation becomes erratic

Once this product is eventually exhausted, please dispose of it appropriately

### Battery Care

- Install the batteries as indicated, observing the polarity +/-
- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries

- Remove weak or dead batteries
- Remove batteries if the product will be out of use for long periods
- Do not attempt to charge non-rechargeable batteries
- Do not short circuit the supply terminals
- Do not attempt to dispose of batteries by burning them
- If using rechargeable batteries, remove them from the product before recharging (if removable)

### **Battery Installation**

To remove/replace the batteries:

1. Gently remove the outer elastic rubber cover from the plastic handle by peeling back the cover starting from the large hole end of the rubber cover until the rubber cover clings to the pull string
2. Use a Philips (positive/cross-head) screwdriver to remove the four screws from the plastic shell
3. Gently remove the top 'half' of the plastic shell to access the batteries
4. Remove and replace the batteries as required
5. Replace the top 'half' of the plastic shell and replace and secure the four screws
6. Replace the rubber cover

### **SAFETY**

Always supervise the use of this product.

For 3 years and over (batteries are small parts).

Not suitable for those who mouth

Use in a safe, open safe free of people and obstacles if spinning the wands

### **TROUBLESHOOTING**

In the unlikely event of product problems, please try the following:

- Check the batteries and replace as required
- The product is switched on automatically – there is no ON/OFF switch

### **SPECIFICATION**


Meets all appropriate requirements of EN71

Made of plastics and rubber

Uses 3 AAA batteries



## 19455 VARINHAS CINTILANTES 19455 – CONJUNTO DE 2

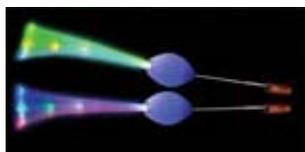

### CONTEÚDO

2 x varinhas cintilantes

Cada varinha requer e deve incluir, 3 pilhas AAA

### ANTES DE UTILIZAR

Remova toda a embalagem

### UTILIZAÇÃO

1. Segure/suspenda pelo fio para observar os LEDs ou ande com ele à volta para obter o efeito visual ilustrado. Obviamente, se decidir fazer o último, faça-o com cuidado. Verifique se não há pessoas ou obstáculos por perto – escolha um local aberto, desimpedido e seguro.
2. Parar ou abrandar o movimento pode levar o produto para o próximo efeito de cores.



### CUIDADOS E MANUTENÇÃO

Não submerja em água.

Limpe utilizando apenas um pano humedecido.

Substitua as pilhas assim que o funcionamento se tornar errático.

Quando este produto estiver gasto, deposite-o num local apropriado.

### CUIDADOS COM AS PILHAS

- Instale as pilhas conforme indicado, observando a polaridade +/-

- Não misture pilhas novas com pilhas velhas
- Não misture pilhas alcalinas, standard ou recarregáveis
- Remova as pilhas fracas ou gastas
- Remova as pilhas se o produto estiver desligado por um longos períodos
- Não tente recarregar pilhas que não sejam recarregáveis
- Não coloque os terminais das pilhas em curto-circuito
- Não deite as pilhas no lume
- Se estiver a utilizar pilhas recarregáveis, remova-as do produto antes de recarregar (se removíveis)

### **INSTALAÇÃO DAS PILHAS**

Para remover/substituir as pilhas:

1. Remova a borracha elástica da pega
2. Utilize uma chave em Philips (estrela) para remover os quatro parafusos do invólucro plástico
3. Remova a metade superior do invólucro plástico para ter acesso às pilhas
4. Remova e substitua as pilhas
5. Volte a colocar o invólucro plástico e os parafusos removidos anteriormente.
6. Coloque a cobertura de borracha

### **SEGURANÇA**

Supervisione sempre a utilização deste produto

Para idades a partir dos 3 anos (as pilhas são peças pequenas).

Não é adequado para quem tenha tendência de colocar as coisas na boca

Utilize num local seguro, aberto e sem pessoas e objectos em redor se for girar as varinhas

### **RESOLUÇÃO DE PROBLEMAS**

Na eventualidade de haver problemas com este produto, tente o seguinte:

- Verifique as pilhas e substitua-as se necessário
- O produto liga-se automaticamente – não existe um botão ON/OFF

### **ESPECIFICAÇÕES**

Em conformidade com os requisitos de EN71

Feito de plásticos e borracha

Utiliza 3 pilhas AAA