



## **1. Product Name**

8 Colour Wirefree Controller

## **2. Product Code**

21006

## **3. Colour**

White

## **4. Brief Description**

A much simplified version of 19847. Wirelessly controls the colours of many of our products (Wall Panels, Bubble Tubes, Light Source and so on), but without sound, timer facility or LCD display. Also controls bubbles of ROMPA® bubble tubes and Bubble Wall Panel.

## **5. Contents**

- 1 x controller
- 1 x international battery charger
- 1 x USB lead

## **6. Snoezelen® Stimulations**

- Sight
- Touch

## **7. Best Use**

Use indoors with Wi Fi responsive products.

## **8. Compatible ROMPA® Products**

19771 Midi Bubble Tube  
19772-5 Maxi Bubble Tube  
19777-80 Aquatic Bubble Tube  
19776 Giant Maxi Bubble Tube  
19767-770 Ball-Bubble Tube  
19210 Light Source  
21452 2-Port Light Source  
19214 Colour Changing Panel  
19209 Colour Match Panel  
18523 Bubble Wall Panel  
19603 Catherine Wheel Panel  
18537 Interactive Fibre Optic Fountain Panel  
18544 Fireworks Panel  
20132 Snow Panel  
22019, 21475 ROMPA® Waterless Rainbow Tube  
20566 Infinity & Beyond  
20287 Wi Fi Starry Sky Panel  
20942 Sound to Light Wall Panel  
20943 Interactive Aroma Panel  
Simple switches

## **9. Starting Up**

- Press a button and the controller comes ON automatically.
- Press a coloured button to change the colour of the Wi Fi responsive product(s) e.g. blue button to turn the product light blue.
- Press the central button to turn bubble tube/wall bubbles ON and OFF.

## **10. Detailed Description**

A much simplified version of 19847. Wirelessly controls the colours of many of our products (Wall Panels, Bubble Tubes, Light Source and so on), but without sound, timer facility or LCD display. Also controls bubbles of ROMPA® bubble tubes and Bubble Wall Panel. With 2 external jack sockets to add your own switches, enabling the user to step through the colours and / or turn bubbles on and off. Not compatible with Sensory Magic™. The buttons are not illuminated – neither when not in use, nor when pressed.

## 11. Safety

- Supervise the use of this product.
- The interior of the switch should not be accessed.

## 12. Technical Specification

Size: 37cm diameter x 12cmH  
Weight: 1340g  
CE: This product meets the requirements of EN60950  
Frequency: Operates on 2.4GHz  
Transmit power: +0 dBm (roughly 0.001 Watts)

## 13. Installation

1. This 8 Colour Wirefree Switch has been designed to be simple to use and has no ON/OFF switch. The switch turns itself on automatically as a button is pressed and turns itself off automatically after each button press.
2. Press a coloured button to change the colour of the Wi Fi responsive product(s) e.g. blue button to turn the product light blue; red button to turn the product light red and so on.
3. Press the central bubble / reset button (shown right) to turn bubble tube/wall bubbles ON and OFF. The switching is latched – press once to stop the bubbles and press again to re-start them. If the bubbles are switched off and the central button is not pressed again, the bubbles will automatically restart after approximately 1 minute.
4. The central button also allows the controller to be reset. Press and hold down the central bubble / reset button for 5 seconds to reset room colours to their automatic cycle through a rainbow of colours.



### External jack sockets

2 external 3.5mm jack sockets are included for switch operation:



colour step  
jack socket

bubble control  
jack socket

USB  
socket

battery charging  
indicator light

### **Colour Step Jack Socket**

Attach a switch to this jack socket to enable the user to step through all 8 colours with one simple switch action.

### **Bubble Control Jack Socket**

Attach a switch to this jack socket to enable the user to turn bubble tube and bubble wall panel bubbles on and off with one simple switch action

## **14. Care and Maintenance**

### **Recharging the Controller**

- Plug the battery charger provided into the USB socket and turn the mains power on. The green indicator light will illuminate to show that the switch is being charged. The green light will go out when the switch is fully recharged.

DO NOT ATTEMPT TO ACCESS THE INTERIOR OF THIS SWITCH

### **General Care**

- Store in a clean, dry place when not in use.

## **15. Troubleshooting**

*Not applicable*

Further copies of these instructions can be downloaded at [www.rompa.com](http://www.rompa.com)

We hope you find our instructions invaluable. If you have any suggestions for improving them further your comments will be greatly received – please contact us at

[producthelp@rompa.com](mailto:producthelp@rompa.com)



## 1. Produit

Télécommande de 8 Couleurs Sans Fil – modèle simple

## 2. Code

21006

## 3. Couleur

Blanc

## 4. Brève description

Une version simplifiée de la réf. 19847. Contrôle sans fil les couleurs d'un grand nombre de nos produits (panneaux muraux, colonnes à bulles, source lumineuse etc...) mais sans son, mécanisme de minuterie ou affichage à cristaux liquides.

## 5. Contenu

- 1 x Télécommande de 8 Couleurs Sans Fil
- 1 x chargeur
- 1 x câble USB

## 6. Stimulations Snoezelen®

- Vue
- Toucher

## **7. Usage**

Pour l'usage à l'intérieur avec les produits qui répondent au Wi Fi.

## **8. Produits Compatibles de ROMPA®**

19771 Colonne à Bulles Midi  
19772-5 Colonne à Bulles Maxi  
19777-80 Colonne à Bulles Aquatiques  
19776 Géant Colonne à Bulles Maxi  
19767-770 Maxi Colonne à Balles  
19210 Source Lumineuse  
21452 Source lumineuse avec 2 ports  
19214 Panneau de couleurs changeantes  
19209 Panneau couleurs composants  
18523 Mur de Bulles  
19603 Panneau Roue à Feu  
18537 Panneau Fontaine de Fibres Optiques  
18544 Panneau de feux d'artifice  
20132 Panneau de Neige  
19723 Totem avec lumière de diffraction  
20566 Panneau Au-delà de l'infini  
20287 Panneau d'étoiles Wi Fi  
20942 Mur Son et Lumière  
20943 Boite à Arômes ROMPA®  
Contacteurs simples

## **9. Fonctionnement**

- Appuyez sur un bouton et la télécommande s'allume de façon automatique.
- Appuyez sur un bouton coloré pour changer la couleur d'un produit Wi Fi ex. Appuyez sur le bouton bleu pour faire changer en bleu la lumière de votre produit Wi Fi.
- Appuyez sur le bouton au centre pour commencer/arrêter les bulles de la Colonne à Bulles ou le Mur de Bulles.

## **10. Description**

Une version simplifiée de la réf. 19847. Contrôle sans fil les couleurs d'un grand nombre de nos produits (panneaux muraux, colonnes à bulles, source lumineuse etc...) mais sans son, mécanisme de minuterie ou affichage à cristaux liquides. Non compatible avec Sensory Magic™.

## 11. Sécurité

- Il faut toujours l'usage de ce produit.

## 12. Caractéristiques Techniques

Dimensions: 37cm diamètre x 12cmH

Poids: 1340g

CE: Ce produit est conforme aux exigences de EN60950

Fréquence: Fonctionne sur on 2.4GHz

Puissance de transmission: +0 dBm (environ 0.001 Watts)


## 13. Installation

1. Cette télécommande est conçu pour l'usage simple, et par conséquent, elle n'a pas de bouton pour s'allumer/s'éteindre. La télécommande s'allume des qu'on appuie sur un bouton, et s'éteint de façon automatique après chaque toucher d'un bouton.
2. Appuyez sur un bouton coloré pour changer la lumière du produit (ou des produits) ROMPA® ex. appuyez sur le bouton bleu pour faire changer en bleu la lumière de votre produit Wi Fi; appuyez sur le bouton rouge pour faire changer en rouge la lumière de votre produit Wi Fi, etc.
3. Appuyez sur le bouton au centre (voir l'image à droite) pour commencer/arrêter les bulles de la Colonne à Bulles ou le Mur de Bulles.
4. Ce bouton au centre permet le réglage de la télécommande. En appuyant sur ce bouton, les bulles cessent. Les bulles recommenceront après environ une minute ou si on appuie de nouveau sur ce bouton. Appuyez sur ce bouton, et le tenez pendant 5 secondes pour régler de nouveau la télécommande pour que les couleurs des produits Wi Fi changent de couleur automatiquement.



### Prises jack

La télécommande a deux prises males de 3.5mm pour les contacteurs:

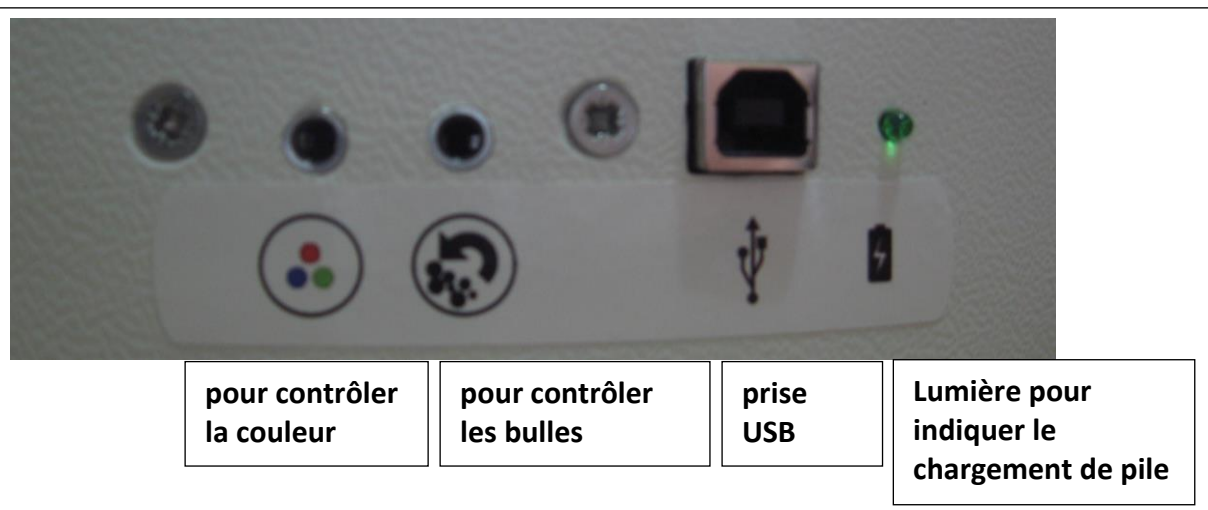

**Prise pour contrôler la couleur**

Introduisez un contacteur dans cette prise pour passer entre tous les huit couleurs, en séquence, une à la fois (chaque appui change la couleur).

**Prise pour contrôler les bulles**

Introduisez un contacteur dans cette prise pour faire commencer/arrêter les bulles de votre Colonne à Bulles/Mur de Bulles.

**14. Soin et Entretien****Recharger la Télécommande**

- Introduisez le chargeur dans la prise USB et branchez. La lumière verte s'allume pour indiquer le chargement. Cette lumière s'éteint dès que le chargement soit fini.

NE PAS ESSAYER D'ACCEDER A L'INTERIEUR DE CE PRODUIT

**Soin General**

- Entreposez dans un lieu propre et sec quand la télécommande soit hors d'usage.

**15. En cas de problèmes**

*Ne s'applique pas*