



## 1. Product Name

Wi Fi Interactive Stepping Stones by ROMPA®

## 2. Product Code

21172

## 3. Colour

As shown

## 4. Brief Description

Move from step to step to create your own light show! Pressure pads contained in a foam padded wooden box activate a light of a corresponding colour.

## 5. Contents

- 1 x grid of 8 covered foam steps
- 1 x colour wall controller (wall washer):
  - 1 x 1m wall washer
  - 1 x IEC kettle lead with plug*(21172U - 18W 12V Power Supply and a USA power lead instead of IEC lead)*
  - 2 x wall brackets

## 6. Snoezelen® Stimulations

- Visual

## 7. **Best Use**

Use on a flat, stable surface, away from obstacles.

## 8. **Compatible ROMPA® Products**

ROMPA® offers an extensive range of cushioning. Visit [www.rompa.com](http://www.rompa.com) for more information.

## 9. **Starting Up**

- Choose a suitable location indoors.
- Plug in the wall washer to the power supply.
- Plug in the cable from the floor.

## 10. **Detailed Description**

Move from step to step to create your own light show! Pressure pads contained in a foam padded wooden box activate a light of a corresponding colour. Shine down a wall *with our Colour Wall Controller 20259* for maximum effect. Helps encourage awareness of cause and effect and gross motor skills.

## 11. **Safety**

- Use indoors, in dry environments.
- Supervise the use of this product.



Please read all the following safety information before each use

### **ALWAYS SUPERVISE THE USE OF THIS PRODUCT**

- Remove all packaging and either store this in a safe place out of reach of clients or dispose of this responsibly. Plastic bags and wrapping can be hazardous to children and vulnerable people.
- The Stones contain a foam filling. Do not attempt to access the interior part of this product. Never allow children or vulnerable people to access the interior part of this product.
- Keep away from sources of heat and fire.

## 12. Technical Specification

### Cushioned Steps

Size: 145 x 72.5 x 84cm maximum height

### Colour Wall Controller

Size: 1mL (1070 x 65 x 88mm)

Power: 100 – 240V 50-60Hz 18W

Consumption: 18W

Fuse in plug: 13A (UK plug)

Lamp life: 100,000 hours

Weight: 2.5KG

CE: Meets requirements of CE and RoHS

## 13. Installation

1. Choose an appropriate location for this product bearing in mind the following:
  - 2 wall sockets are required
  - The wall washer should be out of reach
  - The wall washer has brackets so it can be ceiling/wall-mounted. Angle the Wall Washer so the light faces the wall
  - Make sure the ceiling/wall can comfortably support the weight of the wall washer – purchase and use appropriate fixings
  - Clients should not be able to look directly into the wall washer – the LEDs are very bright and it is not recommended that clients look directly into it.
  - The colour wall controller (wall washer) is most effective in dark environments – it will be less effective near a window for example
2. Plug in the colour wall controller (wall washer).

**Please note:** the wall washer is pre-programmed – do not adjust the program (by using the MODE/UP/DOWN controls – please do not touch these). Should the settings be adjusted, please follow the instructions printed on the colour wall controller to reset these settings.
3. Plug in the plug from the floor. There is a small cut out in the bottom part of the steps unit, between the middle blue and red steps. Pass the power cable through this cut out to avoid trapping the power cable.



*(not applicable to US version)*

## **OPERATING INSTRUCTIONS**

When pressure is applied to a step the corresponding colour will be activated on the Wall Washer. Step onto the middle part of the step, rather than at the edges, to activate the corresponding colour of light.

The light cast by the colour wall controller will remain on the selected colour until someone steps onto another step. Should no-one stand on another step, after one minute, the colour wall controller will revert to its automatic cycle – the light will scroll through a sequence of colours. In other words, the steps have a Latched operation – the colour stays on for one minute unless another step is activated.

## **14. Care and Maintenance**

### **Fabric Care**

- Always supervise the use of the product.
- Organise a regular cleaning schedule.
- Vinyl will crack, tear and rub off if subjected to sharp objects or continual rubbing by hard objects. Remove shoes, and avoid buckles, zips or sharp/hard/pointed objects coming into contact with the surface.
- Check seams regularly to ensure that these are not worn or split and the interior filling cannot be accessed.
- Wipe off accidental marks/liquids at the time they occur or are noticed.
- From time to time, if possible, lift floor cushion or move furniture to clean all surfaces and the floor underneath.
- Furniture and cushioning is intended to provide comfort and relaxation. Avoid eating and drinking whilst using these products.
- If the material for your furniture can be steam cleaned, please exercise great caution for the simple reason that when creating furniture, seams and stitching are necessary which create tiny holes where it is possible for liquid to get through into the inner foam. Should a lot of steam/water be accidentally used, there is potential for the inner foam to get saturated and be detrimental to your furniture.
- Do not place near sources of heat or fire that may damage the surface (radiators, fires, underfloor heating, hot central heating pipes etc.)
- Direct contact with bright sunlight may affect material over time.
- Do not saturate the material with lots of water.
- Some of our products contain zips for manufacturing purposes only. Do not attempt to open these or to access the interior part of these products. Never allow children or vulnerable people to access the interior part of this product.

### **PVC (Vinyl)**

- Use a soft brush remove all loose dust/dirt
- Clean with a mild detergent (such as Lux soap flakes in luke-warm solution) applied to a sponge or damp cloth.
- This may be sanitised using a weak solution of Milton fluid.
- Do not use excessive amounts of water and always ensure the PVC is dry after cleaning.
- Do not use an abrasive cleaning pad.
- Do not use boiling/very hot water, washing up liquid / aggressive detergent or solvent based cleaner as this will cause the coating to discolour and go hard.
- Steam cleaning is not advised.


### **Wall Washer**

The Wall Washer contains LED lamps so it will not be necessary to change any bulbs.

## **15. Troubleshooting**

In the unlikely event of product failure, check:

- Is the product plugged in?
- Is the power supply working? Turn the cushioned steps unit onto its side, and make sure a green light is visible on the power supply. If not, double check that power is getting through to the power supply. If the product is correctly plugged in, but the green light is not illuminated, the power supply may be faulty.
- If the wall washer is working, but it is not reacting to pressing a step, make sure the air pipes to the pressure pads have not become disconnected on the underside of the base. Turn the base over and make sure all the pipes are still connected:

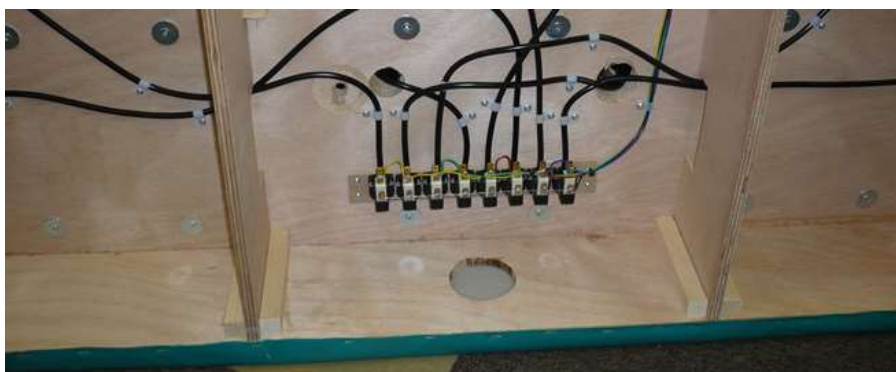

If more than one pipe has become disconnected, note that these are colour co-ordinated – re-attach to the appropriate colour:



Further copies of these instructions can be downloaded at [www.rompa.com](http://www.rompa.com)  
We hope you find our instructions invaluable. If you have any suggestions for improving them further your comments will be greatly received – please contact us at [producthelp@rompa.com](mailto:producthelp@rompa.com)



## 1. Nome do Produto

Degraus Interativos Wi Fi do ROMPA®

## 2. Código do Produto

21172

## 3. Cor

mostrado

## 4. Breve Descrição

Mova-se de degrau em degrau para criar o seu próprio espectáculo de luz!  
Pressionando as almofadas contidas numa caixa de madeira acolchoada com espuma activa-se um foco direccional correspondente à cor.

## 5. Conteúdo

- 1 x Grelha de 8 degraus cobertos com espuma
- 1 x Projector de Cores:
  - 1 x Projector de Cores
  - 1 x cabo IEC
  - 2 x suportes de pared

## 6. Estimulação Snoezelen®

- Visão

## 7. Melhor Utilização

Numa superfície plana, afastado de obstáculos.

## 8. Compatibilidade com Produtos Rompa®

A ROMPA® disponibiliza uma vasta gama de almofadas. Visite [www.rompa.com](http://www.rompa.com) para mais informações.

## 9. Começar

- Selecione uma localização apropriada.
- Ligue a fonte de alimentação.

## 10. Descrição Detalhada

Mova-se de degrau em degrau para criar o seu próprio espectáculo de luz!  
Pressionando as almofadas contidas numa caixa de madeira acolchoada com espuma activa-se um foco direccional correspondente à cor. Estimula a consciência de causa e efeito assim como as capacidades motoras. Faça incidir a luz na parede para maximizar o efeito.

## 11. Segurança

- Supervisione a utilização deste produto.
- Utilize no interior, em ambientes secos.



Leia todas as informações de segurança antes de cada utilização

### **SUPERVISE SEMPRE A UTILIZAÇÃO DESTE PRODUTO**

- Retire a embalagem. Armazene a embalagem com segurança e fora de alcance ou jogue fora adequadamente. Os sacos plásticos e o embalagem podem ser danificadores.
- Este produto contém um enchimento de espuma. Não permitir o acesso à espuma. Contacte-nos se as costuras ficarem danificadas.
- Use e guarde longe de fontes de calor, fogo e luz solar direta.



## 12. Especificações Técnicas

### Grelha de 8 degraus

Tamanho: 145 x 72.5 x 84cm max

### Projector de Cores

Tamanho: 1mL (1070 x 65 x 88mm)  
Entrada: 100 – 240V 50-60Hz 18W  
Saída: 18W  
Fusível: Fusível de 3amp na tomada UK  
Lâmpada: 100,000 horas  
Peso: 2.5KG  
CE: Conforme CE, RoHS

## 13. Instalação

1. Selecione uma localização apropriada para colocar este produto tendo em conta o seguinte:

- 2 tomadas de parede são necessários
- E projector de cores deve estar fora de alcance
- E projector tem um suporte ajustável em ângulo com três furos que permite que seja pendurada no teto/parede. A luz deve incidir sobre a parede
- Deve garantir que o teto/parede consegue suportar confortavelmente o peso do projector – compre acessórios de fixação apropriados
- Não deve ser possível que os clientes olhem diretamente para e projector de cores – os LEDs são muito brilhantes e não é recomendado olhar diretamente para eles.
- E projector de cores é mais eficiente quando é utilizado em ambientes escuros – será menos eficaz por exemplo, perto de uma janela
- Ligue o projector a fonte de alimentação.

**Nota:** E projector de cores é pré-programado – não ajuste o programa (utilizando os controlos MODE/UP/DOWN – por favor não toque nestes controlos)

2. Ligue o cabo da grelha a fonte de alimentação.



## **INSTRUÇÕES DE FUNCIONAMENTO**

Quando é aplicada pressão num degrau, a cor correspondente será ativada na projector.

A luz lançado pelo projector de cores permanecerá na cor seleccionada até que alguém pisa em um outra degrau. Se ninguém ficar em outra degrau, depois de um minuto, o projector de cores voltará ao seu ciclo automático – a luz vai percorrer uma sequência de cores.

## **14. Cuidado e Manutenção**

### **Degraus**

- Utilize no interior, em ambientes secos.
- Supervisione sempre a utilização deste produto.
- Organize uma agenda de limpeza regular.
- O vinil vai rachar, rasgar e “desgastar” se for sujeito a objetos afiados ou se for continuamente roçado por objetos duros. Evite utilizar sapatos, fivelas ou objetos afiados/duros.
- Verifique regularmente as costuras para garantir que o enchimento não é acessível.
- Limpe líquidos ou marcas acidentais imediatamente com um detergente macio e um pano húmido, evitando quantidades excessivas de água.
- Não comer ou beber ao usar este mobiliário.
- Não lave com vapor.
- Não utilize produtos de limpeza com abrasivos ou à base de solventes.
- Não utilize detergente líquido da loiça. Não utilize produtos que contenham lixívia.
- Use e guarde longe de fontes de calor, fogo e luz solar direta.
- Alguns dos nossos produtos contêm zíperes apenas para fins de fabricação. Não tente abrir estes ou para acessar a parte interior destes produtos.
- De tempos a tempos levante o chão almofadado para limpar toda a superfície e o chão por baixo dele.

### **Vinil**

- Use uma escova macia para remover toda a poeira / sujeira soltas.
- Limpe líquidos ou marcas acidentais imediatamente com um detergente macio e um pano húmido. Não utilize uma esponja abrasiva.
- Podem ser utilizados líquidos esterilizantes para mamadeiras.
- Limpe com um pano húmido, evitando quantidades excessivas de água.
- Não use água fervente / muito quente.
- Não lave com vapor.

### **Projector de cores**


- O projector contém LEDs que duram milhares de horas. Assim, não será necessário substituir lâmpadas.

Quando este produto estiver eventualmente gasto, por favor deposite-o num local apropriado.

## 15. Resolução de Problemas

Na eventualidade deste produto falhar, verifique:

- O produto está ligado na tomada?
- Se o projector de cores estiver a trabalhar mas não estiver a reagir quando pressiona um degrau, verifique se os tubos de ar das almofadas de pressão não se soltaram na parte de baixo da base. Vire a base ao contrário e verifique se todos os tubos ainda estão ligados:

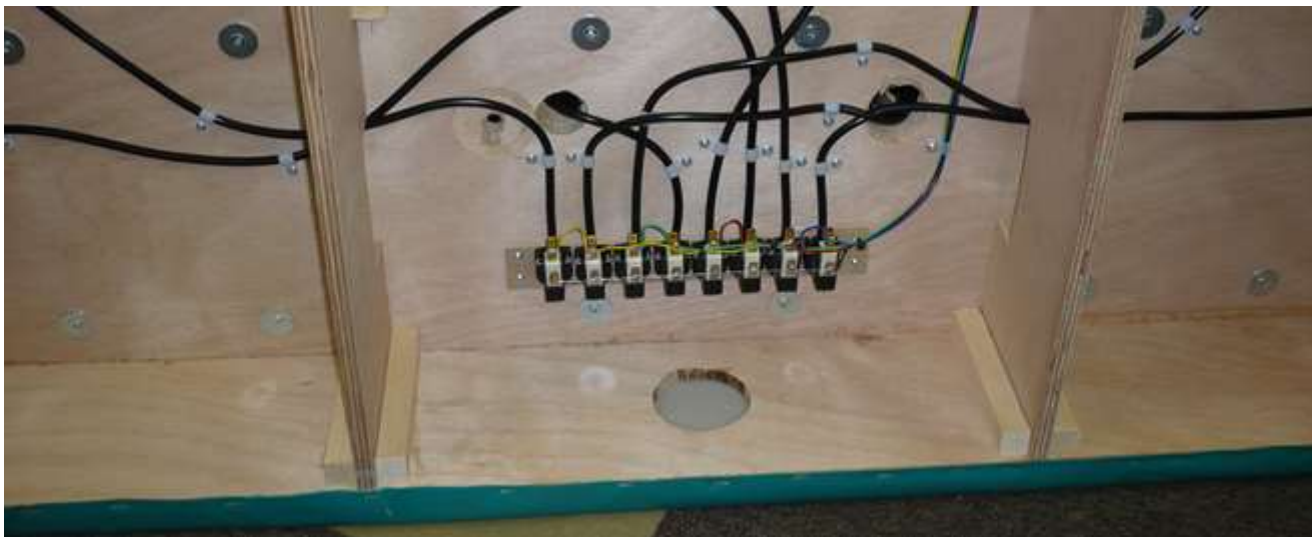

Se mais de um tubo estiver desligado, repare pois estes estão coordenados por cor, ligue-os na cor respetiva:

