



## **1. Product Name**

Four Sided Free Standing Ballpool by ROMPA®

## **2. Product Code**

14144

## **3. Colour**

This product is offered in a range of colours. Please specify choice when ordering.

## **4. Brief Description**

This Four Sided Free Standing Ball Pool is supplied flat for self-assembly. Balls are to be purchased separately.

## **5. Contents**

4 x sides  
1 x vinyl base

## **6. Snoezelen® Stimulations**

Proprioceptive

## **7. Best Use**

Position indoors in a suitable space, free from obstacles and obstructions enabling safe use. We suggest that nearby cushioned wall and floor space are considered to keep users of the equipment as safe as possible.

## **8. Compatible ROMPA® Products**

ROMPA offer a range of floor and wall cushioning and Soft Play products. Please see our website [www.rompa.com](http://www.rompa.com) for our full range. Products that are particularly pertinent to this product are:

13674 - 7.5cm diameter balls (mixed colours) – Pack of approximately 500

14346 - 7.5cm diameter balls (clear) – Pack of approximately 500

15283 - Net washing bag

## **9. Starting Up**

- Unpack carefully and dispose of packaging carefully.
- Position on a floor in chosen position. Choose a safe space, located away from any obstacles, walkways and walls. Consider cushioning surrounding the area and on the floors.
- Secure all sides as per the Installation section below.
- Fill with your choice of ballpool balls.

## **10. Detailed Description**

This Four Sided Free Standing Ball Pool is supplied flat for self-assembly. Velcro® strips attach the vinyl base to the padded wood sides. Balls are not supplied but can be purchased separately.

## **11. Safety**



### **Always supervise the use of this product**

- Do not place near sources of heat or fire that may damage the surface (radiators, fires, underfloor heating, hot central heating pipes etc.)
- Some of our products contain zips for manufacturing purposes only. Do not attempt to open these or to access the interior part of these products. Never allow children or vulnerable people to access the interior part of this product.

## **12. Technical Specification**

Size: 50cmH x 217cm square

## 13. Installation

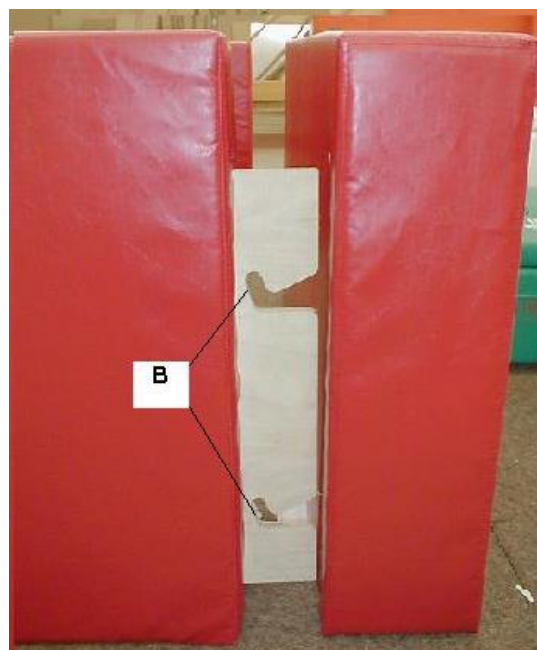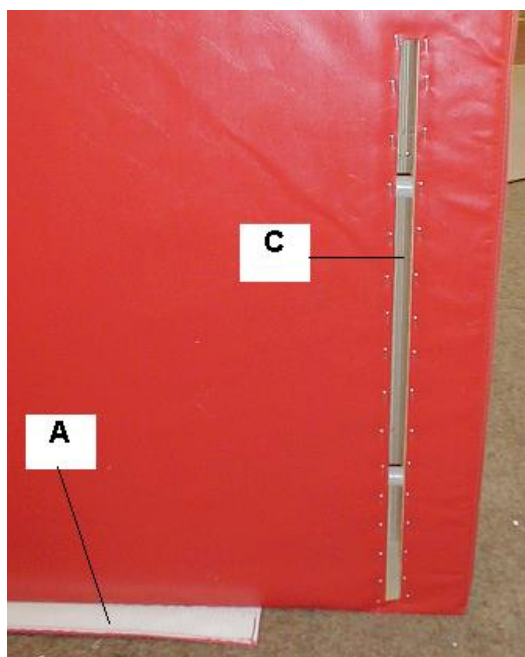

1. With the Velcro<sup>®</sup>d tabs (A) inside the Ballpool, insert the wooden tongue (B) of one wall into the slot (C) on the other, ensuring the wooden hooks fully engage. The tongued wall will rise as it is inserted and then drop level with the slotted wall when they fully engage.
2. Repeat for third and fourth Ballpool walls.
3. All 4 sides of the vinyl floor have Velcro underneath. To secure it to the Ballpool:
4. Attach the self-adhesive Velcro strip to the floor on the room wall sides.
5. Place the sheet over the top. Press on the edges to secure the Velcro<sup>®</sup>.

### **DISMANTLING**

1. Remove the balls and vinyl floor.
2. Lift a corner of a shorter wall and place one foot or a piece of wood 25-50mm thick underneath the wooden tongue.
3. Using a fist, knock the opposite end of the wall downwards to release the wooden hooks. Repeat this procedure for the other corners.

**NOTE:** Take care not to pull the walls from 90° to avoid spraining the corner joints.

## 14. Care and Maintenance

- Organise a regular cleaning schedule.
- Vinyl will crack, tear and rub off if subjected to sharp objects or continual rubbing by hard objects. Remove shoes, and avoid buckles, zips or sharp/hard/pointed objects coming into contact with the surface.
- Check seams regularly to ensure that these are not worn or split and the interior filling cannot be accessed.
- Wipe off accidental marks/liquids at the time they occur or are noticed.
- From time to time, if possible, lift or move this product to clean all surfaces and the floor underneath.
- This product is intended to provide comfort, relaxation and activity. Avoid eating and drinking whilst using this product.
- Steam cleaning is not recommended. Seams create tiny holes where it is possible for liquid to get through into the inner foam. Should a lot of steam/water be accidentally used, there is potential for the inner foam to get saturated and spoiled.
- Direct contact with bright sunlight may affect material over time.
- Do not saturate the material with lots of water.

### PVC (Vinyl) Care

- Use a soft brush remove all loose dust/dirt
- Clean with a mild detergent (such as Lux soap flakes in luke-warm solution) applied to a sponge or damp cloth.
- This may be sanitised using a weak solution of Milton fluid.
- Do not use excessive amounts of water and always ensure the PVC is dry after cleaning.
- Do not use an abrasive cleaning pad.
- Do not use boiling/very hot water, washing up liquid / aggressive detergent or solvent based cleaner as this will cause the coating to discolour and go hard.
- Steam cleaning is not advised.

## 15. Troubleshooting

*Not applicable*

Further copies of these instructions can be downloaded at [www.rompa.com](http://www.rompa.com)

We hope you find our instructions invaluable. If you have any suggestions for improving them further your comments will be greatly received – please contact us at [producthelp@rompa.com](mailto:producthelp@rompa.com)



## **1. Produit**

Piscine de Balles à Quatre Montants Séparés

## **2. Code**

14144

## **3. Couleur**

Ce produit est disponible dans une grande gamme de couleurs. Prière de préciser la couleur en commandant.

## **4. Brève Description**

Cette piscine est livrée démontée avec renforts bois intérieur à assembler soi-même.

## **5. Contenu**

1 x base en vinyle  
4 x murs

## **6. Stimulations Snoezelen®**

Proprioceptive

## 7. Usage

Mettez ce produit à l'intérieur dans un lieu convenable, hors d'obstacles pour assurer l'usage sûr. Nous recommandons l'usage des coussins muraux et de sol pour les raisons de sécurité.

## 8. Produits Compatibles de ROMPA®

ROMPA® offre une gamme de coussins de mur et de sol, aussi que d'autres produits de la Gamme Mousse. Prière de visiter [www.rompa.com](http://www.rompa.com) pour voir la gamme entière. Les produits qui sont particulièrement utiles pour cette piscine sont :

13674	Les balles de 7.5cm diamètre (couleurs variées) – lot d'environ 500
14346	Les balles de 7.5cm diamètre (transparents) – lot d'environ 500)
15283	Filet de lavage

## 9. Fonctionnement

- Déballer avec soin et jeter l'emballage de façon responsable.
- Positionner la piscine sur un sol convenable. Choisissez un lieu sûr, hors d'obstacles et de risques. Considérez l'usage des coussins autour de la piscine – au mur et au sol.
- Assemblez la piscine selon les conseils dans la section 'Installation'.
- Remplissez la piscine de balles.

## 10. Description

Cette piscine est livrée démontée avec renforts bois intérieur à assembler soi-même. Les balles sont à commander séparément. Les panneaux ont 20 cm de largeur.

## 11. Sécurité



### Il faut toujours surveiller l'usage de ce produit

- Ne pas installer la piscine près des sources de chaleur ou des flammes (ex. les radiateurs, les feux, le chauffage sous-sol ou les tuyaux de chauffage).
- Certains de nos produits contiennent les fermetures éclairs pour les raisons de fabrication. Ne pas essayer d'ouvrir ces fermetures. Ne pas permettre aux clients d'accéder l'intérieur de ce produit.

## 12. Caractéristiques Techniques

Dimensions: 217 longueur x 217 largeur x 50 cm hauteur

## 13. Installation

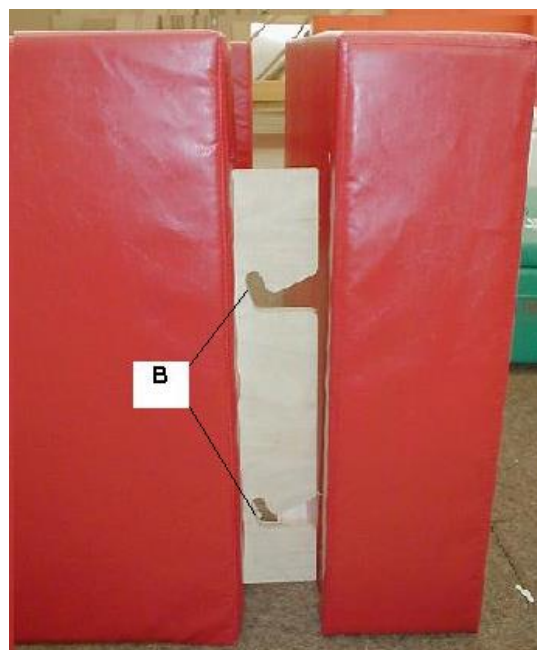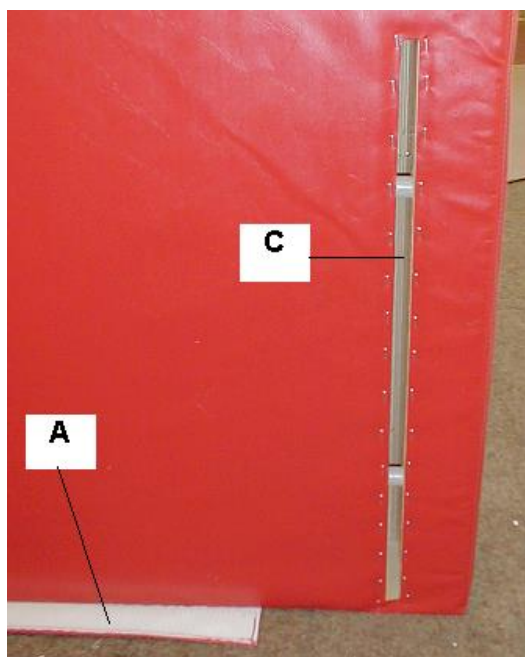

1. Avec les attaches en Velcro® (**A**) à l'intérieur de la Piscine, introduire la langue (**B**) d'un montant dans la fente (**C**) de l'autre, en s'assurant que les crochets en bois s'emboîtent. Le montant à langue se lèvera comme on l'introduit dans la fente. Il tombera ensuite au même niveau du montant à fente quand ils s'emboîtent.  
***NOTER :** Pour éviter les faux plis dans cet assemblage garder l'angle des montants à 90°.*
2. Répétez pour les autres murs de la piscine (adaptez les montants troisième et quatrième de la même façon).

### **DEMONTAGE**

1. Enlever les balles et le plancher en vinyle.
2. Soulever un coin d'un des montants plus courts et placer un pied ou un morceau de bois d'une épaisseur de 25-50mm au-dessous de la langue en bois.
3. Avec une poignée donner un coup de bas au bout opposé du montant pour relâcher les autres crochets.

***NOTER :** Prenez des précautions afin de garder l'angle des montants à un angle de 90° pour éviter une entorse de cet assemblage.*

## **14. Soin et Entretien**

- Organisez un programme de nettoyage.
- Evitez les chaussures, les boucles et les objets pointus et tranchants. Prenez soin si vos vêtements contiennent les fermetures éclair. Quittez les chaussures. Ne pas frotter les objets contre le tissu, surtout le vinyle. Sinon le tissu fêlera, se déchira et la surface s'usera.
- Vérifiez le bon état des points de suture pour qu'on ne puisse pas accéder au mousse à l'intérieur de la piscine.
- Essuyez des taches en vous servant d'un chiffon humecté dès qu'on les voit. Ne pas se servir de beaucoup de l'eau.
- De temps en temps, levez ce produit pour nettoyer toutes surfaces aussi que le sol au-dessous.
- Nos produits sont conçus pour le confort et la détente. Ne pas manger ou boire pendant l'usage de ces produits.
- Ne pas nettoyer à vapeur.
- Ne pas mettre ou entreposez ce produit dans la lumière directe du soleil.

### **Soin du vinyle**

- Servez-vous d'une brosse douce pour enlever la poussière ou la saleté.
- Nettoyez avec un produit de nettoyage doux et de l'eau tiède avec un torchon/une éponge.
- On pourrait se servir du fluide pour stériliser les bouteilles de bébés.
- Ne pas se servir de beaucoup de l'eau, et vérifiez que le vinyle soit complètement sec après.
- Ne pas utiliser un torchon/une éponge abrasive.
- Ne pas utiliser de l'eau bouillante ou très chaude. Ne pas se servir des produits pour faire la vaisselle ou les détachants forts ou les solvants.
- Ne pas se servir des produits de nettoyage qui contiennent de l'eau de Javel
- Ne pas nettoyer à vapeur.

## **15. En cas de problèmes**

*N'applique pas*