




## BATTERY OPERATED MIRROR BALL MOTOR 17630


### CONTENTS

1 x Battery operated mirror ball motor  
 Required, but not included: battery **E**, mirror ball **C** and spotlight

### USE

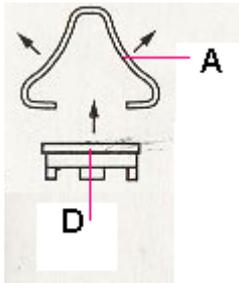

Install a D 1.5V battery or the rechargeable battery 17631 (to be purchased separately). To do this, remove the integral metal loop **A** by pushing the sides of the loop outwards gently. Remove the lid **D**. Install the battery **E**, positive end facing towards the mirror ball and the floor. Replace the lid and metal loop.

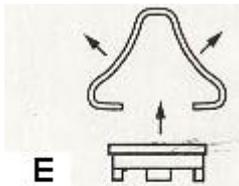


Using the integral metal loop, suspend the motor from a hook (or similar) in your ceiling.

**Note:** Check that your ceiling is comfortably able to hold the weight of the motor and your mirror ball. This motor will hold a mirror ball up to 1.2kg (typical 15cm - 25cm mirror ball).

Suspend the mirror ball from the bottom of the motor using the ring on the mirror ball and the hook on the motor **B**.

Switch the motor on.

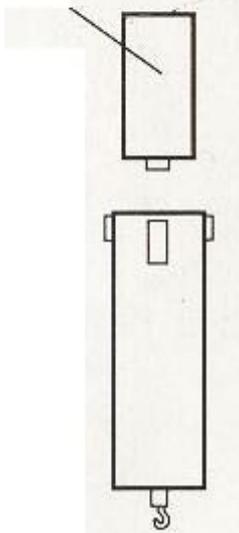

### CARE & MAINTENANCE

Replace the battery as required. You will know when the battery is starting to fail as the motor will gradually turn the mirror ball more slowly. Periodically wipe clean with a very slightly damp cloth.


Do not immerse in water.

### SAFETY

Always supervise the use of this product.  
 For indoor use only.

### SPECIFICATION

Approximately 2.5RPM. Size: 17cmH

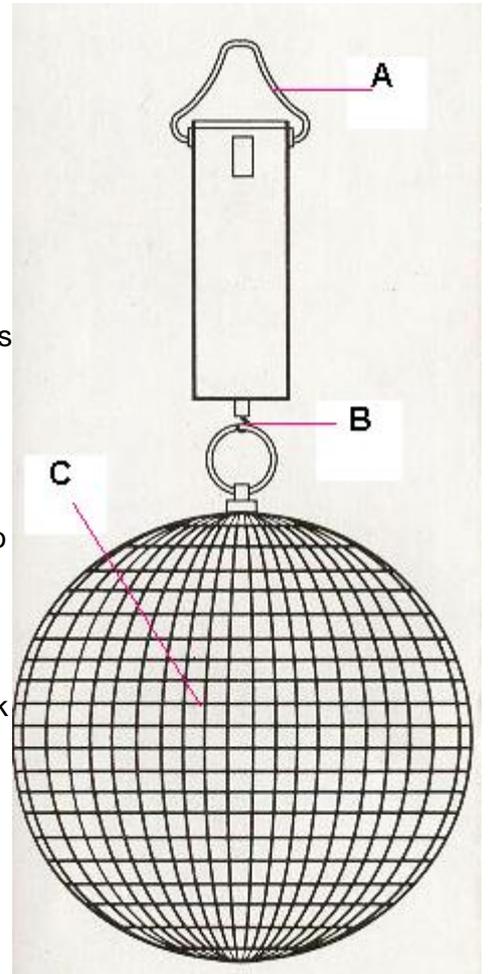

## CHARGER & RECHARGEABLE BATTERY 17631

### CONTENTS

1 x Charger  
 1 x rechargeable battery

### USE

Charge battery as required and insert battery into motor as above.  
 Do not attempt to recharge non-rechargeable batteries.

### SAFETY

Always supervise the use of this product. For indoor use only.



## MOTEUR FONCTIONNANT À PILES POUR LA BOULE A FACETTES 17630

### CONTENU

1 x Moteur fonctionnant à piles pour la Boule à Facettes

Ce produit nécessite, mais ne comprend pas :

Une pile **E**, une boule à facettes **C** et un spot

### USAGE

Installez une pile D de 1.5V ou la pile rechargeable 17631 (non compris) : enlevez la boucle en métal **A** en tirant doucement sur les côtés de la boucle. Enlevez le couvercle **D**. Installez la pile **E**, pour que le bout positif soit en bas. Remplacez le couvercle et la boucle en métal.

En vous servant de la boucle en métal, suspendez le moteur d'un crochet dans votre plafond.

**Notez** : vérifiez que votre plafond peut tenir le poids du moteur et de la boule à facettes. Ce moteur peut supporter une boule à facettes de 1,2 kilos (typiquement une boule de 15-25cm).

Suspendez la boule à facettes du moteur en vous servant de l'anneau de la boule et du crochet du moteur **B**. Allumez le moteur.

### SOIN ET ENTRETIEN

Remplacez la pile selon besoin. On sait que la pile est usée car le moteur fait tourner la boule plus lentement. De temps en temps, essuyez le moteur avec un torchon légèrement humecté.

Ne pas immerger dans l'eau.

### SÛRETÉ

Il faut toujours surveiller l'usage de ce produit.

Pour l'usage à l'intérieur seulement.

### CARACTERISTIQUES TECHNIQUES

Approx. 2,5 RPM

Dimensions : 17cm de hauteur

## CHARGEUR ET PILE RECHARGEABLE 17631

### CONTENU

1 x Chargeur

1 x pile rechargeable

### USAGE

Chargez la pile selon besoin et puis introduisez la pile dans le moteur (voir plus haut).

Ne pas essayer de charger les piles non-rechargeables.

### SÛRETÉ

Il faut toujours surveiller l'usage de ce produit.

Pour l'usage à l'intérieur seulement.