



## TWO BUTTON SWITCH BOX 19630



### CONTENTS

This product is supplied bagged and contains:


- 1 x Two Button Switch Box with two 2m cables (hard-wired)

### USE

1. Remove the cable tie from the cable. Take care when removing this not to damage the cable.
2. Connect this switch to two switch-activated toys or products e.g. Percy Pig, Floppy Bunny (please see The Complete Resource catalogue from ROMPA® or [www.rompa.com](http://www.rompa.com) for a full selection of switch-activated products). Make sure the jack plug of both cables is properly inserted into the jack socket of your switch-activated products.



*The above images show a removable jack plug which is slightly different to that supplied here, but nonetheless show the correct insertion of the jack plug into the jack socket.*

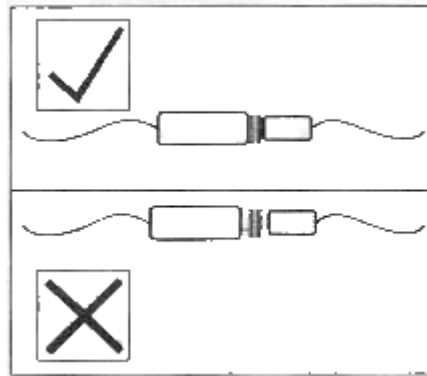

3. Press the large coloured button on the top of the switch to activate your corresponding switch-activated product. A 'click' can be heard as the switch is pressed. The buttons are large and could be activated by a foot, cheek, elbow etc – not just a hand. The buttons can be pressed down at the centre or towards the edge of the buttons.

### CARE & MAINTENANCE

Wipe clean with a very slightly damp clean cloth

Avoid abrasive cleaning products which could scratch this product.

Do not attempt to open up the switch. Since this switch does not require batteries, there is no need to try and access the interior of the switch.

For use in dry environments – this switch is not waterproof.

Once this product is completely exhausted, please dispose of it appropriately.

### SAFETY

Always supervise the use of this product.

### TROUBLESHOOTING

In the unlikely event that your switch-activated products do not work with this switch, check:

- That the jack plug of this switch is firmly pushed into the jack sockets of the switch-activated devices
- That your switch-activated devices are set to ON if it has an ON/OFF button
- That your switch-activated devices have batteries in – change these as required

### SPECIFICATION

Size: 15cm long x 10cm wide x 6.5cmH

Button diameter: 5cm

This is a simple switch (non-electronic) and a mono switch (one band on the jack plug). The 6.35mm jack plug is permanently attached to the cable and the cable is permanently attached to the switch. The switch has rounded corners for added safety.



## CAIXA DE SWITCH COM DOIS BOTÕES 19630



### CONTEÚDO


Este produto é fornecido numa embalagem que contém:  
1 x Caixa de switch com dois botões com 2 metros de cabo

### UTILIZAÇÃO

1. Remova a abraçadeira do cabo. Tenha cuidado para não danificar o cabo.
2. Ligue o switch a dois produtos que este pretenda activar, ex: poro percy, coelho fofo, etc. (visite [www.rompa.com](http://www.rompa.com) para consultar toda a gama de produtos activados por switch). Verifique se o jack de ambos os cabos está devidamente ligado na respectiva entrada dos produtos que quer activar.



*As imagens mostram um adaptador jack que é ligeiramente diferente do fornecido, apesar disso está ilustrada a correcta ligação do jack.*

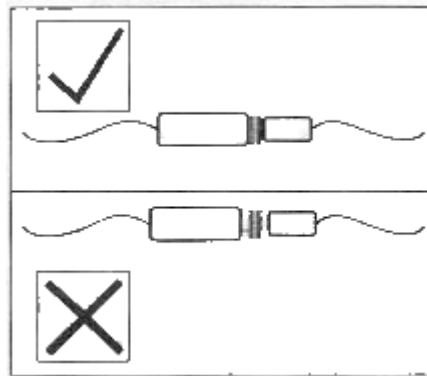

3. Pressione o botão colorido no topo do switch para activar o seu produto activado por switch correspondente. Quando pressiona o botão ouve um clique. O botão é grande e pode ser activado com o pé, face, cotovelo, etc. – não apenas com a mão. O botão pode ser pressionado no centro ou junto ao rebordo.

### **CUIDADOS E MANUTENÇÃO**

Limpe com um pano ligeiramente humedecido.

Evite produtos abrasivos que possam riscar este produto.

Não tente abrir o switch. Uma vez que o switch não utiliza pilhas, não há necessidade de tentar aceder ao seu interior.

Para utilizar em ambientes secos – o switch não é à prova de água.

Quando este produto atingir o fim da sua vida útil, deposite-o num local apropriado.

### **SEGURANÇA**

Supervisione sempre a utilização deste produto.

### **RESOLUÇÃO DE PROBLEMAS**

Na improvável eventualidade de ocorrer uma avaria neste produto, verifique:

- Se o Jack está devidamente encaixado nos produtos activados por switch.
- Se os seus produtos activados por switch têm um botão ON/OFF e se estes se encontram na posição ON.
- Se os seus produtos activados por switch têm pilhas – substitua-as se necessário

### **ESPECIFICAÇÕES**

Tamanho: 15cm de comprimento x 10cm de largura x 6.5cm de altura

Diâmetro do botão: 5cm

Este é um switch simples (não eléctrico), mono (Apenas uma banda no Jack). A ficha de 6.35mm está permanentemente fixa no cabo e o cabo está permanentemente fixo ao switch. O switch tem cantos arredondados para maior segurança.