

## **1. Product Name**

ROMPA® Rainbow Bumpas with Sound – Set of 8

## **2. Product Code**

20323 - 115cmH

20359 - 145cmH

## **3. Colour**

As shown

## **4. Brief Description**

Soft Play meets music for a large scale xylophone with the X factor! Vibrant, engaging, interactive and it sounds as good as it looks.

## **5. Contents**

2	x	Backboards, each with four Bumpas (one Backboard has a Control Box already attached)
1	x	power supply
1	x	kettle lead with plug

## **6. Snoezelen® Stimulations**

- Sight
- Touch

## **7. Best Use**

Wall-mount at an appropriate height for users to access the coloured circles.

## **8. Compatible ROMPA® Products**

For an extensive range of cushioning please see [www.rompa.com](http://www.rompa.com)

## **9. Starting Up**

- Attach the backboards to your wall.
- Firmly connect the spade connectors on the cables from the backboard with the Control Box to the corresponding spade connectors on the other backboard.
- Tuck the cables inside the backboards.
- Secure the Control Box to the wall.
- Connect power cable to the Control Box.
- Connect the kettle lead to the power supply.
- Plug in.
- Switch on at the wall.
- Switch the Control Box on.

## **10. Detailed Description**

Soft Play meets music for a large scale xylophone with the X factor!

Vibrant, engaging, interactive and it sounds as good as it looks. Jumbo size makes music accessible, fun and a shared experience.

## **11. Safety**

- For indoor use in dry environments only.
- Always supervise the use of this product.
- It is your responsibility to ensure that this product is installed and used safely and appropriately.
- Do not allow the cables to be pulled etc – keep these out of reach.

## 12. Technical Specification


Size: Each Bumpa 30W x 15cmD  
Back board 5cm deep - overall width: 240cm, overall depth 20cm

Power supply: Meets requirements of RoHS





## 13. Installation

1. The Bumpas are supplied already attached to the back boards.
2. Attach the back boards to your wall, bearing in mind the following:
  - The back boards are 5cm thick
  - Fixtures are not included as these will depend on the construction of your wall
  - The back boards are solid around the perimeter (the frame is 5cm thick on each outside edge) but the central part is not solid – take care not to damage the back boards as these contain electrical components
  - The approximate weight of the whole product is 50kg for the 115cmH version and 60kg for the 145cmH version – make sure your wall and fixtures are capable of holding this weight
  - Make sure there are no pipes, cables, wires etc behind the wall where you intend to drill
  - If using this product with floor cushioning, take into account the depth of the floor cushion
  - This product requires one electrical wall socket – make sure the cables on the power supply will reach the wall socket
  - Make sure the cables are safe and cannot be pulled and don't represent a safety hazard
  - This product is for indoor use only, in dry environments
  - If installing this product with other Bumpas, these will be deeper because these have a back board that the other Bumpas from ROMPA® do not
  - The back boards are very slightly higher than the top of the Bumpas so that the Bumpas could be attached to it (2 or 3mm approx)
  - There are additional mirror plates supplied
  - The Backboard with the Control Box attached must be on the left hand side.
3. Connect the spade connectors on the cables from the right hand side of the Backboard with the Control Box on to the spade connectors from the left hand side of the other Backboard. Observe the labels on each cable. All cables labelled A (and a number) connect to the corresponding cables labelled A (and a number). The same applies to the B cables. For example, connect A5 to A5.

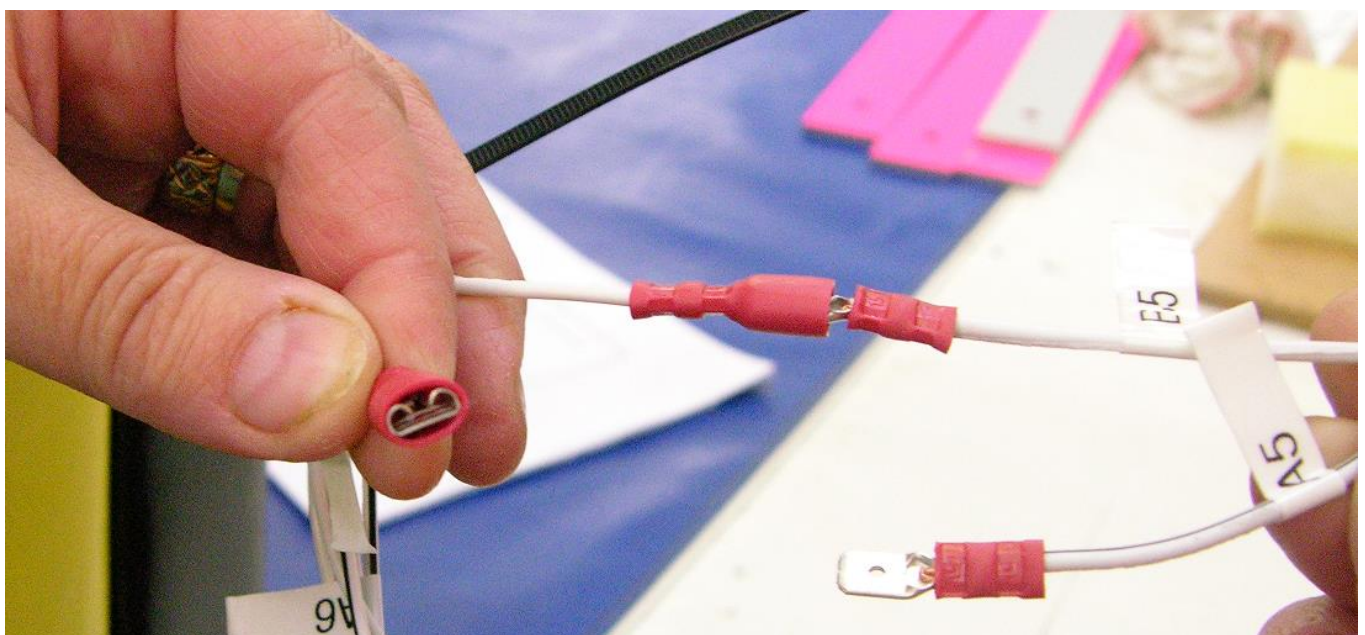

4. Repeat for cables 6, 7 and 8. All A cables have a black stripe; all B cables are plain white cables.
5. Make sure these are FIRMLY connected together. Before wall-mounting the Backboards, follow the steps below to make sure these are working properly first.

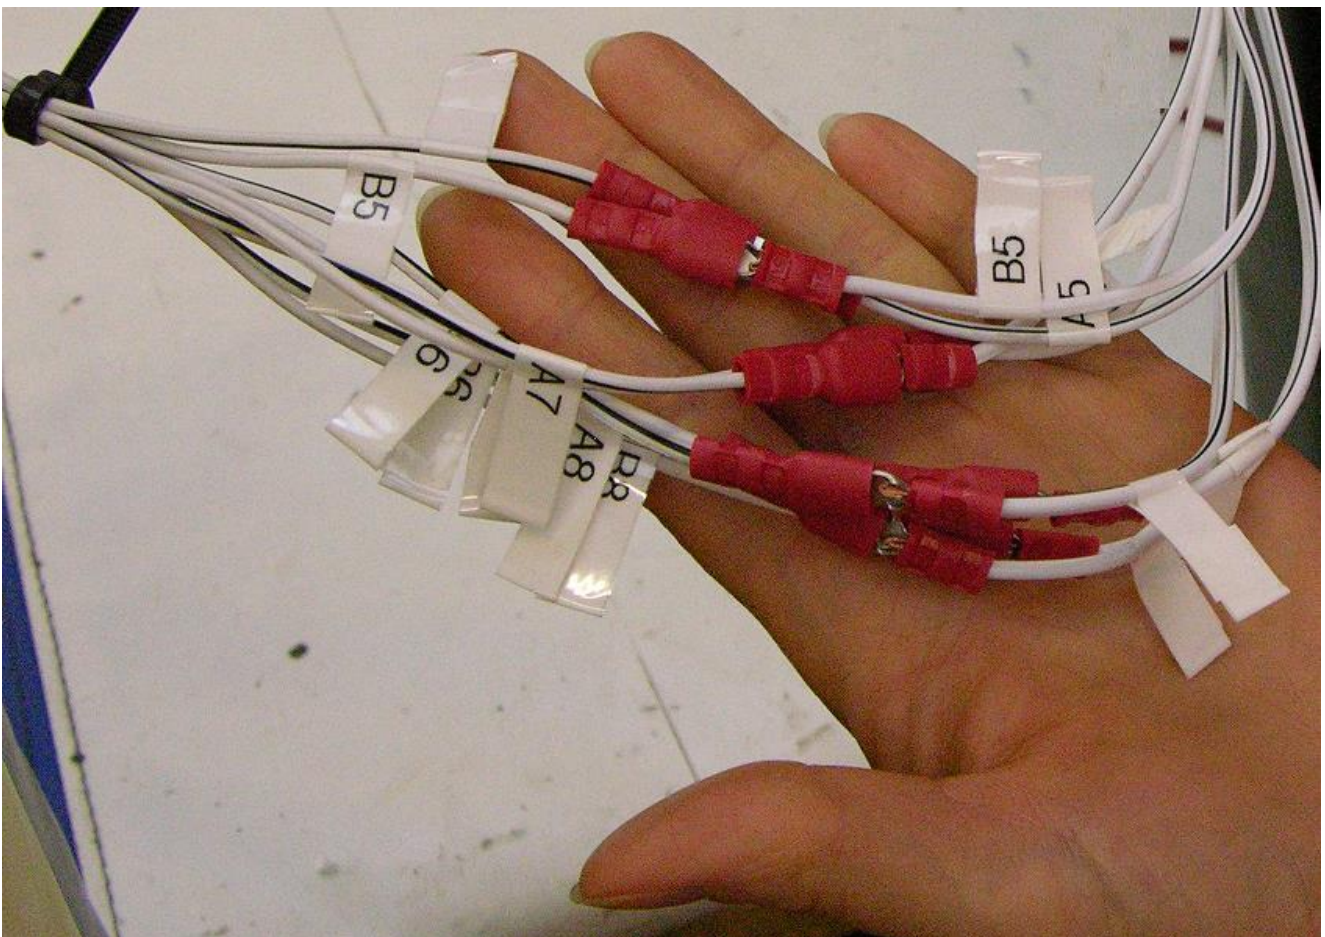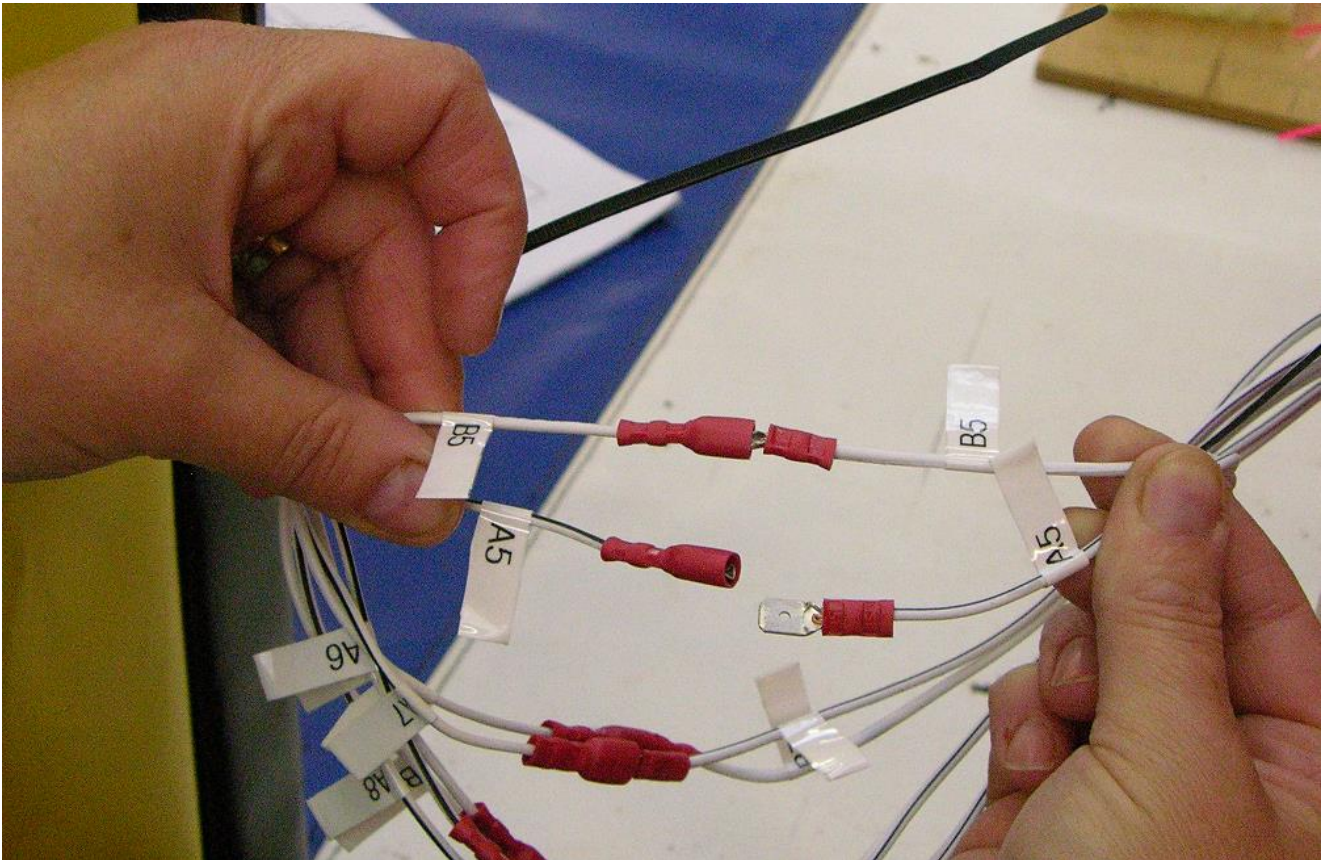

6. Once you have checked that all the connections are firm, the cables can be tucked inside the Backboards to make sure these are not trapped/punctured during wall-mounting.
7. The Control Box is already attached to the top left of the back board. This can be further secured to the wall as required, once the back board has been wall mounted. There are three pre-drilled holes to the left of the Control Box and another three to the right (as shown below).



8. Connect the cable from the power supply to the round DC socket on the left hand side of the Control Box as shown to the right. The other end of this cable is hard-wired.





9. Connect the kettle lead to the power supply.



10. Plug in at the wall socket.

## OPERATION

1. Switch on at the wall socket.
2. Switch on using the ON/OFF button on the Control box (the uppermost button).  
When the red of the switch is visible, the product is ON.



3. Use the central button to select one of six sound mode:
  - a. Piano
  - b. Clarinet
  - c. Electric organ
  - d. 'Bubbles'
  - e. Car hooters
  - f. 'Scratching'

Each press of the central button activates the next setting. Once the product is switched on, the first mode is 'Piano'. One press of the central button activates the Clarinet; a second press activates the 'Electric organ'... and so on. If the product is



switched OFF, the last mode selected is NOT retained – the product will automatically start next time with the Piano.

4. Press the coloured circle on a Bumpa to hear the sound. Operation is momentary. This means that one press will activate a sound for 2 or 3 seconds. The product does not require one press of the coloured button to start the sound, and another press to stop it as the sound will stop by itself. The duration of the sound cannot be controlled.
5. The furthest left Bumpa has the lowest pitch. Moving across the Bumpas left to right and pressing each subsequent circle of the Bumpa obtains a higher pitch.
6. Adjust the volume as required using the dial at the bottom.
7. Remember to switch OFF after use and unplug.

## **14. Care and Maintenance**

1. Handle the Control Box with appropriate care – it is recommended that a responsible adult regulates the Control Box – the Bumpas are intended to be controlled by clients rather than them regulating the Control Box.

### **Fabric Care**

- Vinyl will crack, tear and rub off if subjected to sharp objects or continual rubbing by hard objects. Remove shoes, and avoid buckles, zips or sharp/hard/pointed objects coming into contact with the surface.
- Check seams regularly to ensure that these are not worn or split and the interior filling cannot be accessed. Do not attempt to access the interior part of these products. Never allow children or vulnerable people to access the interior part of this product.
- Wipe off accidental marks/liquids at the time they occur or are noticed.
- From time to time, *if possible*, lift or move products to clean all surfaces and the floor underneath.
- Our products are intended to provide comfort, relaxation and activity. Avoid eating and drinking whilst using these products.
- Steam cleaning is not advised.
- Do not place near sources of heat or fire that may damage the surface (radiators, fires, underfloor heating, hot central heating pipes etc.)
- Direct contact with bright sunlight may affect material over time.
- Do not saturate the material with lots of water.

### **PVC (Vinyl)**

- Use a soft brush remove all loose dust/dirt.
- Clean with a mild detergent (such as Lux soap flakes in luke-warm solution) applied to a sponge or damp cloth. Do not use an abrasive cleaning pad.
- This may be sanitised using a weak solution of Milton fluid.
- Do not use excessive amounts of water and always ensure the PVC is dry after cleaning.
- Do not use boiling/very hot water, washing up liquid / aggressive detergent or solvent based cleaner as this will cause the coating to discolour and go hard.
- Steam cleaning is not advised.

Once this product is eventually exhausted, please dispose of it appropriately....

## 15. Troubleshooting


In the unlikely event of problems, please check:

- The Volume – is it turned right down to the lowest setting? If so, make the product louder as required
- Power supply – check that the kettle lead is correctly connected. Make sure the hard-wired cable from the power supply is correctly attached to the Control Box
- Make sure the kettle lead is plugged in and switched ON at the wall
- Make sure the ON/OFF button on the Control Box is set to ON

Further copies of these instructions can be downloaded at [www.rompa.com](http://www.rompa.com)

We hope you find our instructions invaluable. If you have any suggestions for improving them further your comments will be greatly received – please contact us at

[producthelp@rompa.com](mailto:producthelp@rompa.com)

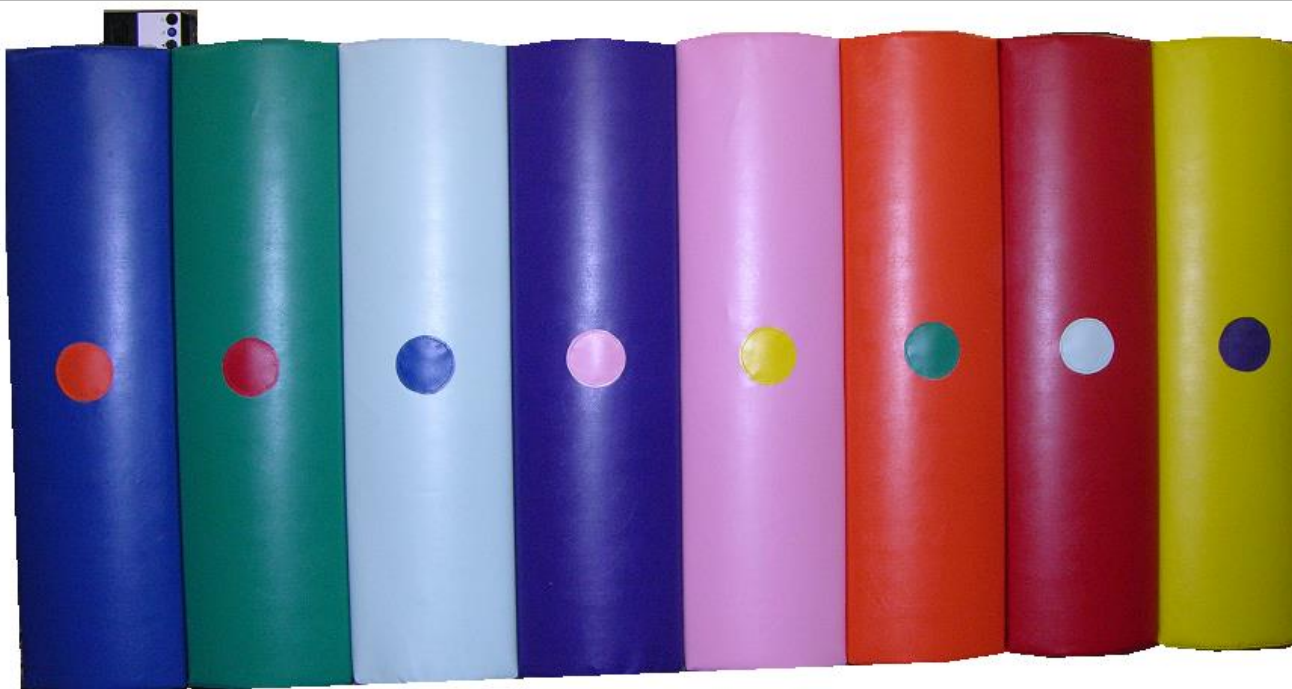

### **1. Nome do Produto**

Arco-Íris Bumpas com Som – Conjunto de 8

### **2. Código do Produto**

20323 - 115cm

20359 - 145cm

### **3. Cor**

Como a imagem

### **4. Breve Descrição**

O Soft Play encontra a música com um Xilofone de grande escala com factor X!  
Vibrante, viciante, interactivo e soa tão bem quanto parece.

### **5. Conteúdo**

2	x	Placas traseiras, cada uma com 4 bumpas (uma das placas já tem a caixa de controlo fixada)
1	x	Fonte de alimentação
1	x	Cabo de alimentação

## **6. Estimulação Snoezelen**

- Visão
- Toque

## **7. Melhor Utilização**

Fixe os painéis na sua parede.

## **8. Compatibilidade com Produtos Rompa**

A Rompa disponibiliza uma vasta gama de almofadas. Visite [www.rompa.com](http://www.rompa.com) para mais informações.

## **9. Começar**

- Fixe os painéis na sua parede.
- Ligue os terminais nos cabos do lado direito do painel traseiro com a caixa de controlo nos terminais do lado esquerdo do painel traseiro.
- Os cabos podem ser enfiados dentro dos painéis.
- A caixa de controlo já está fixa no canto superior esquerdo no painel traseiro. Se pretender pode fixá-lo na parede.
- Ligue o cabo da fonte de alimentação na ligação do lado esquerdo da caixa de controlo.
- Ligue o cabo na fonte de alimentação.
- Ligue na tomada.
- Ligue usando o botão ON/OFF no topo da caixa de controlo.

## **10. Descrição Detalhada**

O Soft Play encontra a música com um Xilofone de grande escala com factor X! Vibrante, viciante, interactivo e soa tão bem quanto parece. O tamanho grande torna a música acessível, divertida e uma experiencia partilhada.

## **11. Segurança**

1. Supervisione sempre a utilização destes produtos.
2. Utilize apenas no interior.
3. É da sua responsabilidade garantir que este produto é instalado e usado de forma segura e apropriada.
4. Não permita que os cabos sejam puxados – mantenha-os fora do alcance.

## 12. Especificações Técnicas


Tamanho: Cada Bumpa: 30L x 15cmP  
Painel traseiro com 5cm de profundidade – largura: 240cm, profundidade 20cm

Fonte de alimentação:





## 13. Instalação

1. As bumpas são fornecidas já fixadas nos painéis.
2. Fixe os painéis na sua parede, tendo em consideração o seguinte:
  - Os painéis têm 5cm de espessura.
  - Os acessórios de fixação não estão incluídos pois estes dependem do tipo de construção da sua parede.
  - Os painéis traseiros são sólidos à volta do perímetro (a estrutura tem 5cm de espessura em cada borda exterior) mas a parte central não é sólida – tenha cuidado para não danificar os painéis traseiros pois estes contêm componentes elétricos.
  - O peso apropriado de todo o produto é de 50kg na versão de 115cm de altura e 60kg na versão com 145cm de altura – verifique se a sua parede é capaz de suportar este peso.
  - Verifique se não existem tubos, cabos ou fios na parede onde pretende furar.
  - Se estiver a utilizar este produto com colchões de chão, tenha em conta a profundidade da almofada de chão
  - Este produto necessita de uma tomada elétrica – verifique se os cabos na fonte de alimentação chegam à tomada.
  - Verifique se os cabos são seguros, que não é possível puxá-los e que não representam perigo.
  - Este produto só deve ser utilizado no interior, em ambientes secos.
  - Se instalar este produto com outras bumpas, estas serão mais profundas pois têm uma placa na parte de trás que as outras bumpas não têm.
  - As placas traseiras são ligeiramente mais altas do que o topo das bumpas para ter espaço para fixar as bumpas (2 ou 3mm aproximadamente).
  - São fornecidos suportes de espelhos suplentes.
  - O painel traseiro com a caixa de controlo deve ser deixado de lado.
3. Ligue os terminais nos cabos do lado direito do painel traseiro com a caixa de controlo nos terminais do lado esquerdo do painel traseiro. Observe as etiquetas em cada cabo. Todos os cabos com etiqueta A (e um número) ligam no cabo correspondente com a etiqueta A (e um número). O mesmo aplica-se aos cabos B. Por exemplo, ligue o A5 ao A5.

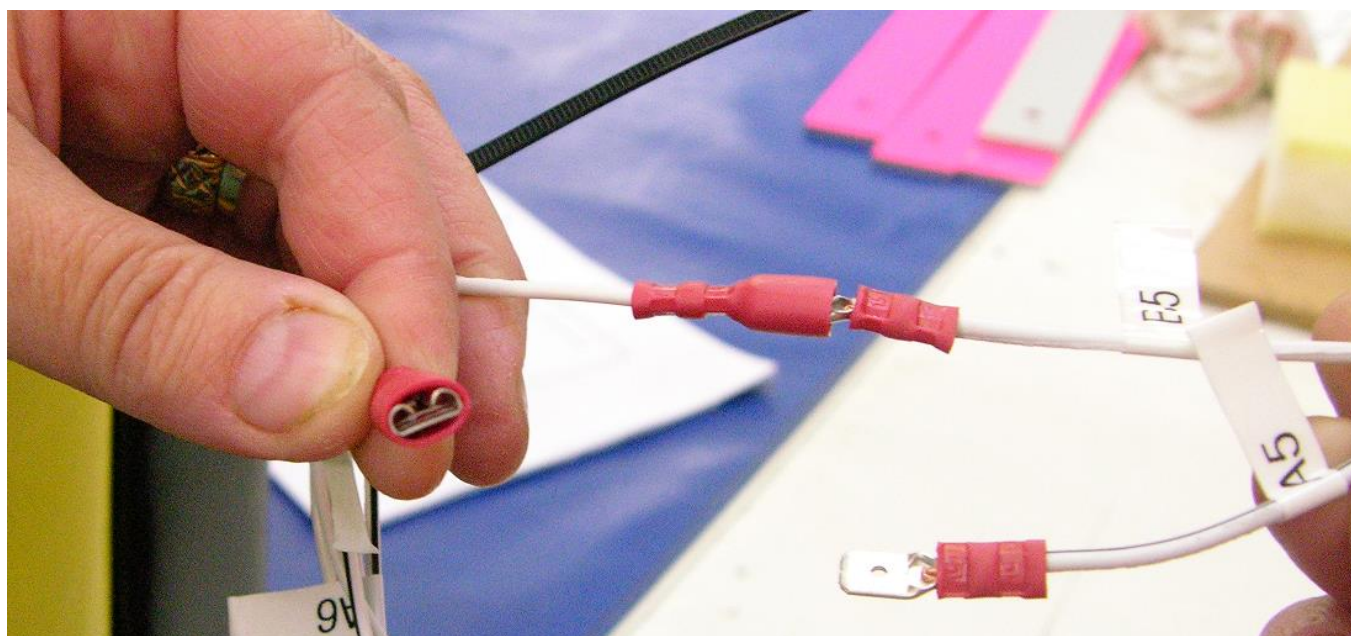

4. Repita com os cabos 6, 7 e 8. Todos os cabos A têm uma faixa preta; todos os cabos B são lisos de cor branca.
5. Os cabos devem estar bem encaixados. Antes de montar os painéis na parede, siga os passos abaixo para garantir que estão a funcionar corretamente.

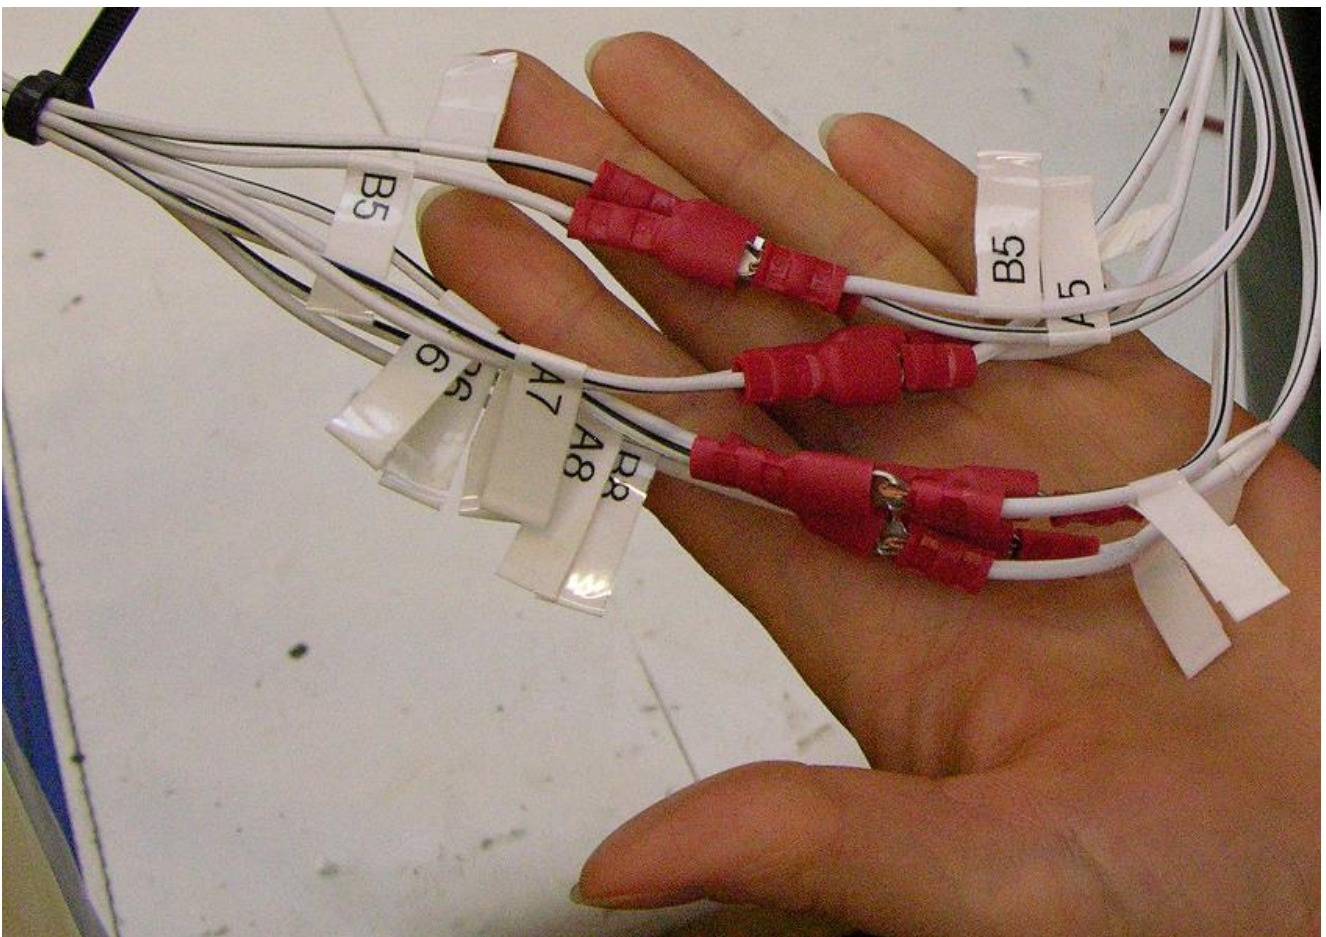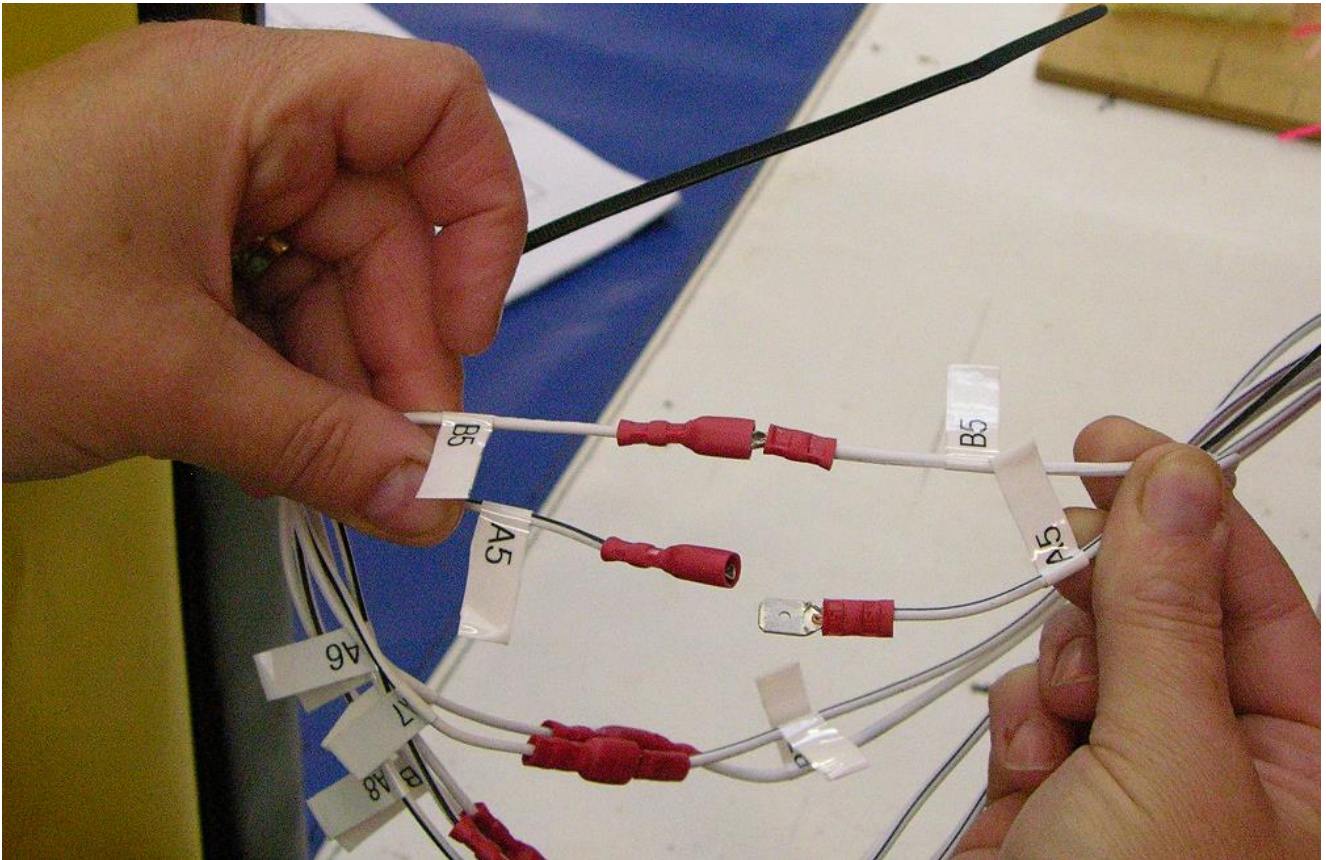

6. Quando tiver verificado que todas as conexões estão devidamente encaixadas, os cabos podem ser enfiados dentro dos painéis para garantir que estes não ficam presos ou furados durante a montagem na parede.
7. A caixa de controlo já está fixa no canto superior esquerdo no painel traseiro. Se pretender pode fixá-lo na parede, depois de ter montado o painel traseiro na parede. Existem três furos no lado esquerdo da caixa de controlo e outros três do lado direito (conforme imagem abaixo)).



8. Ligue o cabo da fonte de alimentação na ligação do lado esquerdo da caixa de controlo conforme ilustrado à direita. A outra ponta deste cabo é isolada.







9. Ligue o cabo na fonte de alimentação.



10. Ligue na tomada.

## FUNCIONAMENTO

1. Ligue na tomada.
2. Ligue usando o botão ON/OFF no topo da caixa de controlo. Quando a parte vermelha estiver visível, o produto está ligado.



3. Utilize o botão central para selecionar um dos seis modos:
  - a. Piano
  - b. Clarinete
  - c. Orgão elétrico
  - d. “Bolhas”
  - e. Buzina de carro
  - f. “Arranhar”

Cada vez que pressiona o botão central ativa a configuração seguinte. Quando este produto é ligado, o primeiro modo é “Piano”. Pressione uma vez o botão central para ativar o clarinete; se pressionar uma segunda vez, ativa o “Orgão elétrico”...Se

este produto for desligado, o último modo selecionado não é memorizado – este produto inicia automaticamente com o piano.

4. Pressione o círculo colorido numa Bumpa para ouvir o som. O funcionamento é momentâneo. Isto significa que se pressionar uma vez vai ativar um som por 2 ou 3 segundos. O produto não necessita que pressione o botão colorido para iniciar o som nem para parar pois o som para sozinho. A duração do som não pode ser controlada.
5. A bumpa mais à esquerda tem um tom baixo. Se se mover pelas bumpas, do lado esquerdo para o lado direito e pressionar cada bumpa sequencialmente, vai obter um tom mais alto.
6. Ajuste o volume conforme necessário usando o botão de ajuste no fundo.
7. Desligue da corrente depois de utilizar.

## **14. Cuidado e Manutenção**

1. Manuseie a caixa de controlo com o cuidado apropriado – é recomendado que a caixa de controlo seja regulada por um adulto responsável – as bumpas destinam-se a ser controladas pelos clientes invés destes controlarem a caixa de controlo.
2. Utilize no interior, em ambientes secos.
3. Supervisione sempre a utilização deste produto.

### **Tecido**

- Organize uma agenda de limpeza regular.
- O vinil vai rachar, rasgar e “desgastar” se for sujeito a objetos afiados ou se for continuamente roçado por objetos duros. Evite utilizar sapatos, fivelas ou objetos afiados/duros.
- Verifique regularmente as costuras para garantir que o enchimento não é acessível. Não tente abrir estes ou para acessar a parte interior deste produto.
- Limpe líquidos ou marcas acidentais imediatamente com um detergente macio e um pano húmido, evitando quantidades excessivas de água.
- Não comer ou beber ao usar este produto.
- Não lave com vapor.
- Não utilize produtos de limpeza com abrasivos ou à base de solventes.
- Não utilize detergente líquido da loiça. Não utilize produtos que contenham lixívia.
- Use e guarde longe de fontes de calor, fogo e luz solar direta.

### **Vinil**

- Use uma escova macia para remover toda a poeira / sujeira soltas.
- Limpe líquidos ou marcas acidentais imediatamente com um detergente macio e um pano húmido. Não utilize uma esponja abrasiva.
- Podem ser utilizados líquidos esterilizantes para mamadeiras.
- Limpe com um pano húmido, evitando quantidades excessivas de água.
- Não use água fervente / muito quente.
- Não lave com vapor.

## **15. Resolução de Problemas**

Na eventualidade de existir algum problema, por favor verifique:

- O volume – está no mínimo? Se estiver, aumente o volume.
- Fonte de alimentação – verifique se o cabo de alimentação está corretamente ligado na caixa de controlo.
- Verifique se o cabo de alimentação está bem ligado e se está ligado na tomada.
- Verifique se o botão ON/OFF está na posição ON.