BACK TO NATURE WALL DISPLAYS 20385, 20386
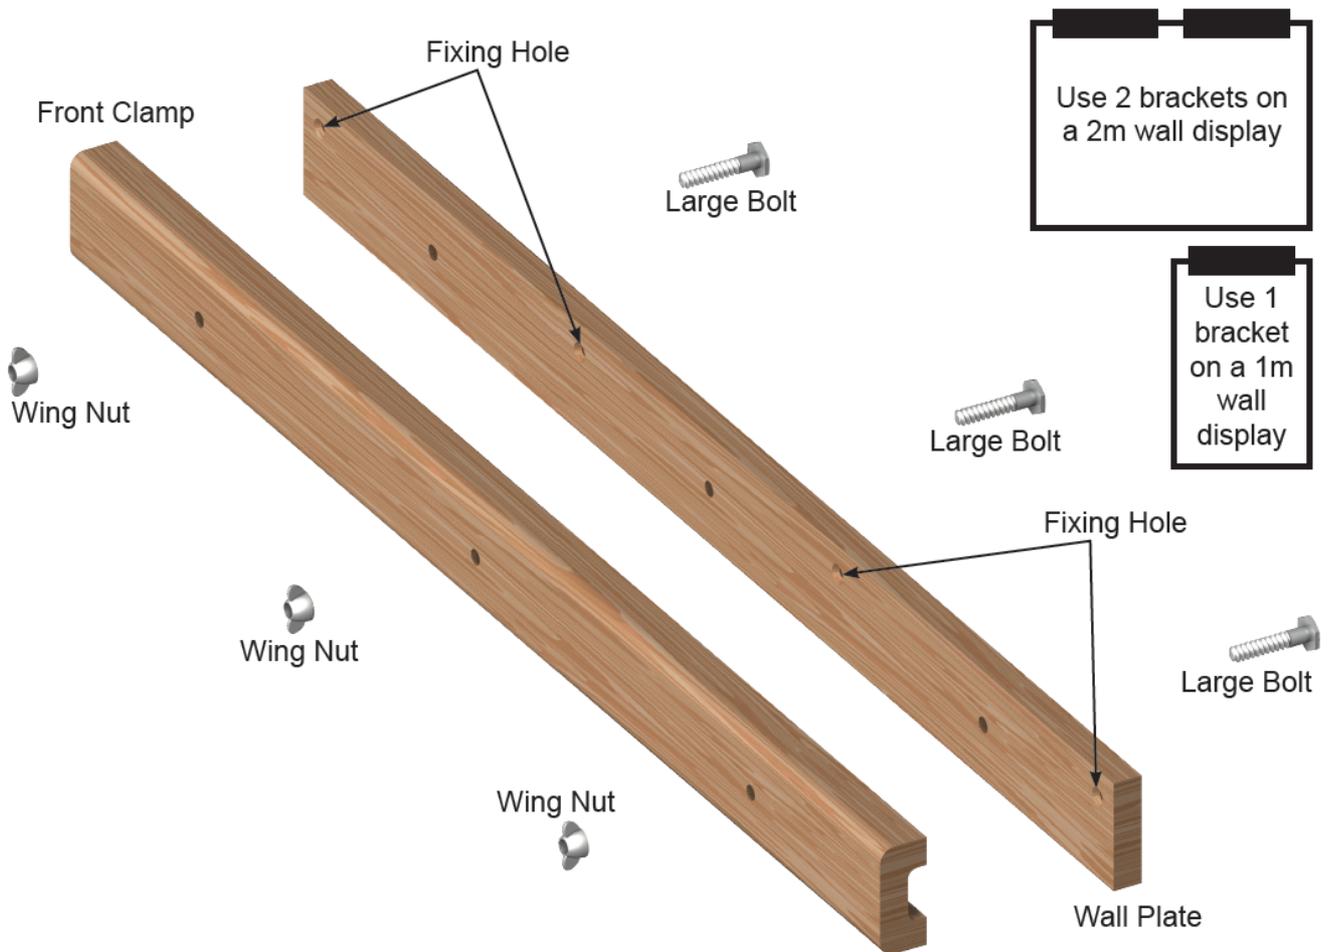
CONTENTS
1   x   display
5   x   soft creatures e.g. ladybird (may vary)
The 100W display includes 1 bracket: the 200W display includes 2 brackets
Fixtures (bolts and nuts)

BEFORE USE
1.   Find a suitable location for the Displays, bearing in mind the following:

- The Displays need to be reachable by the clients
- The Displays should not block air vents, heat sources, doors etc
- The brackets need to be drilled into the wall (make sure there are no cables, pipes etc behind where you intend to drill)
- The Displays should be attached to flat, sufficiently solid walls, capable of holding their weight and supporting their use (objects being pulled off etc)

2.   Attach the bracket(s) to the wall using appropriate fixings:
Attach to brick or block walls using heavy duty wall plugs or directly to vertical timbers on stud or lathe and plaster walls. If in doubt, seek advice from a suitably qualified professional.

3.   Insert the three large bolts into the back of the wall plate ensuring the bolt head enters the recessed hole and is flush-fitting.

4.   Using a spirit level, align the wall plate to the wall at the desired height and mark the four fixing holes as shown overleaf.

5.   Fix the brackets to the wall – drill the marked holes into the wall with the correct type of drill bit for your wall.

6.   Fix the wall plate using heavy duty wall plugs and the relevant heavy duty screws.

7.   Loosely fix the front clamp to the wall plate using the wing nuts. DO NOT OVER-TIGHTEN.

8.   Insert the wall display into the bottom gap of the brackets and tighten the wing nuts.

Front Clamp

Fixing Hole

Large Bolt

Use 2 brackets on a 2m wall display

Use 1 bracket on a 1m wall display

Wing Nut

Large Bolt

Wing Nut

Fixing Hole

Large Bolt

Wing Nut

Wall Plate

9.   Make sure the Displays are securely attached before use.

USE
1.   Attach the creatures supplied to the Displays.
2.   Create your own attachments and attach them using 'hook' Velcro.

SAFETY
1.   Always supervise the use of this product.
2.   Make sure this product is safely installed before use.

CARE AND MAINTENANCE
1.   Wipe clean with a clean and very slightly dampened soft cloth.
2.   Avoid harsh cleaning products.

SPECIFICATION
With a stain-resistant coating
Non-crease
Soft-texture loop nylon
Weight: 20385 = 5.7kg   20386 = 7.8kg
Meets requirements of EN71 Part 2 Flammability and EN71 Migration of certain elements

Further copies of these instructions can be downloaded at www.rompa.com

We hope you find our instructions invaluable. If you have any suggestions for improving them further your comments will be greatly received – please contact us at producthelp@rompa.com