

Included Parts


- 2 x Straight walls
- 1 x Curved wall
- 1 x PVC sheet for the base

Please note: Ball pool balls are not included, but can be purchased from www.rompa.com requires 3 boxes of 7.5cm balls (product code 14346).

Details

The products available in this range are:

18112	PVC Fabric
18118	Faux Suede Fabric
Size	145 x 145 x 72.5cmH
Wall Size	20cm thick
Weight	Approx. 110kg when empty

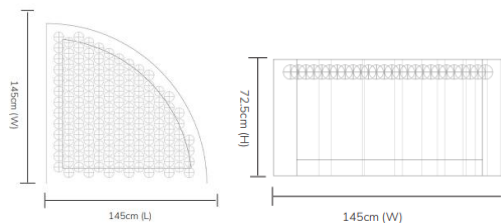**Description**

This strong, well-made ball pool offers tactile stimulation and support for the body. A safe and different place to relax in, without the distraction of vibration or lights.

Choose from a huge range of PVC colours for the exterior. The interior is white unless otherwise specified.

Care & Maintenance

- Organise a regular cleaning schedule.
- Check seams regularly to ensure that these are not worn or split and the interior filling cannot be accessed.
- Wipe off accidental marks/liquids at the time they occur or are noticed.
- Do not steam clean.
- Do not saturate the material with lots of water



Failure to follow correct maintenance practises may lead to permanent damage of your upholstered items.

PVC**Description**

Plasticised Polyvinyl chloride (PVC) polymer, direct coated onto both sides of a polyester substrate, with a subtly textured finish. Phthalate free.

Anti-fungal / Anti-bacterial

Contains an anti-fungal additive.

Cold crack

-15 °C.

Cleaning

Wipe down the fabric with a damp cloth to remove dust and dirt. Use mild soap if needed. For tougher stains, use a mixture of water and mild detergent. Avoid harsh chemicals as they can damage the fabric.

Drying

Always air dry PVC fabric. Avoid using heat sources like dryers or direct sunlight, as excessive heat can cause the fabric to warp or crack.

Regular Inspection

Check for any signs of wear and tear regularly. Address small issues promptly to prevent them from becoming bigger problems.

Protective Measures

Use protective covers if the fabric is exposed to harsh conditions or prolonged sunlight.

Faux Suede**Description**

Microfibre polyester base with a brushed suede effect. Phthalate free.

Anti-fungal / Anti-bacterial

Nano-silver antibacterial technology. Stops 99.9% of bacterial growth within 2-4 hours.

Cold crack

N / A

Cleaning

Brush the fabric gently with a soft-bristled brush to remove dust and dirt. For stains, use a damp cloth with a mild soap solution. Blot the stain gently rather than rubbing to avoid damaging the fabric.

Drying

Allow the fabric to air dry naturally. Avoid direct sunlight and heat sources like dryers, as they can cause the fabric to stiffen or fade.

Regular Inspection

Check for any signs of wear and tear regularly. Address small issues promptly to prevent them from becoming bigger problems.

Protective Measures

Use protective covers if the fabric is exposed to harsh conditions or prolonged sunlight.


Safety

- Always supervise the use of this product.
- For indoor use, in dry environments only.
- Do not allow access to the interior of the product.
- Do not place near sources of heat or fire that may damage the surface.

Installation

1. Install indoors in dry environments only.
2. Unpack carefully and dispose of the packaging responsibly.
3. Two people should assemble this product together as the components are heavy.

4. Choose a safe space, located away from obstacles and walkways that is flat and capable of holding the weight of the product as well as the individual(s) using it.
5. Position the PVC sheet in the required position in the room ready to build the walls around it. Make sure the Velcro® of the PVC sheet will match the Velcro® of the wall.
6. Place the two straight walls in the corner, ensuring that they make a 90° angle. This is important as failure to do this will probably sprain the joint. Insert the wooden tongue (B) of one wall into the slot (C) on the other, ensuring the wooden hooks fully engage.

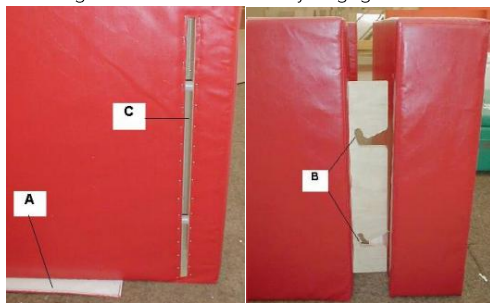

7. The tongued wall will rise as it is inserted and then drop level with the slotted wall when they fully engage. Keep the angle of the straight walls at a 90° angle.
8. The curved wall can now be attached to the two straight walls.
9. Pour in the balls.

**IMPORTANT**

Keep this equipment away from rain, moisture and liquids.