




Life Changing Sensory Solutions For All

snoezelen[®]

INSTRUCTION MANUAL

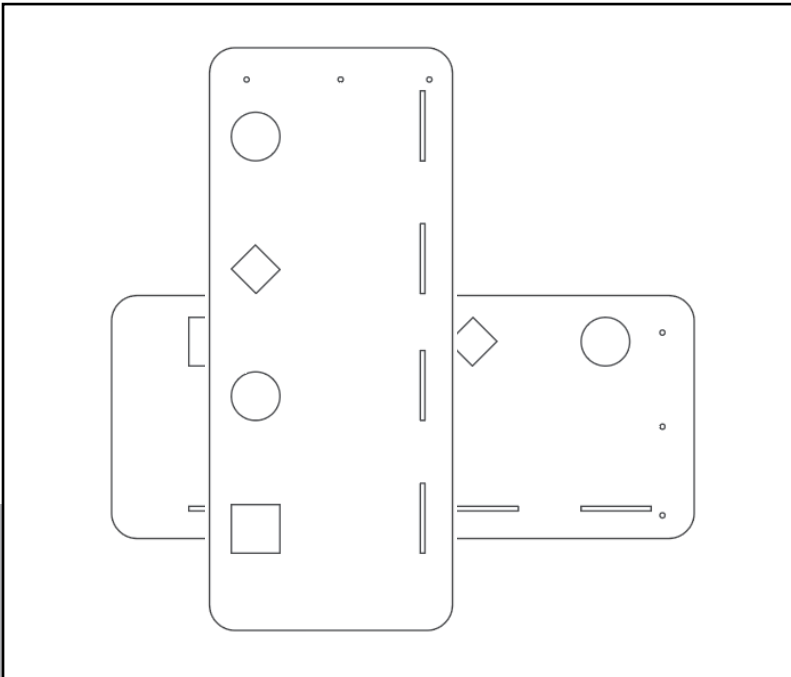

INTERACTIVE AROMA PANEL

20943

01.

CONTENTS

CONTENTS

ABOUT THE PRODUCT	4
Product Description.....	5
User Benefits	5
Product Compatibility	5
TECHNICAL SPECIFICATION	6
Included Parts.....	7
Technical Specification	7
SAFETY AND CARE.....	8
Product Safety and Care Instructions	9
ASSEMBLY & INSTALLATION GUIDE	10
Product Assembly Guide/Installation.....	11
Troubleshooting.....	11
USER GUIDE	12
User Guide.....	13
FEATURES	14
NOTES.....	16

02.

ABOUT THE PRODUCT

Product Description

Activate scents, colours, sounds, and breezes for aromatic, visual, auditory, and tactile stimulation. LED lights indicate which scent is being diffused. Includes four scents (more available separately). The integral fans feature two speed settings. Designed for wall mounting (horizontally or vertically). Available in frosted opal finish only.

User Benefits

- The aroma panel engages the visual sense with colourful touch-sensitive buttons,
- Audible stimulation through the button sounds when pressed.
- Engages an understanding of cause and effect through button presses that releases the aromas
- Helping the Recognition of actions leading to specific outcomes, aiding in problem-solving and learning.

Product Compatibility

The Interactive Aroma Panel is fully compatible with the following products:

- 20848 Sensory Magic® 2
- 23717 Sensory Magic®3 Compact
- 23725 Sensory Magic® 3 Compact Plus
- 21098 Sensory Magic® Portable
- 19847 Deluxe 8 Colour Wirefree Controller
- 21006 8 Colour Wirefree Switch
- 18870 Talking Cube
- 20402 Mini Talking Cube
- 24515 Colour Command Centre™
- 21918 WiFi Override Transmitter
- 21728 WiFi App Control Box
- 22867 Wireless Colour Controller Cushion Wall Mat

TECHNICAL SPECIFICATION


03.

Included Parts

- 1x Interactive aroma panel
- 1x Complimentary pack of sample aromas
- 1x Power supply (UK, EU, USA)
- 4x Aroma boxes (that house the aromas)

Technical Specification

- Weight: 12kg
- Dimensions: 60 x 25 x 10.5cm
- Power: 12v 60w (12v x 5A)

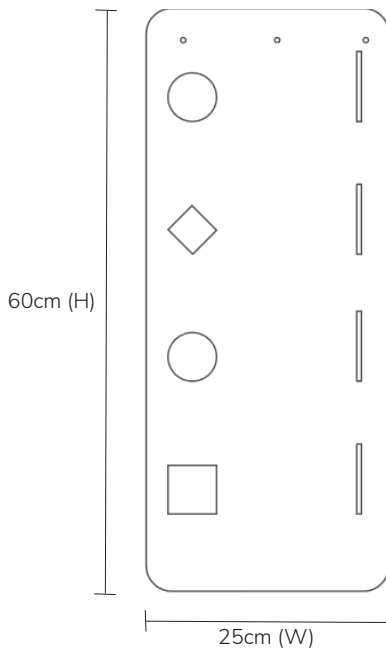

04.

SAFETY AND CARE

Product Safety and Care Instructions

Safety:

- Supervise the use of this product.

Care and Maintenance

- Wipe clean with a soft, very slightly dampened cloth.
- Do not use abrasive cleaning products or bleach.

ASSEMBLY & INSTALLATION GUIDE

05.

Product Assembly Guide/Installation

Installation

Wall-mounting Use the pre-drilled holes (one at each of the corners) to wall-mount the panel. No fixings are included in this product for wall-mounting. When fixing it to the wall please consult a suitably qualified professional builder or from an estates department to understand the construction of the wall the panel is to be fixed to, so that the correct fittings can be used.

Trouble Shooting

No power

- Ensure the mains is off before checking the power cable is fully inserted into the panel and then turn the mains back on.
- Check the power lead's fuse.

If troubleshooting does not solve the issue please contact Rompa® Customer Services: +44 (0)1246 211 777

06.

USER GUIDE

User Guide

Operation

1. Plug the panel into the mains.
2. Turn the panel on using the on/off switch on the left-hand side of the panel. The four shaped buttons will then light up in four different colours.
3. Press one of the four shaped buttons and be rewarded by sound, colour, breeze and aroma. A spraying sound is played as the aroma is blow out by the internal fan. When pressed, the button colour changes to green. The button stays green and the internal fan remains on for the duration of the button press: Press and hold the button for as long as desired.

The button will revert back to its original colour if not pressed.

Filling cartridges with aroma

1. Unlock the front of the Interactive Aroma Panel and unscrew the two black securing knobs to slide open the lid.
2. Remove the four aroma cartridges held by magnets.
3. Fill cartridges with scented beads, sachets, or oils. Use essential oils sparingly on pads/sponges, avoiding direct contact with plastic.
4. Refit the cartridge lid or bung/vent and place the cartridges back, aligning numbered magnets. Slide the lid back and retighten the knobs.

Wi-Fi Operation

The Interactive Aroma Panel may be used with other Rompa® compatible Wi Fi products: Simply press any Rompa® Wi Fi switch, and the Interactive Aroma Panel buttons will change to the colour selected. The Wi Fi colour will remain for one minute, unless another Wi Fi colour is chosen. The Interactive Aroma Panel buttons then revert back to their original colours.

Sensory Magic

The Interactive Aroma Panel is compatible with Sensory Magic® 3 and can be controlled from within the Sensory Magic® system.

FEATURES


07.

Volume Control

Power Rocker

Interactive Touch Buttons

Aroma vents

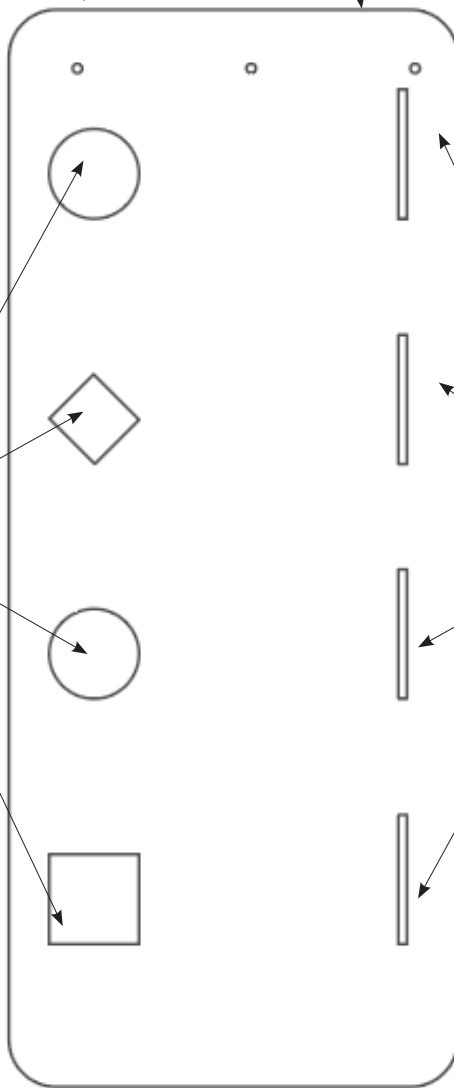

NOTES

08. □

snoezelen[®]



Life Changing Sensory Solutions For All

20943_310325

**Rompa[®] Limited, Goyt Side Road,
Chesterfield, S40 2PH**

customer.service@rompa.com

www.rompa.com