




Life Changing Sensory Solutions For All

snoezelen®

INSTRUCTION MANUAL

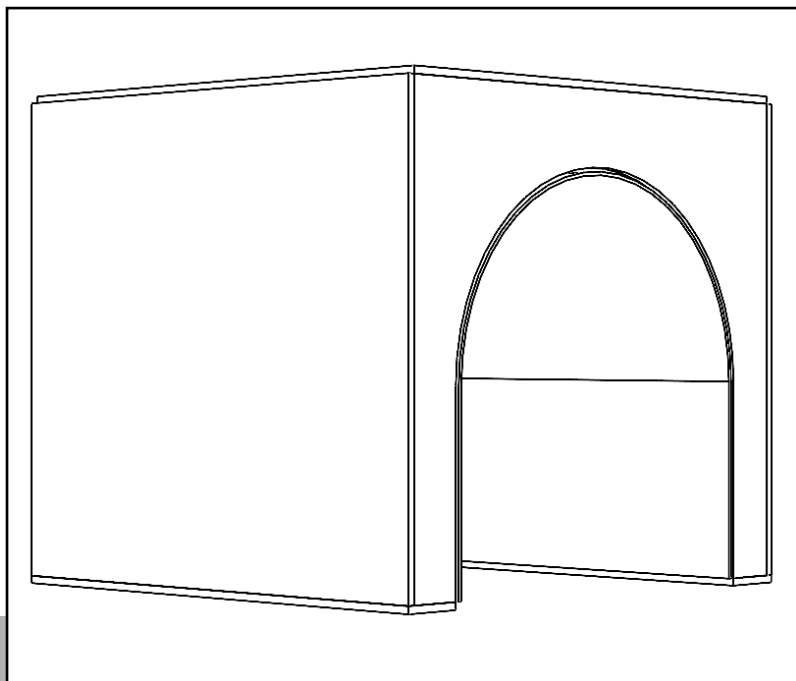

SPARKLING TUNNEL

19964

01.

CONTENTS

CONTENTS

ABOUT THE PRODUCT	4
Product Description.....	5
User Benefits	5
Product Compatibility	5
TECHNICAL SPECIFICATION	6
Included Parts.....	7
Technical Specification	7
SAFETY AND CARE.....	8
Product Safety and Care Instructions	9
ASSEMBLY & INSTALLATION GUIDE	10
Product Assembly Guide/Installation.....	11
NOTES.....	12

02.

ABOUT THE PRODUCT

Product Description

A captivating sensory experience featuring a central tunnel lined with a black fibre optic carpet that offers extensive visual and tactile appeal. The Sparkling Tunnel includes a soft 50mm thick mat for comfortable lying and crawling, making it ideal for sensory play. Included is the LED light source with infinite amounts of colours. When ordering this product you can select from a wide variety of vinyl colours to suit your desired sensory space. Also key to note that this product can be turned on and off with the switch that is included.

User Benefits

.Stimulates sight: Engages visual senses through captivating fibre optic lights.

.Provides an enclosed space: Offers a secure and calming environment for the user.

Encourages movement: Promotes physical activity through crawling and exploring the tunnel..

Product Compatibility

Our sparkling tunnel is designed for sensory integration and is compatible with various items to further enhance your sensory experience.

- **Sensory Magic (20848)**
- **8 colour wirefree switch (21006)**
- **Talking cubes (18870 and 20402)**
- **Rompa mobile app (21728)**

TECHNICAL SPECIFICATION

03.

Included Parts

Light Source:

Size: 20.5 x 11.5 x 9 cm

Weight: 51Kg

Input: 100-240V AC, 50/60Hz, 0.25A

Output: 12V DC, 1.25A, 15W Max

Certification: BS EN 9001-2000

Tunnel:

Material: Phthalate-free vinyl

Carpet:

BS4790 compliant


80% Wool, 20% Nylon

Wood

Foam

Technical Specification

Weight: 51 kg

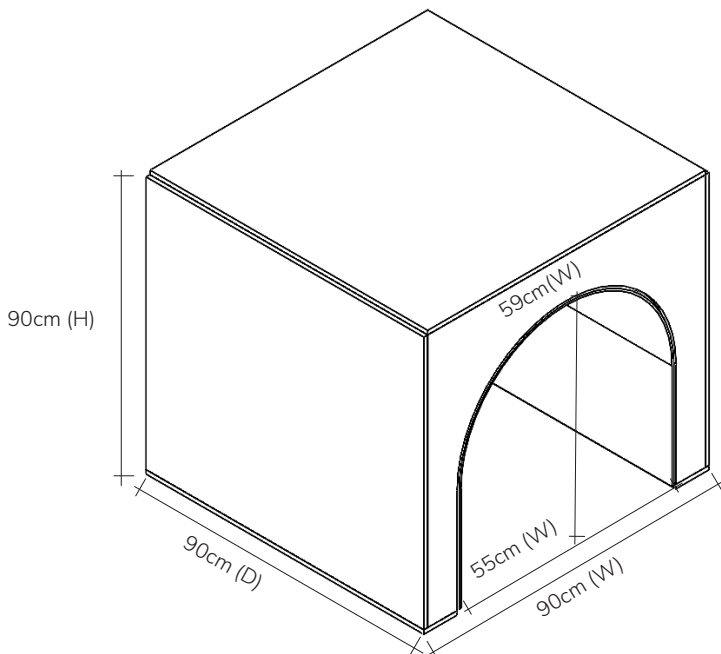

04.

SAFETY AND CARE

Product Safety and Care Instructions

Always supervise the use of this product.

Care Instructions:

Vinyl Care: Vinyl may crack, tear, or experience wear if exposed to sharp objects or continual rubbing by hard items. Avoid shoes, buckles, or any sharp/hard objects to preserve the material.
Regular Cleaning: Establish a regular cleaning schedule.

Vinyl Cleaning:

Remove accidental marks or liquids from the vinyl using a mild detergent and a damp cloth. Avoid using excessive water. Do not use abrasive cleaners or solvent-based products such as trichloroethene or carbon tetrachloride. Liquid detergents used for dishwashing (e.g. Dirt Lift 14800) are suitable. Do not steam clean.

Cable Handling:

Avoid pulling or placing tension on the light source cables.

Carpet Maintenance:

Vacuum the carpet as needed and use a minimal amount of a very mild carpet-cleaning product when necessary.

Floor Mat Removal:


The floor mat is held in place by Velcro and secured to the bottom of the Tunnel. To remove the mat, the Tunnel must be lifted.

ASSEMBLY & INSTALLATION GUIDE

05.

Product Assembly Guide/Installation

1. Choose a suitable location for the lightsource, whilst it does not get hot it should not be placed in an unsafe location, make sure it is not a trip hazard.
2. Connect the lightsource to the sparkling tunnel.
3. Plug in the light source and switch on at wall.
4. Connect the switch to the jack socket (near to the tunnel at floor level) and press as required to activate the carpet inside the tunnel.
5. Follow instructions supplied with the lightsource should you wish to program it.
6. Make sure users have removed their shoes.

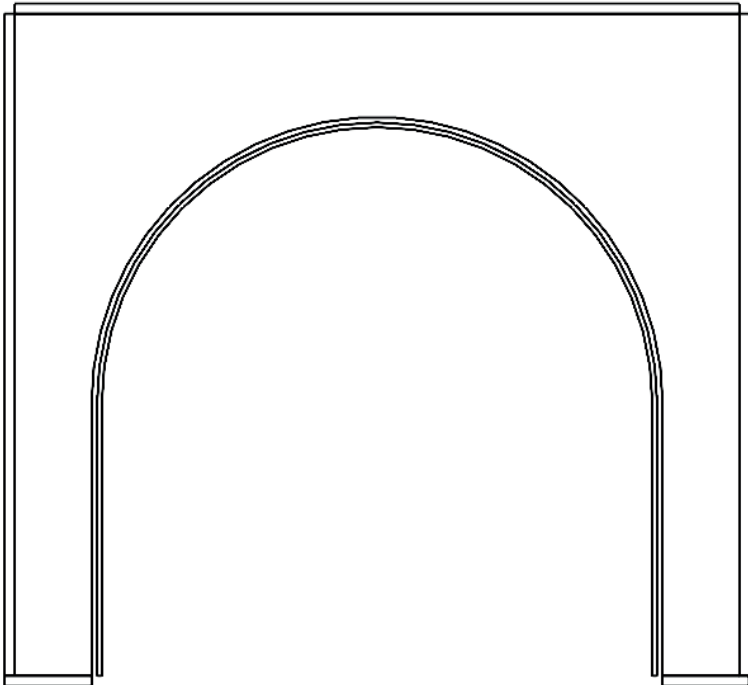

NOTES

06.

snoezelen[®]



Life Changing Sensory Solutions For All

**Rompa[®] Limited, Goyt Side Road,
Chesterfield, S40 2PH**

customer.service@rompa.com

www.rompa.com

19964_200225